Williams-Sonoma Inc.

Pottery Barn - Pottery Barn Teen - Pottery Barn Kids - Williams Sonoma Home - West Elm - Rejuvenation - Mark and Graham

19-June-2021 1/2

Mackenzie Headphone

User Manual

Please read this manual carefully before operating the device and save it for further reference.

Included

1.Mackenzie Headphone

2.USB charging cable

3. Audio cable

4. Manual

Button Function:

Function	Operation
Charging port	Insert the micro USB end of the charging cable into this port and connect the USB end to power supply to
	charge the battery.
Audio cable output port	Insert the audio cable into this port to play music through a non-Bluetooth device.
Indicator light	Blue or red light indicates operation status.(See "Indicator Light Function" below for more details.)
o Mic	This is the sound receiver when answering a call.
1.Power on/off	Long press to turn the power on and off.
2.Play/Pause/Answer	Quick press to Play/Pause.If there is an incoming call on the connected device, quick press to answer and
call/hang up call.	press again to hang up.
(*) 1.Volume	Long press to adjust volume.
_ 2.Last song/Next song	Short press for last song or next song.

Indicator Light Function:

Function	Indicator light
Power on	Blue light
Power off	Red light flashes
Device has been turned on and is searching.	Blue and red light flashes alternately.
Connection Success	Blue light
Low battery	Red light flashes
Charge Mode	Red light turns on while charging, and off when charging is completed.

Charging Function:

- 1.It contains a built-in rechargeable battery. Before the first use, please fully charge the headphone to ensure optimal performance and battery life.
- 2. Connect the charging cable to any powered USB port. Make sure it is fully plugged in.

NOTE: Operating the headphone while charging may affect the battery life.

Bluetooth Pairing:

- 1. Turn on the Bluetooth function on the device that you wish to pair (i.e. smartphone or other compatible device). Some devices may require selecting "Search for Devices" or "Add New Device" in order to create a Bluetooth pairing. If so, initiate a manual search.
- 2.Select "PBK Headphones" once it appears on your device screen. Once a connection is established and the pairing is complete, the indicator light will turn blue.
- * The headphone must be paired with a Bluetooth output device before it can operate.
- * It is advised to turn the volume on your device all the way down before connecting, then gradually increase the volume until a comfortable listening level is reached.
- * If the headphone does not pair with any device after 3 minutes, it will turn off automatically to save power.

© 2021 Williams-Sonoma, Inc.

Williams-Sonoma Inc.

Pottery Barn - Pottery Barn Teen - Pottery Barn Kids - Williams Sonoma Home - West Elm - Rejuvenation - Mark and Graham

19-June-2021 2/2

Safety and Care:

- When the headphone is not in use, turn it off and store in a cool and dry place. Battery performance will be severely decreased if stored in extreme temperatures, including in direct sunlight.
- Clean with a soft and dry (or slightly damp) cloth. Avoid any liquid leaking into the seams of the device. Never use any kind of chemical cleaner.
- Do not attempt to repair or disassemble any part to avoid permanent damage.
- Do not place on any wet surface. Do not use near water.
- If the device does come in contact with any liquids, wipe away as quick as possible. If submerged in water, do not turn the device on until 100% dry.
- Do not drop the headphone on any hard surface. This may damage the product.
- Press the function buttons gently. Pressing hard could shorten the lifetime of the buttons.
- Do not place the speaker near a TV, speakers, wireless telephones or other objects that generate strong magnetic fields.
- Do not use around flammable gases, as fire or explosion may occur.
- Do not block any ventilation openings.
- Do not operate near any heat sources such as radiators, heat registers, stoves or other apparatuses (including amplifiers) that produce heat.
- Protect the power cord from being walked on or pinched, particularly near the plug and the point where the cord exits from the headphone.
- Use only the attachments/accessories that come with this device.
- Refer all servicing to qualified service personnel. Servicing is required when the device has been damaged in any way, including when the power-supply cord or plug has been damaged, objects have fallen onto the device, the device has been exposed to rain or moisture, or the device has been dropped or does not operate normally.

FCC Statements:

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

NOTE:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution:Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the use's authority to oper ate the equipment.

The device has been evaluated to meet general RF exposure requirement. The devicecan be used in portable exposure condition without restriction.

Thank you for your purchase!

stores | catalog | www.potterybarnkids.com 1.800.290.8181

© 2021 Williams-Sonoma, Inc.