


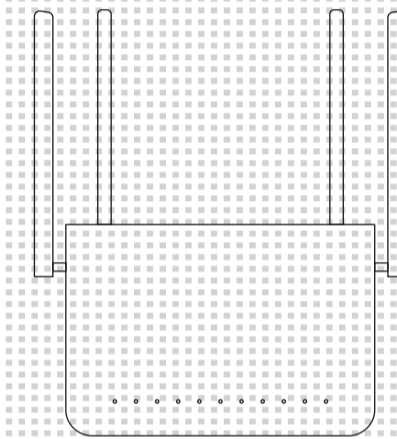
4折页  
 WR1200说明书风琴折  
 尺寸: 89X119mm  
 材质: 105g金太阳双胶  
 印刷颜色: CMYK四色印刷

正面 →

**封面**




**User Manual**



**WR1200**  
AC1200 Dual Band Wi-Fi Router

**How to use your AC1200 Dual Band Wi-Fi Router**

Scan the QR code below or search "Victure IPC" on YouTube to view more function.



**Customer service**

Any questions or problems, please feel free to contact us.

net.support@govicture.com

Victure


Victure IPC

**Warranty**

Send us your Order Screenshot via email [net.support@govicture.com](mailto:net.support@govicture.com) to extend the warranty to **12 months**. Lifetime professional tech support is provided by Victure.

**Package Contents**

- WR1200x1
- Ethernet Cablex1
- Power Adapterx1
- User Manualx1

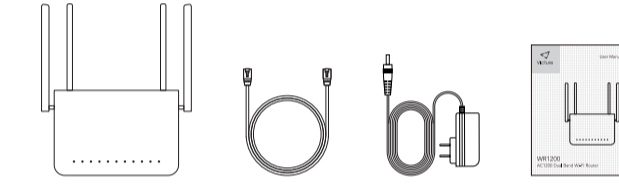

**FCC Warning**

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**NOTE:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

**Radiation Exposure Statement**


This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator and your body.

Made in China  
Version 1.0

**封底**

背面 →


**Product Diagram**

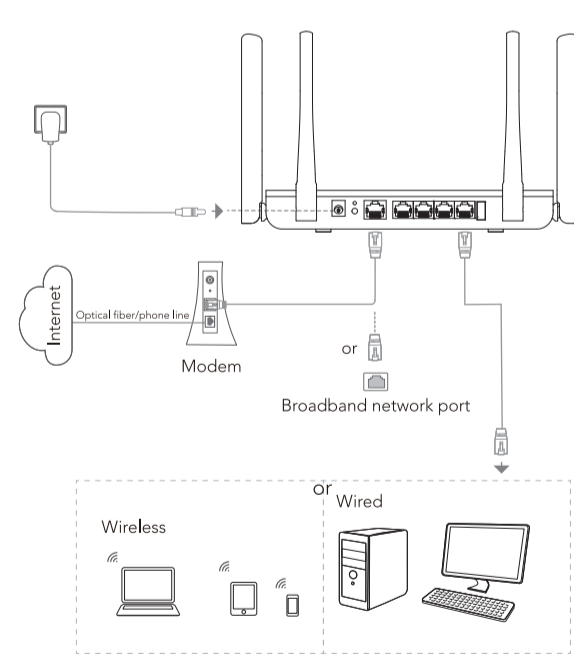

**Router Setting**

Method 1: PC web setting

- Plug in, connect a LAN port of your modem or the Broadband network port to the WAN port of WR1200 with the Ethernet cable, until the 2.4GHz and 5GHz lights on.  
Default Wi-Fi 2.4G SSID: Victure-XXXX  
Default Wi-Fi 5G SSID: Victure-XXXX-5G  
Default Wi-Fi Password: XXXXXXXX
- Open the Wi-Fi list in the lower right corner of the computer desktop, (picture 1) Connect Victure-XXXX or Victure-XXXX-5G first. (The default SSID and password are on the back of the router.)




(picture 1)

- Visit [myblink.cn](http://myblink.cn) or [192.168.16.1](http://192.168.16.1) via PC web, type **Default Username/Password: admin/admin**. (The default account and password are on the back of the router.)
- Select your WLAN connection mode according to setting instructions. For example: **Dynamic IP, PPPOE**.

- Set 2.4G, 5G Wi-Fi name (SSID) and password. (SSID and password is 8-32 digits, supports numbers, letters and only ! @ # \$ % ^ & \* ( ) \_ . .) After clicking save, please wait for one minute according to the screen prompts, then reconnect to the Wi-Fi to get online.

Method 2: Phone setting

- Plug in, connect a LAN port of your modem or the Broadband network port to the WAN port of WR1200 with the Ethernet cable, until the 2.4GHz and 5GHz lights on.
- Open Wi-Fi list in phone settings (picture 2, Connect Victure-XXXX or Victure-XXXX-5G first. (The default SSID and password are on the back of the router.)



(picture 2)

- Visit [myblink.cn](http://myblink.cn) or [192.168.16.1](http://192.168.16.1) via Mobile browser, type **Default Username/Password: admin/admin**. (The default account and password are on the back of the router.)
- Select your WAN connection mode. For example: **Dynamic IP, PPPOE**.
- Set 2.4G, 5G Wi-Fi name (SSID) and password. (SSID and password supports numbers, letters and only ! @ # \$ % ^ & \* ( ) \_ . .) After clicking save, please wait for one minute according to the screen prompts, then reconnect to the Wi-Fi to get online.

**Troubleshooting**

Q: How to restore the router to factory setting?

A: Press the Reset button Press the reset button for about 5-8 seconds and release, when the 2.4GHz and 5GHz lights go out, it means the reset is successful.

Q: What if I want to change the default Wi-Fi name (SSID) and password?

A: Log in to the setting page, click Wi-Fi settings, then modify the Wi-Fi name (SSID) and password, and click save.

Q: How to setup the router by cable?

A: 1. Plug in and connect a LAN port of your modem or the Broadband network port to the WAN port of WR1200 with the Ethernet cable, until the 2.4GHz and 5GHz lights on.  
2. Use the Ethernet Cable in the package, plug one end into the LAN port of the router and one end into the network port of the computer.  
3. Refer to PC Web setting step 2-5.