


100\*142mm

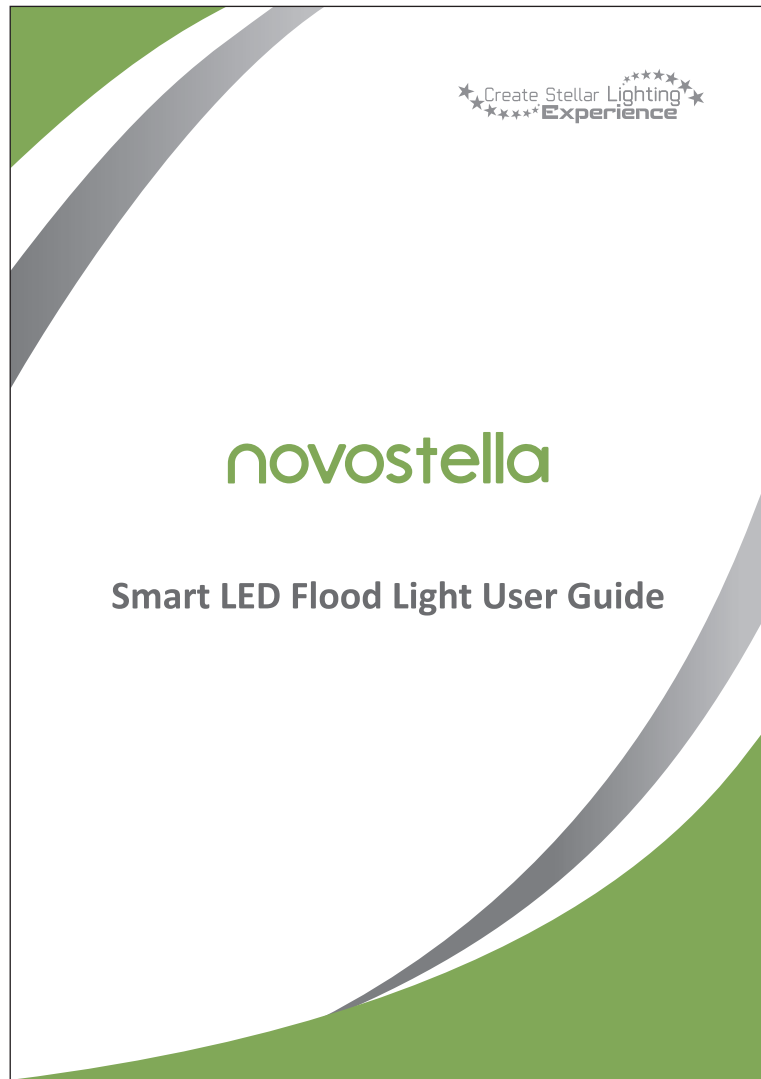

English

Create Stellar Lighting  
Experience

Smart LED Flood Light User Guide

THANK YOU for choosing Novostella. Before using this smart light, please take a mintue to know how it works.

The smart light can work with both Amazon Alexa and Google Assistant. But the light after being installed will need to be paired with an app called 'Smart Life' first, and then the Smart Life app will need to be bound with either Amazon Alexa or Google Assistant to activate the voice control function.

Therefore, this user guide is consists of four parts. Part one and two are fundamental set-up, while part three and four are alternatives. If you use Amazon Alexa for voice control, please follow instructions on part one, two and three. If you use Google Assistant for voice control, please skip part three, follow the instructions on part one, two and four. Part five is for general troubleshooting.

Part One - How to install the light ? 1 - 5

Warning

(1) Please check if the light and the parts are intact before installation.

(2) Make sure to cut off power before installation.

(3) Please do not place this light in corrosive conditions.

(4) If there is any damage to the cord, please cut off the power and stop using it immediately.

(5) Please do not retrofit the light within the warranty period.

(6) To ensure the light works properly, please use the voltage indicated on the packing.

1

English

Create Stellar Lighting  
Experience

1. Parameters

SKU	NTF96-RGBCW
Model Number	NTF96
Wattage	20W
Color	RGB, Warm White, Cool White
Color Temperature	2700K-6500K, RGB
Frequency	50/60Hz
Waterproof Rating	IP66
Input Voltage	120V±10% AC
Beam Angle	120°
Working Temperature	-25°C-40°C

2. Com onents

NTF36-RGBCW (1.5m / 4.92ft)

Note: Cord - type Y attachment.

For type Y attachment: If the external flexible cable or cord of this luminaire is damaged, it shall be exclusively replaced by the manufacturer or his service agent or a similar qualified person in order to avoid a hazard.

2

English

Create Stellar Lighting  
Experience

3. Dimension

NTF96-RGBCW  
Weight: 1.4lb/0.62kg  
Max Projected Area: 20m²

4. Installation

3

English

Create Stellar Lighting  
Experience

Step A : According to the spacing of two screw bits on the bracket, drill two holes on the mounting panel.

Note: Maximum mounting height is over 5m.

Step B: Aim the bracket at the holes and fix it with two bolts.

Step C: Adjust the lighting direction up or down as per your need and plug in to power the light on.

4

English

Create Stellar Lighting  
Experience

Note:

01 Make sure that the distance between the light and the object being lit is more than 1 meter, so as to avoid high temperature caused by short distance.

The light source of this luminaire is not replaceable.

Limitation of Indoor and Outdoor Use

(1) This light is waterproof and dampproof. It is protected against the rain, but it cannot be immersed in water.

(2) The mounting position of this light should be able to bear at least 10 times as heavy as the light.

(3) This light should be used in condition that is good for heat dissipation. Its working temperature should be less than 45°C. Too high the working temperature will cause serious lumen depression and affect lifespan of the light.

5

English

Create Stellar Lighting  
Experience

FCC Statement:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment.

This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

6