



<table border="1"> <tr><td>Connection Technology</td><td>USB/Bluetooth/AUX</td></tr> <tr><td>Bluetooth Version</td><td>5.0</td></tr> <tr><td>Bluetooth Distance</td><td>Φ10M</td></tr> <tr><td>Universal Compatibility</td><td>Android, Windows, IOS, Mac, Linux</td></tr> <tr><td>Type of Battery</td><td>Li-ion 18650</td></tr> <tr><td>Charge Specification</td><td>5V/2A</td></tr> <tr><td>Battery Specification</td><td>3.7V/ 2600mAh</td></tr> <tr><td>Charge Time</td><td>2.5h</td></tr> <tr><td>Usage Time</td><td>8-12h</td></tr> <tr><td>Size</td><td>131*131*41mm</td></tr> <tr><td>Weight</td><td>285g</td></tr> </table> <p><b>7. FAQ</b></p> <table border="1"> <tr><th>Problem or Phenomenon</th><th>Possible Causes</th><th>Method</th></tr> <tr><td>Startup Failure</td><td>Low or no battery</td><td>Access adapter to charge</td></tr> </table>	Connection Technology	USB/Bluetooth/AUX	Bluetooth Version	5.0	Bluetooth Distance	Φ10M	Universal Compatibility	Android, Windows, IOS, Mac, Linux	Type of Battery	Li-ion 18650	Charge Specification	5V/2A	Battery Specification	3.7V/ 2600mAh	Charge Time	2.5h	Usage Time	8-12h	Size	131*131*41mm	Weight	285g	Problem or Phenomenon	Possible Causes	Method	Startup Failure	Low or no battery	Access adapter to charge	<table border="1"> <tr><td>Automatic shutdown soon after starting up</td><td>Low battery</td><td>Access adapter to charge</td></tr> <tr><td>No Sound</td><td>1. Incorrect connection 2. The correct audio input is not selected 3. Volume is not turned on</td><td>Select the correct audio input, adjust the device volume</td></tr> <tr><td>Can't talk using USB</td><td>USB error</td><td>Please use the original USB cable</td></tr> <tr><td>Plug in the USB cable and the volume indicator light will not turn on</td><td>The device does not read the sound card</td><td>Lights up when you open the computer player or enter a voice call</td></tr> <tr><td>Can't talk using AUX</td><td>AUX error</td><td>Please use the original AUX cable</td></tr> <tr><td>Device cannot be charged</td><td>The charging device is faulty or the battery is not fully charged</td><td>Please use a functioning charging device</td></tr> <tr><td>When connected to Bluetooth mode, use USB cable to connect the device, but display Bluetooth mode blue light</td><td>Bluetooth connection not disconnected</td><td>Short press the "c" to switch to USB mode, and short press the button again back to Bluetooth mode immediately.</td></tr> </table>	Automatic shutdown soon after starting up	Low battery	Access adapter to charge	No Sound	1. Incorrect connection 2. The correct audio input is not selected 3. Volume is not turned on	Select the correct audio input, adjust the device volume	Can't talk using USB	USB error	Please use the original USB cable	Plug in the USB cable and the volume indicator light will not turn on	The device does not read the sound card	Lights up when you open the computer player or enter a voice call	Can't talk using AUX	AUX error	Please use the original AUX cable	Device cannot be charged	The charging device is faulty or the battery is not fully charged	Please use a functioning charging device	When connected to Bluetooth mode, use USB cable to connect the device, but display Bluetooth mode blue light	Bluetooth connection not disconnected	Short press the "c" to switch to USB mode, and short press the button again back to Bluetooth mode immediately.	<p><b>8. Questions and answers:</b></p> <p>Q: Will it pair with two Bluetooth devices (computer and a phone) at the same time? A: To avoid the interruption from other devices while making a call, the device does not enable the functionality of connecting two or more devices at the same time.</p> <p>Q: Can this be used just for music and the occasional call? A: Yes, the Speakerphone can be used as a speaker. But as its definition is a conference speaker, we don't recommend you use this product this way.</p> <p>Q: Is this a full duplex (e.g. both parties can speak at the same time) speakerphone? A: Yes, it is a full duplex speakerphone.</p> <p>Q: Does this work with IPADS? A: Yes, it can work with IPAD.</p> <p>Q: Does this control the Zoom mute function (specifically Zoom)? A: Currently, the mute functionality cannot synchronize with Zoom.</p>	<p>This Warranty does not cover defects or damages that result from: (a) improper storage, misuse or abuse, accident or neglect, such as physical damage (cracks, scratches, etc.) to the surface of the product resulting from misuse; (b) contact with liquid, water, rain, extreme humidity or heavy perspiration, sand, dirt or the like, extreme heat, or food; (c) use of the product or accessories for commercial purposes or subjecting the product or accessories to abnormal usage or conditions; or (d) other acts which are not the fault of Moertek. This Warranty does not cover damage due to improper operation, maintenance or installation, or attempted repair by anyone other than Moertek or a Moertek dealer which is authorized to do Moertek warranty work. Any unauthorized repairs will void this Warranty. This Warranty does not cover defects or damages that result from the use of non-Moertek branded or certified products, accessories, or other peripheral equipment, nor does this Warranty apply to products which have not been charged for six (6) months. If the battery in a product has not been charged for a period of six (6) months, the product might not function or regain its full potential and long-term performance. Moertek does not offer any warranty for such performance.</p> <p><b>FCC WARNING</b></p> <p>This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.</p> <p>Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.</p> <p>NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.</p> <p>If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:</p> <ul style="list-style-type: none"> <li>-- Reorient or relocate the receiving antenna.</li> <li>-- Increase the separation between the equipment and receiver.</li> <li>-- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.</li> <li>-- Consult the dealer or an experienced radio/TV technician for help.</li> </ul> <p>To maintain compliance with FCC's RF Exposure guidelines, this equipment should be installed and operated with minimum distance between 20cm the radiator your body. Use only the supplied antenna.</p>	<p>CE  FCC  RoHS  Bluetooth </p> <p>website: <a href="http://www.moertek.com">www.moertek.com</a> Email: <a href="mailto:moertek-official@moertek.com">moertek-official@moertek.com</a></p>
Connection Technology	USB/Bluetooth/AUX																																																				
Bluetooth Version	5.0																																																				
Bluetooth Distance	Φ10M																																																				
Universal Compatibility	Android, Windows, IOS, Mac, Linux																																																				
Type of Battery	Li-ion 18650																																																				
Charge Specification	5V/2A																																																				
Battery Specification	3.7V/ 2600mAh																																																				
Charge Time	2.5h																																																				
Usage Time	8-12h																																																				
Size	131*131*41mm																																																				
Weight	285g																																																				
Problem or Phenomenon	Possible Causes	Method																																																			
Startup Failure	Low or no battery	Access adapter to charge																																																			
Automatic shutdown soon after starting up	Low battery	Access adapter to charge																																																			
No Sound	1. Incorrect connection 2. The correct audio input is not selected 3. Volume is not turned on	Select the correct audio input, adjust the device volume																																																			
Can't talk using USB	USB error	Please use the original USB cable																																																			
Plug in the USB cable and the volume indicator light will not turn on	The device does not read the sound card	Lights up when you open the computer player or enter a voice call																																																			
Can't talk using AUX	AUX error	Please use the original AUX cable																																																			
Device cannot be charged	The charging device is faulty or the battery is not fully charged	Please use a functioning charging device																																																			
When connected to Bluetooth mode, use USB cable to connect the device, but display Bluetooth mode blue light	Bluetooth connection not disconnected	Short press the "c" to switch to USB mode, and short press the button again back to Bluetooth mode immediately.																																																			
7	8	9	10	11	12																																																

SIZE: 480X80mm, 128g铜板纸, 黑白印刷, 双面印, 风琴折页, 成品尺寸80x80mm