
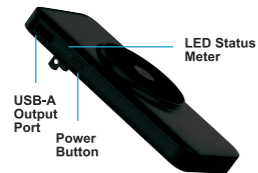
 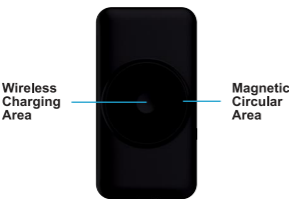


MAGNETIC WIRELESS ALL-IN-ONE CHARGER

MagSafe & Qi Wireless Compatible

User's Manual



The Charger is an All-In-One portable charger featuring Magnetic Wireless Charging, 10,000 mAh battery pack, AC Wall Charger, USB-C and USB-A output ports. Use it to charge your MagSafe & Qi Compatible iPhone, Smartphone and devices with Qi Wireless. Also, charge virtually any device with by USB-C & USB-A cable. The charger features a compact, iPhone form fitting design that allows you to magnetically attach your iPhone while powering up. Simply snap the battery pack on to the back of your iPhone for convenient wireless charging anytime. The integrated magnets keep it securely attached to your iPhone while charging. When finished, simply remove the charger or keep it attached for convenient charging at a later time.

Charging your iPhone with Magnetic Wireless
To charge your MagSafe compatible iPhone wirelessly, first position the charger with its magnetic circular attachment side facing the back side of your iPhone. Place the Elite Mag in the back central area of the iPhone below the camera. Once placed properly, the magnets will connect and align themselves onto the back of your iPhone to hold it securely in place. To start charging, simply press the power button on the side of the JourneyMag. The status LEDs will light up to show the remaining charge and your iPhone should now indicate that it is charging. To turn off charging press the power button quickly twice or simply remove the charger from your iPhone. To remove the charger from your iPhone easily, slide it off by pushing gently on the side of the unit. If your iPhone is using a protective case, be sure the case is compatible with MagSafe. The charger may not properly attach to your iPhone if you are using a phone case that is not compatible.

Charging your Devices by USB Cable
The charger works with most Smartphones, Headphones, and Devices that charge by USB. To charge your device use its original USB charging cable or one that your device is fully compatible with. Connect the USB-C or USB-A tip end of the cable to charger USB-C or USB-A output port. Then connect the Device's charging tip end to your device. Once the cable is properly connected, press the power button on the charger to activate. Your device should now indicate that it's charging. To remove, gently disconnect it from your device. To ensure compatibility with the charger, please check your Smartphone or Device product specifications.



2. Press the Power Button to Begin Charging



Charging the Battery
Charge by AC Wall Outlet: To charge the JourneyMag by AC outlet, fold out the AC Wall prongs located on the back of the device until they are fully open. Now connect the AC prongs to a compatible, standard US AC wall outlet to recharge. The 4 LED status lights will display the charging progress in 25% increments. Once all 4 status lights are all lit solid with no flashing, the internal battery charge is fully complete. When finished, disconnect from the outlet and fold the AC prongs back into the Journey for storage.



LED Status Meter
The LED status meter has 4 White LEDs that will display the remaining internal battery charge in 25% increments. Simply press the power button to display the current status. When charging by AC Wall outlet or input cable, the 4 White LEDs will show the charging progress by flashing the LEDs in 25% increments. Once all 4 White LEDs are lit solid with no flashing, the internal battery is fully charged. The status lights will display the meter for a short amount of time and then turn off. To see the battery status again, simply press the power button.
The 5th Blue color LED on the battery meter is the wireless charging status indicator. This LED indicates when wireless charging process has started or stopped. If the charger detects an error with wireless charging, the 5th Blue LED will flash.



Model: WPB06
Capacity: 10000mAh, 3.85V/38.5Wh
AC Input: 100-240V~0.35A 50-60Hz
Input USB-C: 5V=3A, 9V=2A
Output USB-C: 5V=3A, 9V=2.22A, 12V=1.67A (PD20W)
Output USB-A: 5V=3A, 9V=2A, 12V=1.5A
Output USB-A + USB-C: 5V=3A Max
Output Magnetic Wireless: 5W/7.5W/10W

Use Safety Instructions:

It is forbidden to do the following actions on the charging treasure: dropping, disassembling, opening, squeezing, bending, deforming, puncturing, shredding, microwave heating, burning, painting, immersing in liquid or inserting foreign objects. Keep the Power bank out of the reach of children. Children should be supervised when using the Power bank and kept out of reach of children. Do not expose the Power bank to heat or fire. Do not use or charge a damaged Power bank. Do not use or charge a damaged Power bank. If the Power bank leaks, keep it away from skin and eyes. Wash any affected area with plenty of water and seek medical attention immediately. The Power bank needs to be charged before use. Always use the correct cable and refer to the Power bank manufacturer's instructions for proper charging instructions. Do not use a damaged cable to charge or discharge the Power bank. Do not charge the Power bank for a long time when not in use. Disconnect the Power bank from the power source after it is fully charged. Pay attention to the dedicated input and output ports on Power banks and charging devices for receiving and supplying power to ensure proper use. Do not use any Power bank not designed for the device you are trying to charge. See your device manual for proper charging instructions. If possible, unplug the cable from the Power bank when not in use. Use the Power bank only for its intended application. When not in use, please store the charging treasure in a cool and dry place. When the Power bank is not used for a long time, it should be charged regularly to maintain the service life of the Power bank. Properly dispose of the Power bank. Keep all instructions that came with the Power bank for future reference.

Warning:
Please use this product according to the enclosed instructions. Failure to follow instructions may result in fire or other damage to the product. Keep this product out of the reach of children.

Important Safety Instructions:

Please pay attention to the logo on the Power bank before use to ensure correct use. It is recommended to fully charge the Power bank for the first use. To charge the Power bank, it is recommended to use a safety-certified power supply. To use the Power bank to charge other devices, select the matching cable. Do not use chemicals, soap and wet cloth to wipe this product while charging other devices. Please put the Power bank in a dry place, away from moisture and corrosive items. After long-term storage, the Power bank needs to be charged and discharged several times in order to obtain the best use effect. Take care of your children and make sure they don't use the Power bank as a toy. If you find that the Power bank or charging equipment has any adverse phenomena such as expansion, you should stop using it immediately. In case of leakage, please avoid direct contact of the leaked liquid with skin or eyes; in case of contact, rinse the contact area with plenty of water and seek medical attention immediately. Please dispose of waste Power bank according to national environmental protection regulations.

Warning:

Do not disassemble, impact or squeeze the Power bank, do not place the Power bank in direct sunlight or throw the Power bank into fire.



This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Radiation Exposure Statement

The device has been evaluated to meet general RF exposure requirement