





Head up 187 flp
Plack both index up 1 so drive forward, when
Plack both index up 1 so drive forward, when
Plack both during down to reade the
vertice stated up, when the vertice is a

other future up 1 so the place to 1 so

and up 1 so 1 so

and up 1 s indistand flip.

Authors: This is a challenging sturt that takes some practice.

As you improve, you'll be able to keep your vehicle's nose

'grinding' for a longer time.

The property of the property o







- SAFETY INFORMATION
 The product is recommended or schildown over 8 years sid: To creaze that the ordainplay is both side and the, plause review the operating instruction and these general
 than the production of the production o

SYMPTOM	■ PROBABLE CAUSE	■ CORRECTION
Vehicle runs slowly or will not run.	Loose battery connection or vehicle switch not CfX. Weak or uncharged rechargeable battery. Weak transmitter hattery.	Check battery connector and vehicle switch. Charge battery or replace. Replace with fresh alkaline battery.
Abnormal operation or only short range possible.	■ Radio interference likely.	■ Change location(see point 2-Quali Tips)
Short battery life.	■ Battery not fully charged.	Recharge battery pack. For repairmen running time, make sure you give your battery pack a full charge.
Vehicle doesn't work after going through water or snow.	■ Water in the electronics area.	Vehicle will take several hours to dy. Allow to dry thoroughly overright before trying again. Operate you vehicle in a dry area. Asolic driving in valor and snow.

CAUTION: Changes or medifications not expressly approved by the manufact responsible for compliance could void the user's authority to operate the equip

