

IPX6 Waterproof Speaker

Model: X9607601007

User Manual



INSTRUCTION FOR USER AND CARE

Dear Customer.

Thank you for purchasing this product. We kindly ask you to read and save this instruction manual for future reference. Please read all the instructions before using this speaker.

Accessories:

Please check if all the items below are included in your package:

- 1*Speaker
- 1*Type-C USB Cable
- 1*3.5m Audio Cable
- 1*Instruction Manual

Charging:

Plug the charging cable into the speaker and connect to another USB power source, such as a PC / MAC, etc.

Functions:

- TWS
- TF
- AUX-IN
- BLUETOOTH
- HANDS-FREE

RECHARGEABLE BATTERY
VOLUME +/-
PLAY/PAUSE
PREVIOUS / NEXT TRACK

Hunkster is IPX6 waterproof.

IMPORTANT: To ensure that the Hunkster is waterproof, please remove all cable connections and close the protective cap; exposing the Hunkster to liquid without these measures may cause permanent damage to the speaker. Do not expose the Hunkster to water while it is charging, because doing so may cause permanent damage to the speaker and power supply. The definition of **IPX6** waterproof rating is that a small amount of water sprayed directly from any direction will not enter the interior.

If the speaker is not used for a long time, please charge it at least once every three months. Battery life varies with usage patterns and environmental conditions.

Connection:

TWS connection (under Bluetooth Mode only):

- 1: Please make sure these two speakers to be paired disconnect from your Bluetooth device before you turn them on. Then please turn on two speakers.
- 2: Select either of the speaker. Double click "power button to enter TWS status.
- 3: When successfully paired, The LED indication light on either speaker will stay yellow, and the other speaker will flash blue.
- 4: Find "Hunkster" on your device, select it and connect.
- 5: Once the speakers are well paired at the first time, they will be automatically paired next time without the above pairing operation.
- 6: If the speaker used to be paired, it is suggested to press "M" button for 8 seconds to forcibly cut off the power. Then restart and have same speaker re-paired with required new speaker according to the above instruction item 1 item 4.
- 7: When speakers are paired, only the "master" speaker will answer the phone.
- 8: EQ (M button) sound effects can be used when TWS mode.


Bluetooth Connection:

Short press the POWER button for 1 second, the host will directly enter the Bluetooth search state after booting. (The blue light at the bottom flashes quickly, and there is a voice prompt)

Search for "Hunkster" on your cellphone and select it once found. The speaker will issue an indicating tone after the speaker has successfully connected to the cell phone.

When Bluetooth is not connected, it will automatically shut down after 10 minutes.

Product Overview:

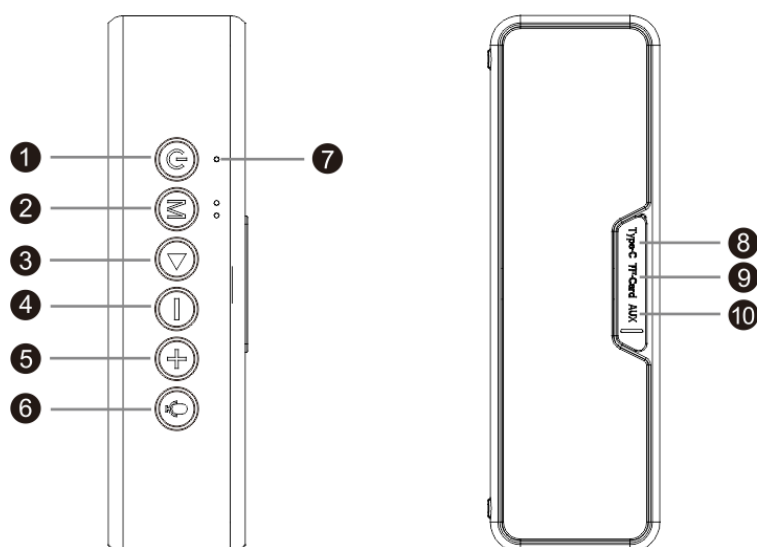

1. Power ON/OFF
Long Press: Power ON/OFF Switch
Double click: Double-click the button to enter the TWS mode
2. MODE
Short pres: Sound change: Default-3D-Bass
Long press: Switch between Bluetooth/TF Card/AUX IN mode, Press 8s to restart
3. Play/Pause
Short press: 1) Play /Stop. 2) Answer calls / Hang up. 3) Quick double click to dial the last number
Long press: Disconnected / reject answering
4. - Previous Track/Volume Down Button
5. + Next Track/Volume Up Button
6. Hands-Free
Turn on the phone voice assistant feature.
7. Charging Indicator
8. DC 5V (Type-C USB Cable) Port (For charging only)
9. TF/Micro SD Card Slot
10. Aux-in Slot

Specification

Bluetooth version: V5.0

Power output: 2x10W

Input: DC 5V,1A

Driver: 2x52mm speaker

Battery capacity: 2x 3.7V,1500mAh

Transmission Distance: 10M

Dimension: 215*55*68mm

IMPORTANT SAFEGUARDS:

1. Do not allow water to spill onto the surface or into the product.
2. This unit is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities or lack of experience and knowledge unless they are supervised or given instruction concerning the use of the appliance by a person responsible for their safety.
3. Children should be supervised to ensure they do not play with the unit.
4. If the product surface is damaged or if there is a mechanical or electrical malfunction, do not use the unit. Contact the authorized service center immediately.
5. Do not shake the unit.
6. Do not place the unit in water.
7. Do not place the product in direct heat. This unit is to be placed in a dry and ventilated place.
8. Do not place heavy objects on the unit.
9. If the battery is completely flat, connect the USB charging cable to charge the unit. Please note the unit may not work properly for the first couple of minutes of charging.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.