True Wireless Stereo

Pixart 1603 • IPX5 • Dynamic Driver + BA Driver • 2600mAh battery

Quick Guide

| ON | Press and hold the MFB for 3 seconds. |
|------------------------|--|
| OFF | Press and hold the MFB for 6 seconds. |
| Previous Track | Touch the MFB of the left earbud twice. |
| Next Track | Touch the MFB of the right earbud twice. |
| Volume (-) | Set on connected smart device. |
| Volume (+) | Set on connected smart device. |
| Siri/Google assistance | Touch the MFB button three times. |
| Play/Pause | Touch the MFB briefly. |

Multi-functional button (MFB): refers to the multi-functional button on the earbud.

Power On/Off

1. Power on Method 1 : Touch MFB for 3 seconds. A "Power On" message is heard

as a voice prompt.

Method 2: Remove the earbud from the charging cradle.

Method 1: Touch MFB for 6 seconds. A "Power Off" message is heard as a

voice prompt.
(The message will be heard if you are wearing an ear-bud.) Method 2: Insert the earbud into the charging cradle and close the cover.

Pairing (On First Use)

- Remove the ear-buds from the charging cradle (For initial use, remove the film from the ear-bud, put it back into the cradle.)
- 2. The left and right earbuds automatically connect to each other, flash blue quickly, and then red/blue. (About 5 seconds to connect)
- Select ABKO E10 from the Bluetooth list of the device you are connecting to, such as a smartphone/tablet.

MCSync Support

This product does not require any additional pairing when using L or R single, and automatically connects to the mobile phone after the initial pairing has been completed

※ Initialization method

- Proceed without the earbuds to be connected to any other devices. If you are connected to a mobile phone or a pad, please remove it from the Bluetooth list before proceeding.
- list before proceeding.

 Turn off both left and right earbuds.
- Touch the MFB of the left and right earbuds at the same time and hold for 10 seconds. (When the earphone is plugged into the ear, a few pairing messages are heard, then the power is turned off with two beeps.)
- Put the left and right earbud back into the cradle, close the cover, then open it again 2 to 3 seconds later.
- Press the find button on the Bluetooth list of your phone or pad, then find and touch E10.

Operation

Phone Call

- Reject Calls
 · Touch and hold the MFB button for 2 seconds when the phone rings.

Google Assistant / Apple Siri

ch and hold the MFB for 2 seconds while playing music

Music Playback Control

- During playback, touch the MFB on the left earpad twice to move to the previous track.
- During playback, touch the MFB on the right earpad twice to move to the next track.

Volume control

- Set up on the connected smart device.

Charging and Battery Indicator

- Earbud
- Return the earbud to the charging cradle and close the cover to start charging.
- It takes about 90 minutes to full change
- The cradle starts charging when connecting the charging cable to the Type-C connector on the left side of the cradle
- > During charging, the cradle displays the charging phase through an LED indicator on the front.
- It takes approximately 3 hours to fully charge the cradle and may different depending on the charging adapter and cable specifications.

LED Indicator and Cradle Display

- Earbud
 POWER ON: The blue LED lights up several times.
 POWER OFF: The red LED lights up for approximately I second.
- Pairing mode (unconnected): The red/blue LED on the right earbud is cross-fit, the left earbud flashes blue intermittently.
 Pairing complete status: Blue LED flashes once every 5 seconds.

- Cradle
 Cradle Battery Remaining : Number on the cradle display to indicate the remaining battery.
- Cradle Charge : The number of cradle displays flashes indicating the charging status.

Battery remaining status

0~25% 25~50% 50~75% 75~99% 100%



•000 ••00 •••0 ••••

Specification

| Model | E10 |
|---------------------|---|
| Driver | Dynamic Driver + BA Driver |
| Frequency | 20 Hz ~ 20 Khz |
| Working Distance | 10m |
| Bluetooth Chip Set | Pixart 1603 |
| Bluetooth Version | BT 5.0 |
| Bluetooth Profile | HFP/HSP/A2DP/AVRCP |
| Bluetooth Codec | SBC/AAC |
| Charging Time | 1 hours (Earbud) / 3 hours (Cradle) |
| Playback Time | 4 hours (Chargeable for 26 times / Max 108 hours) |
| Cradle Battery Spec | 3,7 V / 2600 mA |
| Earbud Battery Spec | 3.7 V / 40 mA |
| Button Type | Touch Button |
| Waterproof Rating | IPX5 |
| Color | Black / White |
| Wireless Charging | Not possible |
| FCC ID | 2AWXK-ABKOE10 |

Head Office
M Signature 7th floor, 20, Magokjungang 1-ro, Gangseo-gu, Seoul, Republic of Korea (TEL: +82-2-749-1311)

China Branch
Rm202, Mei Dong Electronics Building, Tie Shan He Street, San Dong Road,
Hua Shan Town, Hua Du District, Guang Zhou, China (TEL : +86-20-36969919)

Contact Us cs_support@abko.co.kr

WARRANTY

All warranty service is provided by our factory service center, or an authorized customer care technician. If you have any inquiry, please visit our website or email us. Please check below information. To schedule your service, please have your serial number and your model number available for service,

Website: https://abkoglobal.com/contact-us/

What ABKO will not cover

- purpose or used commercially.

 Damage to the product caused by accident, fire, floods, any natural disasters or acts of God,

 Damage to finish, such as surface rust, tamish, or small blemishes not reported within 48 hours of delivery,

 lecidental or consequential damage caused by improper use or not fellowing manual.
- Damage caused after delivery.
- Product not accessible to provide required service
- Service to repair or replace lights bulbs, except for LED lamp.

® This limited warranty is extended to the original purchaser and any succeeding owner for products purchased for home use in the world. If the product is located in an area where service by a ARKO is not available, you may be responsible for a trip charge or you may be required to bring the product to an authorized ARKO service becation for service. Some regions/countries do not allow the exclusion or limitation of incidental or consequential damages. This limited warranty gives you specified playing that, and you may also have other rights which vary from country to country. The wow what your legal rights and not considerable or country consumers of the production of the production

EXCLUSION OF IMPLIED WARRANTIES

Your sole and exclusive remedy is product repair as provided in this Limited Warranty.

Any implied warranties, including the implied warranties of merchantability or fitness for a particular purpose, are limited to one year or the shortest period allowed by law.

FCC Statement: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential costation. This explanes privates, uses and on notice radio frequency energy and if not not and call of accordance with the controllers, uses and on notice radio frequency energy and if not not an object and hard invariances to be later communications. Have been appropriate to the communication of the communica

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complish with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference for thing cause underlied operation.