



Hi, this is label printer
User's Manual

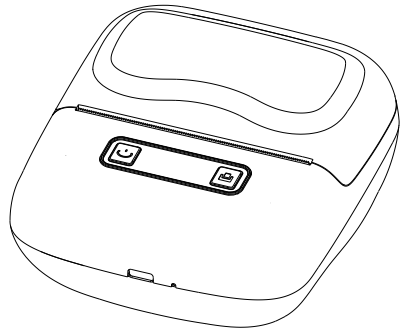

Installation & Usage

1 Press the media cover release button to open the media cover.

Media Cover Release Button

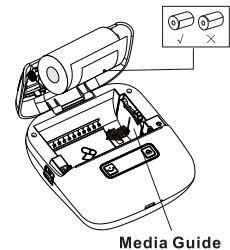

Media Guide

2 Insert the roll paper in the proper direction. Pull out some paper and close the roll paper cover.

3 Press power button and hold for 2 seconds to turn on the printer.

Power Button
 Screen
 Feed Button
 USB Interface

APP Download

a Scan the QR code below to download 4BarCode APP



b More software instructions can be found in the 4BarCode APP

Note:

- 1. Make sure Bluetooth is turned on
- 2. Granted location permission
- 3. The default PIN code is 0000

Packing List



Label Printer *1



User's Manual *1



USB Cable *1

Button Indication

Power Button

Press and hold for 2 seconds: Power On

Press and hold for 1 seconds: Power Off

Click 1. Ready status: Entry menu

2. Menu status: Switching function

Feed Button

Click 1. Ready status: Feed the paper manually

2. Menu status: Switching function parameters

Menu Functions

Mode switch

Continue/Gap

Selftest

Confirm

Density

Dense/Thin/Medium

Print Width

58\80

Auto Calibrate

Start

Cover Calibrate

Enable/Disable

UI Language

ENGLISH/中文

Sleep time

1min/3min/5min/Never

Shut down time

0.5h/1h/Never

Factory settings

Restore

Screen Indication

Printer Name

Shows the printer model name and Bluetooth MAC address.

Bluetooth Status

Connected Disconnected

Battery Status

Display the battery status.

Bluetooth Name

Shows the Bluetooth name and MAC address as BT:XXXX(XXXX is last two hexadecimal bytes of the Bluetooth MAC address)

Printer Cleaning

The print head should be cleaned in time when the printer has one of the following conditions:

1. Unclear printing
2. High paper feeding noise
3. Dirt adhered to the print head

The cleaning steps are as below:

1. Turn off the power of the printer, open the upper cover, if there is paper, remove it;
2. If printing has been just completed, please wait for the print head to completely cool down;
3. Wipe off dust and stains on the surface of the print head with a soft cotton cloth dipped in anhydrous ethanol (which should be wrung dry);
4. After the anhydrous ethanol has completely evaporated, load the paper and then close the upper cover to restart the printing.

Points for Attention:

- (1) During the daily maintenance of the printer, it is necessary to ensure that the power is turned off;
- (2) Do not touch the surface of the print head with your hands and metal objects, and do not use tools such as tweezers to scratch the surface of the print head, printing glue and sensor;
- (3) Do not use organic solvents such as gasoline and acetone;
- (4) Wait until the anhydrous ethanol completely evaporated, before turning on the power to continue printing;
- (5) This product is equipped with a built-in lithium battery, please do not use it in environment with temperature above 45 °C, do not approach heat sources such as open flames, and do not place or use it in sourcing sunlight, otherwise it will cause explosion or fire hazards;
- (6) Do not disassemble and replace the battery without permission, the replacement battery must use the same specification battery, otherwise there will be a risk of explosion;
- (7) The recycling or disposal of waste batteries should comply with local regulations and product manuals.

Warning

The manufacturer has the right to modify the contents of the manual without prior declaration!

Note:

The contents of this manual can not be changed without approval agreed, our company reserves the right to change the product software and hardware in terms of the technology and spare parts. If necessary, users can use it together with the product. You can contact the dealer to find more information. Without permission, no chapter of this manual may be reproduced or disseminated in any form or by any means.

FCC warning:

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.