

BEZGAR

TC141 1:14 RC CAR

 
 
Thank you for choosing our toys! Please read through this instruction manual before use as it contains all the information you need to know about how to correctly, joyfully use this product.

⚠ PRECAUTIONS:

• Electric Product


Do not give this product to children aged 8 or below. Like other electric products, this product is also to be used in a safe way to avoid electric shock.

TRANSMITTER & TRIMMER

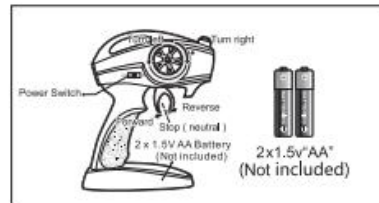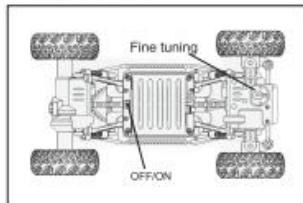

INSTALLATION OF BATTERIES

 - (1) Replace the battery cover.
- (2) Correctly install the rechargeable battery pack in the battery compartment and replace the battery cover.
- (3) Fasten the screw with a plus driver.

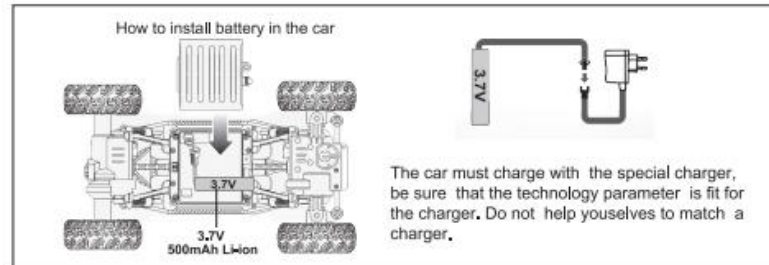

NOTE OF OPERATION

- (1) Turn on the car and set the band selectors on the transmitter and the chassis to the same position.
- (2) Use the control levers on the transmitter to control the car to run forward/backward or to turn left/right.
- (3) If the car can't run along a straight line, please use the trimmer on the chassis for adjustment.
- (4) Remember to turn off the car and the transmitter after use.

BATTERY SAFETY

- (1) The charging time for the battery is 60mins. Do not overcharge as it will not fill the battery with more power.
- (2) To charge the rechargeable battery pack in the car, first remove it from the chassis.
- (3) Timely remove exhausted batteries from the car and the transmitter.
- (4) Make sure the main switch is set to OFF before installing the battery pack into the car body.
- (5) Note polarity marks in the battery compartments when installing the batteries.

- (6) Do not try to charge non-rechargeable batteries.
- (7) Do not short-circuit the batteries.
- (8) If you plan to stop use for a long time, remove the batteries from the transmitter and the car body to avoid leakage.
- (9) Never throw the batteries into fire to avoid explosion or leakage.
- (10) Do not mix batteries from different producers or new and old batteries.
- (11) Use only recommended batteries or equivalent ones.
- (12) Check the batteries on a regular basis to avoid leakage.
- (13) Keep this manual well for future reference as it contains important information about this product.

SAFETY INSTRUCTIONS

1. When the car is in motion, do not touch the wheels by hand.
2. Do not play by the roads or in any other dangerous places to avoid accidents.
3. Do not play it outdoors in a rainy or snowy weather. Do not drive this non-amphibious car in water, puddle or snow, and always park it in a dry place.
4. Do not drive the RC car near the river, pond or lake, avoid the risk of falling into the water.
5. The RC car must be checked before and after operation. Tighten the screws or nuts that may be loose.

CAUTIONS

1. Details concerning cleaning and maintenance when necessary for the safe use and operation of the electric toy.
2. The transformer, power supply and battery charger used with The electric toy shall be regularly examined for damage to the supply cord, plug, enclosure or other parts, and in the event of damage, it shall not be used until the damage has been repaired.
3. The toy is not to be connected to more than the recommended number of transformers or power suppliers where such connection is possible without the aid of tool or breaking the toy.
4. The toy shall only be used with transformer for toys or a power supply for toys.
5. The toy shall be used with the transformer or power supply supplied.

NOTE: This equipment has been tested and found to comply with the limits for a class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following: X: -6871cm Y: 18,56cm .

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/ TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) This device may not cause harmful interference, and
(2) This device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the users authority to operate the equipment.

Product name: RC TOYS
Model: K18
Manufacturer: GUANGDONG HENGDI TECHNOLOGY CORP.,LTD.
Address: Building C, Jinhui Industrial Building, South of Yuting Road, East of Taian Road

