

CONTENTS AND BATTERY INSTALLATION

Contents

- 1 Desert Beast Rider
- 1 Remote Control

Battery Installation

 
 
Vehicle:

1. Make sure the power switch is in the off position (O).
2. Use a Phillips-head screwdriver to loosen the screw in the battery cover on the bottom of the vehicle and then open the battery compartment.
3. Insert 4 AA 1.5V batteries (not included) in the battery compartment as shown in the diagram (not included).
4. Replace the battery cover and tighten the screw securely.

Remote control:

1. Use a tool to press and hold the battery cover release on the back of the remote control.
2. Slide down the battery cover.
3. Insert 3 AAA 1.5V batteries as shown in the diagram (not included).
4. Slide the cover back into place securely.

Use alkaline batteries for best performance.

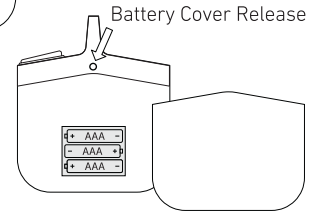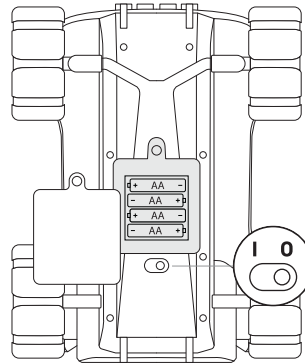

HOW TO PLAY

 
Pairing

1. Make sure both the vehicle and the remote control are powered off.
2. Power on the remote control by pressing the power button. The remote control will enter pairing mode and the LED indicator will slowly flash.
3. Power on the vehicle by flipping the power switch and set the vehicle down on a flat surface.
4. Wait for the remote control to quit flashing. The remote control LED will remain lit once paired.
5. If pairing is unsuccessful within 60 seconds, please power off both the vehicle and the remote control before repeating steps 2 to 4.
6. Start Driving.


Multiple Drivers

The vehicle uses an automatic 2.4GHz digital channel selection system that allows up to 10 drivers to race side by side in the same wireless range without interference.

Forward / Reverse

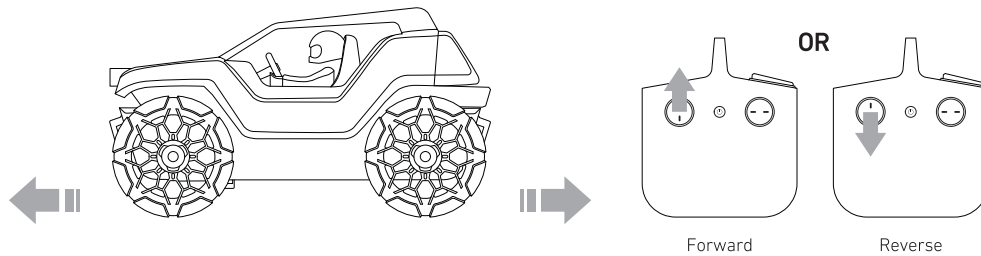


Left Turn / Right Turn

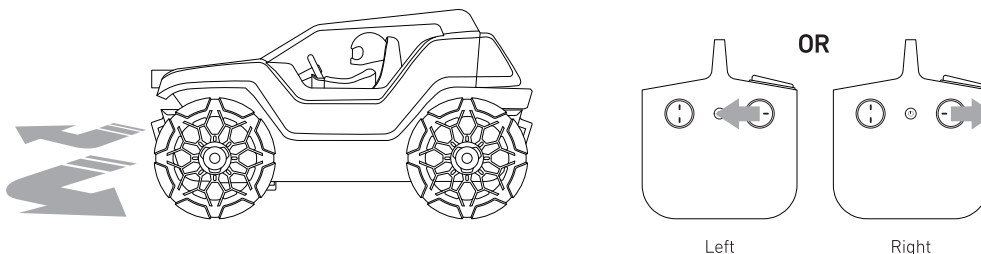 

Turbo

 Press the turbo button to enable turbo mode for 5 seconds.

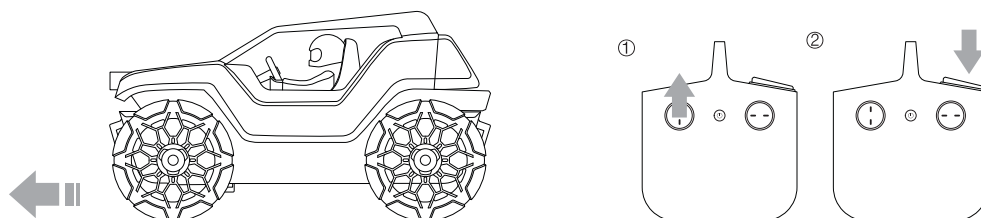

SAFETY PRECAUTIONS

- Do not sit, step, stand, or place objects on the vehicle. It is not designed to support extra weight.
- Adult supervision is recommended when operating the vehicle.
- Always drive responsibly and make sure driving paths are clear. Never drive towards or in close proximity to people or animals.
- Never submerge the vehicle in water and avoid driving the vehicle through water. The vehicle can handle minor splashes of mud and moisture, but it is not waterproof.
- Keep fingers, hair, and loose clothing away from tires and all moving parts while the vehicle is in motion.
- Do not expose to extreme temperatures.
- Do not leave vehicle or remote control near sources of heat or under direct sunlight for long periods of time.
- Thoroughly inspect products before every use. If the product appears worn, frayed, splintered, cracked, or broken in any manner, discontinue use and discard immediately.

BATTERY WARNINGS

- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc), or rechargeable batteries.
- Alkaline batteries are recommended. Use only the specified voltage.
- Insert batteries using the correct polarity. Always use, replace, and recharge (if applicable) batteries under adult supervision.
- Do not attempt to charge non-rechargeable batteries.
- Do not short-circuit the battery supply terminals.
- Do not dispose of batteries in fire: batteries may explode or leak.
- Remove batteries before storing.
- Recycle or dispose of batteries according to federal, state, and local laws.
- Keep these instructions for future reference.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Warning: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Sharper Image® name and logos (including the 77 logo and Tomorrow's Tomorrow) are trademarks or registered trademarks. Distributed by and © 2023 MerchSource, LLC. Irvine, CA 92618. All rights reserved.

Model No.: 1017800

WARNING:
CHOKING HAZARD — Small Parts.
Not for children under 3 years of age.

KEEP THIS INSTRUCTION MANUAL AS IT CONTAINS IMPORTANT INFORMATION FOR FUTURE REFERENCE.

Due to continuous product improvements, the pictures on this manual may differ slightly from the actual product.

Printed in China

**FOR CUSTOMER SUPPORT,
PLEASE CALL**

1-800-374-2744