

# Portable Electronic Piano

## USER MANUAL

software download address:  
<http://kohoxo.com/en-piano.zip>





Thanks for buying the electronic piano

Our company with 15 years experience of developing,producing a series of productions about the portable piano and roll up drum kit.This product is light and very portable,in order to have the best use of the product,please strictly follow the instructions and precautions in the manual.May you enjoy it.Thanks for your cooperation.

## I The feature of the product:

- 61/88 standard keys(includes the black key)
- Tone:129 tones
- Rhythm:128 rhythms
- Demo:30 demos
- Record function
- Rhythm function
- Demo function
- Metronome function
- Drum kit function
- Dual keyboard function
- Dynamic switch function
- Reset function
- LED display
- Sustain pedal,complex sustain pedal
- Blue-tooth MIDI function
- Blue-tooth Audio Function
- Powr supply:1.Built-in 3.7V/1800mAh Li-Battery  
2.USB 5V/1A powr supply

## II Explanation of function button

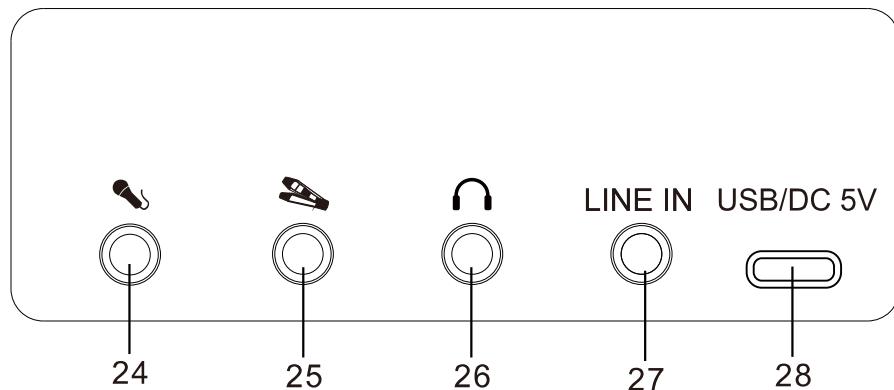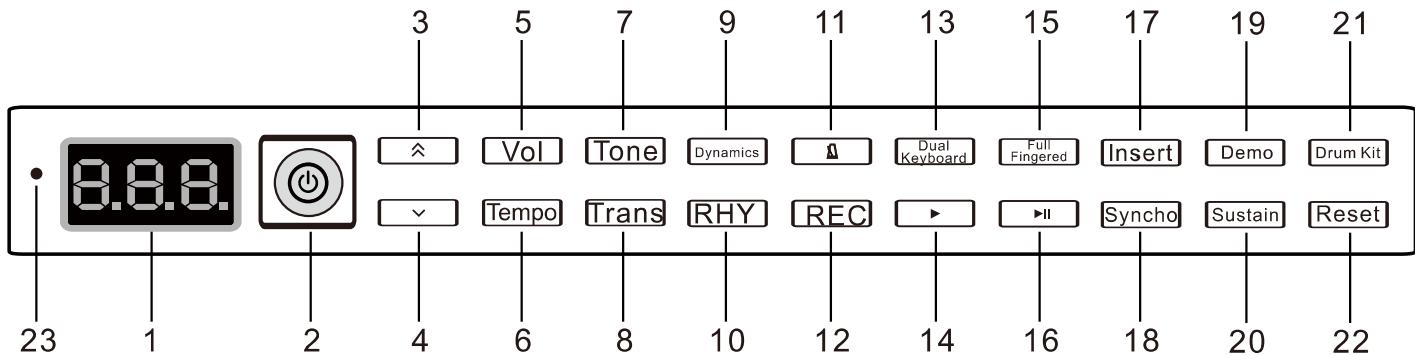

1		LED display	15	Full Fingered	full fingered button
2		POWER ON/OFF	16		Start/Stop button
3		Increase selection button	17	Insert	Insert button
4		Decrease selection button	18	Syncho	Syncho button
5	Vol	Volume button	19	Demo	Demo button
6	Tempo	Tempo button	20	Sustain	Sustain button
7	Tone	Tone button	21	Drum Kit	Drum kit button
8	Trans	Trans button	22	Reset	Reset button
9	Dynamics	Dynamic button	23		Charging indicator
10	RHY	Rhythm button	24		MIC interface
11		Metronome button	25		Sustain pedal interface
12	REC	Record button	26		Mp3 input interface
13	Dual Keyboard	Dual keyboard button	27		Earphone/Speaker interface
14		Play button	28		USB interface

### III .Function description

#### 1 ON/OFF,

Press 0.5 seconds to open,re-press to close

#### 2 Tone

- With 129 tones
- Select the tone when opening, the initial number is:000, the digital screen displays “000” press “

#### 3 Volume

- Press the “volume”button,repress “

#### 4 Rhythm

- With 128 rhythms
- Press “Start”, “Stop” or “Rhythm”, into rhythm play mode automatically, repress “start” or “stop” stop playing the rhythm. Press “

#### 5 Demo

- With 30 demos
- Press “Demo”button will play all the demos, press “start” or “Stop” to start or stop playing demo.
- Press “

#### 6 Dynamic control function

- Press “Dynamic”button to turn on or turn off dynamic, it is dynamic when opening

#### 7 Chord accompaniment

- When playing any rhythm, press “full fingered” button into single & finger mode. The LED will display “C03”, then press “Syncho”button, can play chord accompaniment.
- Chord function: Bass area, 61 keys (from C-f# area totally 19 keys), 88 keys (from A2-f# area totally 34 keys) play chords that match the rhythm, and the pitch of the chord changes with the

pitch of the keys,different chord styles at different rhythms.Finger (major triads chord and minor triads chord),single only have major triads chord.In the chord mode,press the “full fingered”to turn off the chord.

## 8 Record function

- Press “record”button into record mode,digital screen displays REC  
The recording function is taken a multi-channel real-time recording method to record notes.
- Into record mode,user can press the keyboard freely,the system will automatically record the keys played by the user.When it is full,digital screen displays “full”to remind.
- Press “Play” to play the recording notes,must have notes recorded,this function is considered valid.It will return to the original state automatically when finishing.
- Can select the tone during playing,the record notes will refresh automatically when re-record and reset.
- You can close the metronome sound through start/stop button according your needing when recordig

## 9 Trans function

- Total 13 levels: -6、-5、-4、-3、-2、-1、0、1、2、3、4、5、6
- Playing mode,press “Trans”button into trans function,through “”or “”trans

## 10 Adjust the playing speed

- Playing mode,press “Tempo”into playing adjust function,through “”or “”button to control the playing speed.

## 11 USB-MIDI-IN-OUT function

Connect the computer or table through USB cable to work

## 12 Metronome function

- Metronome assist function,press the “” can select the metronome cyclically,will be 4 changes, it is:b01(2/4 beat),b02(3/4 beat),b03(4/4 beat),b04(1/4 beat).

## 13 Drum kit function

Press “Drum kit”button can switch the sound of piano and drum directly

## 14 Sustain/Vibrato function

Press “Sustain”or “Vibrato”button to turn on or turn off sustain and vibrato function

## 15 Pedal sustain,complex sustain function

- Step sustain pedal has sustain effect -----With one pedal
- Complex sustain pedal using:press the keyboard then step the complex sustain pedal,with sustain effect when releasing the keyboard -----Optional one set pedal

## 16 Sleeping function

During using,no any action minutes ,the LED and power light will off,into sleeping mode automatically,press any keys to wake up.

## 17 LED Indicator

.Red LED indicator for charging light,when the built-in lithium battery is not fully charged,plug in the USB 5V cable for charging,red LED indicator is on,when full,The indicator lights up green.

## 18 Reset

Press the reset button to restore the product to the power-on default state.

## 19 Dual keyboard function

Press the “Dual Keyboard”button,the LED will display “ON”,28 keys on the left bass area fixed bass. can select your favorite tone on 29-88 keys area on the light,re-press “Dual Keyboard”button,this function is turn off,the LED will display “OFF”

## 20.Key light (Only applicable to the version with light)

- 1.The corresponding key lamp lights up when playing.
- 2,When the demo song is playing, the key light will lights up along with the main melody.Press “Dynamic”button to open or close the key light function.The default key light is on.

## 21.Blue-tooth APP function(Bluetooth 5.0)

.Search MIDI PIANO to connect by mobile APP

.iPhone connection method:

Pop piano connection:

- 1.Scan the QR code to download the Pop piano;
- 2.Turn on the Bluetooth in your phone then open the Pop piano APP,select any song,start playing after entering;
- 3.Click on the top left of the phone screen  ,select after opening:Bluetooth connection- Next-confirm to connect with the Bluetooth;
- 4.Confirming Bluetooth connection,this icon is blue 

GarageBand connection:

- 1.Open the GarageBand in your phone,if not,please download by yourself;
- 2.Turn on the Bluetooth in your phone;
- 3.Open the GarageBand,click the setting icon on the top right of the phone screen;
- 4.Song setting-advanced-Bluetooth device to connect the piano Bluetooth.

Perfect Piano connection:

- 1.To download the perfect piano APP in your phone firstly;
- 2.Turn on the Bluetooth in your phone;
- 3.Connecting the GarageBand at first,after connection,then open perfect piano APP to use.

Android connection method:

Pop piano connection:

- 1.Scan the QR code to download the Pop piano;
- 2.Turn on the Bluetooth in your phone,some phone need to turn on the phone positioning;
- 3.Open the Pop piano,select any song,start playing after entering;
- 4.Click on the top left of the phone screen  ,select after opening:Bluetooth connection- Next-confirm to connect with the Bluetooth;
- 5.Confirming Bluetooth connection,this icon is blue 

## 22Blue-tooth MIDI light

Play the piano according the light,more suitable for newer to play.(only suit for blue-tooth light version)

.The operation steps for connecting the Bluetooth APP are the same as 21 items,different lights for left and right hands in Pop APP.

## 23.Blue-tooth function

.After turning on,the blue-tooth function automatically turns on and there is a prompt tone.To search "Music-Piano" in your phone to connect,there is a prompt tone after the connection is successful.Increase or decrease the volume or music selection should be made through your phone.(Only suit for blue-tooth audio version)

#### IV Accessory one:lists of tone

Tone Number	Name	Tone Number	Name
T00	Acoustic Grand Piano	T35	Fretless Bass
T01	Bright Acoustic Piano	T36	Slap Bass 1
T02	Electric Grand Piano	T37	Slap Bass 2
T03	Honky-tonk Piano	T38	Synth Bass 1
T04	Rhodes Piano	T39	Synth Bass 2
T05	Chorused Piano	T40	Violin
T06	Harpsichord	T41	Viola
T07	Clavichord	T42	Cello
T08	Celesta	T43	Contrabass
T09	Glockenspiel	T44	Tremolo Strings
T10	Music box	T45	Pizzicato Strings
T11	Vibraphone	T46	Orchestral Harp
T12	Marimba	T47	Timpani
T13	Xylophone	T48	String Ensemble 1
T14	Tubular Bells	T49	String Ensemble 2
T15	Dulcimer	T50	Synth Strings 1
T16	Hammond Organ	T51	Synth Strings 2
T17	Percussive Organ	T52	Choir Aahs
T18	Rock Organ	T53	Voice Oohs
T19	Church Organ	T54	Synth Voice
T20	Reed Organ	T55	Orchestra Hit
T21	Accordian	T56	Trumpet
T22	Harmonica	T57	Trombone
T23	Tango Accordian	T58	Tuba
T24	Acoustic Guitar (nylon)	T59	Muted Trumpet
T25	Acoustic Guitar (steel)	T60	French Horn
T26	Electric Guitar (jazz)	T61	Brass Section
T27	Electric Guitar (clean)	T62	Synth Brass 1
T28	Electric Guitar (muted)	T63	Synth Brass 2
T29	Overdriven Guitar	T64	Soprano Sax
T30	Distortion Guitar	T65	Alto Sax
T31	Guitar Harmonics	T66	Tenor Sax
T32	Acoustic Bass	T67	Baritone Sax
T33	Electric Bass(finger)	T68	Oboe
T34	Electric Bass (pick)	T69	English Horn

Tone Number	Name	Tone Number	Name
T70	Bassoon	T99	FX 4 (atmosphere)
T71	Clarinet	T100	FX 5 (brightness)
T72	Piccolo	T101	FX 6 (goblins)
T73	Flute	T102	FX 7 (echoes)
T74	Recorder	T103	FX 8 (sci-fi)
T75	Pan Flute	T104	Sitar
T76	Bottle Blow	T105	Banjo
T77	Shakuhachi	T106	Shamisen
T78	Whistle	T107	Koto
T79	Ocarina	T108	Kalimba
T80	Lead 1 (square)	T109	Bagpipe
T81	Lead 2 (sawtooth)	T110	Fiddle
T82	Lead 3 (caliophe lead)	T111	Shanai
T83	Lead 4 (chiff lead)	T112	Tinkle Bell
T84	Lead 5 (charang)	T113	Agogo
T85	Lead 6 (voice)	T114	Steel Drums
T86	Lead 7 (fifths)	T115	Woodblock
T87	Lead 8 (bass+lead)	T116	Taiko Drum
T88	Pad 1 (new age)	T117	Melodic Tom
T89	Pad 2 (warm)	T118	Synth Drum
T90	Pad 3 (polysynth)	T119	Reverse Cymbal
T91	Pad 4 (choir)	T120	Guitar Fret Noise
T92	Pad 5 (bowed)	T121	Breath Noise
T93	Pad 6 (metallic)	T122	Seashore
T94	Pad 7 (halo)	T123	Bird Tweet
T95	Pad 8 (sweep)	T124	Telephone Ring
T96	FX 1 (rain)	T125	Helicopter
T97	FX 2 (soundtrack)	T126	Applause
T98	FX 3 (crystal)	T127	Drum kit
		T128	Drum kit

## V Accessory two:lists of rhythm

Rhythm Number	Name	Rhythm Number	Name
R000	80sPop	R035	American march
R001	16Beat pop	R036	March style
R002	8Ballad	R037	Tarante
R003	8Beat soul	R038	Funk soul
R004	70sRock	R039	Rock waltz
R005	Afro pop	R040	Piano bar
R006	Rap pop	R041	Jazz waltz1
R007	60sSoul	R042	Jazz waltz2
R008	70sSoul	R043	16Beat tune
R009	Funky soul	R044	Poka dance
R010	16Beat slide	R045	Waltz
R011	The twist	R046	Cha-cha
R012	British pop	R047	Rumba
R013	Hard rock	R048	Rock rap
R014	Fusion jazz	R049	Bullfight dance
R015	Funk slide	R050	Samba1
R016	Fusion slide	R051	Samba2
R017	Brisk rock1	R052	Tango1
R018	Brisk rock2	R053	Tango2
R019	Passionate rock	R054	Fox step
R020	Jazz rock	R055	Jazz waltz
R021	Fast gospel	R056	Argentine Tango
R022	Poka rock	R057	Italian Tango
R023	Rock billie	R058	Bossanova
R024	Rock roll	R059	Shuffle1
R025	Rock cha-cha	R060	Shuffle2
R026	Rock classic	R061	House
R027	Rock slide	R062	Merengue
R028	Rock pop	R063	Salsa
R029	Early boca	R064	Disco Latin
R030	Poca pop	R065	Thailand
R031	Blues1	R066	Reggae1
R032	Blues2	R067	Salsa
R033	Blues3	R068	Indian improvisation
R034	Popular waltz	R069	Merengue

Rhythm Number	Name	Rhythm Number	Name
R070	Polka	R099	Disco foxtrot
R071	16Reggae	R100	Euro soul
R072	Slow rock1	R101	Disco funk1
R073	Slow rock2	R102	Disco funk2
R074	Slow soul5	R103	Jazz samba
R075	Jorpo	R104	Disco Party
R076	Lambada	R105	Popular Samba
R077	Love ballad	R106	Club dance
R078	Plena	R107	Modern blues
R079	China	R108	Melancholy Foxtrot
R080	Acid	R109	Mambo
R081	8Beat modern	R110	Disco soul
R082	Country folk	R111	Disco
R083	Love songs	R112	Cobmo
R084	City pop	R113	Swing beat
R085	Electronic pop	R114	Krump
R086	Auditory folk	R115	Band marche1
R087	Piano Ballads	R116	Band marche2
R088	soul8.mid	R117	Band marche3
R089	Rock folk	R118	Big band1
R090	Slow and light	R119	Big band2
R091	Similar ballad	R120	Wild pop
R092	Majestic pop	R121	Southern jazz
R093	Kinetic1	R122	Popular jazz
R094	Kinetic2	R123	Jazz band
R095	Funk disco	R124	Jazz club
R096	Saturday night	R125	Habanera
R097	Twist	R126	Bachata1
R098	Euro beat	R127	Bachata1

## VI Accessory three:name lists of demo

Demo Number	Name	Demo Number	Name
D00	Jasmine	D15	Sweet honey
D01	Why are the flowers so red	D16	Susanna
D02	Butterfly Lovers	D17	Do-Re-Mi
D03	Entering a new era	D18	Moon River
D04	Girl of Alishan	D19	Mary has a little sheep
D05	Qinghai Tibet Plateau	D20	Hotels in the Pacific
D06	InThePlace PeachBlossom	D21	Crazy 1900
D07	Vox dance remix	D22	Family Restaurant
D08	Liuyang River	D23	Johnny the surfer
D09	Curvy Moon	D24	Sinbad hands
D10	Childhood	D25	New paradise
D11	Good days	D26	Happy birthday
D12	Go home often	D27	Carmen
D13	Night of grassland	D28	Short song
D14	Radiant	D29	Jingle bells

## **VII. The protection of piano:**

1. Use the soft and clean towel to clean the piano
2. Should be collected well after using, do not put the piano in the humid and hot place.

## **VIII. Precautions for using an electric piano:**

- .Do not split any part of the electronic piano
- .Do not put the piano in the humid and hot place
- .Do not put the piano in the the place with strong wave,in order not to effect the function of the piano.

## **IX. Trouble shooting**

- .If the sound is abnormal or the key is invalid,please re-open the piano,restore the original setting.  
If the battery voltage is low, the sound may be abnormal or the keys may be invalid.  
Please charge in time.

## **X. Product specifications**

1. Product size: 88keys L1250\*W210\*H70MM  
61keys L880\*W210\*H70MM

2. N.W: 88keys 5.9 KGDC5V  
61keys 5.2 KG DC

3. Input voltage: USB DC5V

4. Power by 2200mAh li-ion battery.

## **FCC Warnning:**

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.