

DOOGEE

3G/4G Smart Phone

User Manual

Thanks for choosing DOOGEE products

Model: N30



www.dogee.cc

This user manual is for reference only.
The specific functions and product pictures may be slightly
different from the actual ones. Please prevail in kind.



DOOGEE mobile



DOOGEE_official



DOOGEE official

■ Get Started

 
Thank you for choosing DOOGEE smart phones. In order to keep your phone in the best working condition, please read this user manual carefully before using it.

■ File Transfer

· PC–Phone File Transfer

Once the phone is connected to a PC with USB, the PC will charge the mobile phone automatically.

1. Drag the notification panel down and tap “USB charging this device”;
2. Select “Transfer files”;
3. The device is recognized as a removable disk by the computer. Open the folder appeared on the computer and transfer files from your phone to PC and vice-versa.

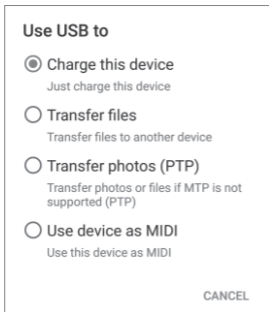

Keys and Parts

The phone includes many parts, Camera, Flash Light, Receiver, USB jack, Volume key, Power key etc, refer to the below diagram for more using details.

Keys	Directions
1. Volume Up/Down Key	Press the upper key to raise the volume and press the lower key to reduce the volume.
2. Power Key	Press: lock or wake up the screen. Press and hold for 2s: turn on/off the phone.
3. Receiver	To hear the sound of the other side when calling.
4. Front Camera	To take selfie or object facing to the phone screen.
5. Headset Interface	To connect an earphone to listen to music or radio, etc.
6. Return Key	Return to the previous page.
7. Menu Key	Switch to recently used applications.
8. Home Key	Press: return to the home screen from any other interface.
9. USB Interface	To connect charger or USB cable to transfer data.
10. Rear Camera	To take photo.
11. Flash Light	Assistant the camera to take photo in low light condition.
12. Speaker	Work when the phone rings, plays music or hands-free call.
13. Microphone	To make sounds louder or record them.

Lock and Unlock the Screen

• Lock the Screen

Press the “Power” key to lock the screen. The screen shall be automatically locked after it’s not used for a while.

• Unlock the Screen

1. Press the “Power” key to light up the screen
2. Swipe up from the bottom of the screen to unlock the screen.











• Change Screen Lock

1. On the home screen, select “Settings” > “Security” > “Screen lock”.
2. Choose the screen lock method.



Notification Panel

Notification icons on the status bar report the new arrival of messages, calendar events, alarm etc. You can switch on Data connection, WLAN, Bluetooth and so on.

Icons	Descriptions	Icons	Descriptions
	Battery		Mobile Data
	Wi-Fi		Bluetooth
	Airplane Mode		Flashlight
	Location		Auto-rotate
	Do not Disturb		Eye Protection


■ Change Wallpaper

Three ways to set up personalized wallpaper:

1. Press and hold any empty space on the screen, select “Wallpaper”.
2. Click “Settings” > “Display” > “Wallpaper” > select a picture > “Apply”.
3. “Gallery” > choose a photo > “Set picture as” > “Wallpaper”.

■ Make a Call

· Make a Call Directly

1. On the home screen, touch the icon “Phone” to display the dialing keypad.
2. Touch the numeric buttons to input the telephone number and click the icon  to make a call.

· Make a Call From Contacts

On the home screen, touch “Contacts” to select the one you want to call, and then tap the phone number to make a call.

· Make a Call From Call Logs

On the home screen, touch “Phone” > “”, select a call from call logs and click it to make a call.

Note:


If you have inserted two SIM cards to the phone, there will be two call icons on the dialing interface. Choose SIM 1 or SIM 2 to make a call.

■ Reject a Call by Sending a Busy Message

When you are inconvenient to answer an incoming call, you can send a busy message for rejecting it.

1. On the incoming call interface, drag the message icon up to show the obtained system busy messages.
2. Tap one of them to send out and then the call will be rejected.

■ Add a Contact

1. Enter “Contacts” on the desktop, touch the “”, select the storage location.
2. Fill the new contact information and save.

■ Messaging

· Send a New Message

Enter “Messaging” > click the icon “+” > type the text and phone number of the receiver > send it.

· Receive a New Message

When there is a new message comes, an icon will appear in the notification bar to notify you. Slide the status bar down to click the notification and read it. Or go to “Messaging”, read the new message directly.

· Editing SMS and MMS

1. You can compose a new SMS by cutting or copying text.

Step:

Press and hold a text field > select copy or cut > press and hold the empty space of new message typing area > choose paste.

Note:

The selected content is highlighted in Green.

2. A MMS may contain video, picture, audio etc.

Step:

Enter the new message typing interface > tap “Attach” > select Pictures, Videos, Audio, or Slideshow > choose corresponding file > type the text and phone number of the receiver > send it.

Browser

· Open Browser


1. On the home screen, touch “Browser”.


2. Touch the input field at the top of the screen to input a website address.


3. Tap the icon “”

· Browser Options


When browsing a web page, you can slide to scroll the screen to view other parts of the web page.

– Touch the icon (), select “Save to bookmarks” to add the current web page as a bookmark.

– Touch the icon (), select “Bookmarks/History” to open the saved bookmarks or pages you’ve browsed.

– Touch the icon (), select “Share page” to share the website with others.

· Browser Settings

On the browser interface, touch the icon (), select “Settings” to operate setting according to the indication.

Note:

You must have a mobile data or Wi-Fi connection to access the Internet.

Enjoy Music

You can listen to the music saved in your phone through a music player.

When you copy music files to your phone, the music player searches the device for the files and builds a catalog of your music.

Download thousands of apps on Google Play

Steps to download apps on Google Play:

Enter Google Play > login with a Google Account > search for the app and download it.

Manage Applications

Enter “Settings” > “Apps”. Tap any application to view the information, and also you can force the app to stop working or uninstall it.

Maintenance and Safety

Please read this safety information carefully so that you can use your phone in safe condition:

1. Around children

Please be very careful with children and your phone. A mobile phone contains a number of detachable parts, while swallowing these little parts may cause asphyxiation.

2. Hearing damage

Prolonged listening at very high volume may damage your hearing. Please reduce the volume to the lowest possible level when listening to music or having a call.

3. Fire hazard

Do not leave your phone near heat sources such as radiators or cookers. Do not leave your phone charging near flammable materials as there is a risk of fire.

4. At a gas station

Do not use your phone at gas station. In fact, it's always best to turn it off whenever you're near fuels, chemicals or explosives.

5. Contact with liquid

Do not expose the phone to liquid or touch it with wet hands, since damage caused by water may be irreparable.

6. Do not destroy the battery and charger

Never use a battery or charger that has been damaged. Keep the battery away from magnetic objects as the latter might cause short-circuit of your battery and destroy it permanently. As a general rule, you should not expose the battery to very high or low temperature (below 0°C or above 45°C). Differences in temperature may reduce service life.

7. Shocks and impact

Protect your phone from shock and impact. Some parts of the phone are made from glass and might break if the phone is dropped or is subject to severe impact. Avoid dropping the phone and touching the screen with sharp objects.

 
8. Maintenance

Do not try to disassemble your phone as there is a risk of electric shock. If you want to clean your handset, please use a dry cloth (do not use a solvent, such as benzene or alcohol).

9. Temperature

Do not use the phone in the environment at too high or too low temperature, never expose the mobile phone to burning sun or totally wet surrounding. The suitable temperature for the phone is 0°C to 45°C.

▲ Overview

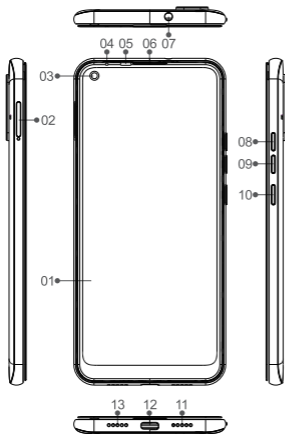

01: Touch Screen

02: SIM / TF Card

03: Front Camera

04: Indicator Light

05: Ambient Light Sensor

06: Receiver

07: Headphone Plug

08: Volume +

09: Volume -

 
10: Power Key

11: Speaker

12: Type-C USB Jack

13: Microphone

▲ Overview

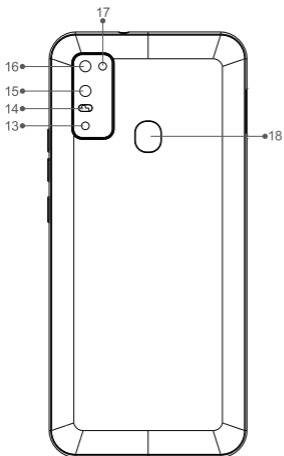


- 13: Macro Camera
- 14: Rear Flash
- 15: Main Camera
- 16: Wide Angle Camera
- 17: Portrait Camera
- 18: Rear Fingerprint

▲ Battery

The phone includes a built-in battery.

 You can track your battery status with the icon showed on the top right of the screen.

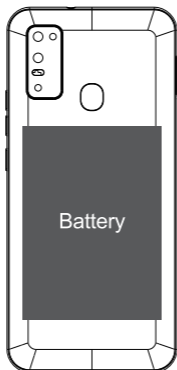

Warning

.Use only DOOGEE-approved batteries specifically designed for your phone. Incompatible batteries can cause serious injury or damage to your phone.

 
.Never place batteries or phones on or in heating devices, such as microwave ovens, stoves, or radiators. Batteries may explode when overheated.

▲ Correct card installation

You can install a Nano SIM1 card and a Nano SIM2 card and a TF card.

How to insert SIM card:


1. Ensure the device is power off;
2. Utilize the SIM card pin to unlock the SIM card tray by inserting it into the provided slot.
3. Insert the Nano SIM card or TF Card into the SIM card tray.
4. Insert the SIM card tray, lock it to the place.

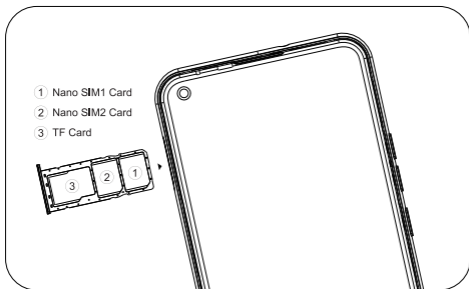

Caution:

Only Nano SIM card or TF card is supported by this device. Don't modify or alter your SIM card.

 ▲ Описание

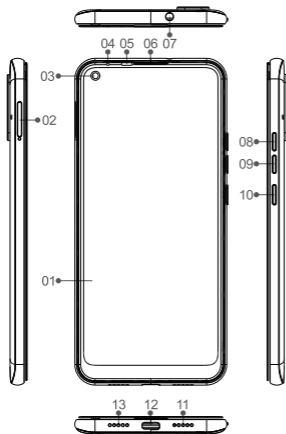

01: сенсорный экран

02: SIM / TF карта

03: передняя камера

04: индикатор

05: Ambient Light Sensor

06: приемник

07: Разъем для наушников

08: Том +

09: Том -

 
10: Ключ питания

11: Спикер

12: USB-разъем Type-C

13: микрофон

▲ Описание

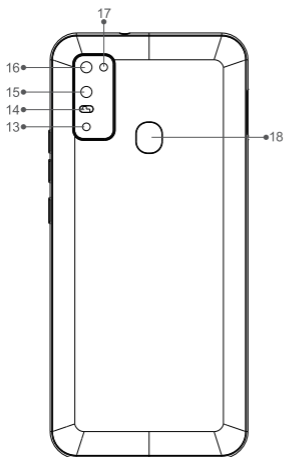

- 13: Макро Камера
- 14: Задняя вспышка
- 15: Основная камера
- 16: широкоугольная камера
- 17: Портретная камера
- 18: отпечаток пальца сзади

▲ Батарея

Телефон оснащен встроенным аккумулятором. Вы можете следить за зарядом батареи на индикаторе на экране, расположенном в верхнем правом углу.



Внимание

.Используйте только одобренные DOOGEE батареи, специально разработанные для вашего телефона. Несовместимые батареи могут вызвать серьезные повреждения вашего телефона.

 
.Никогда не оставляйте батареи или телефоны на нагревательных устройствах или в них, например, в таких, как микроволновые печи, печи или радиаторы. Батареи могут взорваться при перегреве.

▲ Как правильно установить карту

Вы можете установить карту Nano SIM1, карту Nano SIM2 и карту TF.

Как установить SIM-карту:


1. Убедитесь, что устройство выключено;
2. Используйте булавку, чтобы извлечь лоток для SIM-карты, встроенный в корпус смартфона.
3. Вставьте Nano SIM-карту или TF-карту в лоток для SIM-карты.
4. Вставьте лоток для SIM-карты на место и зафиксируйте его.

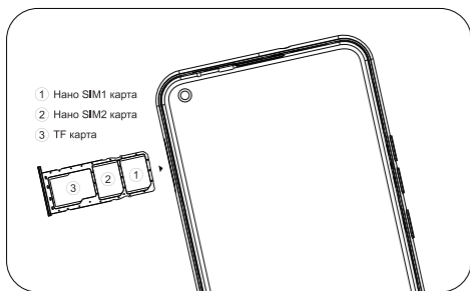

Внимание:

Данное устройство поддерживает только Nano SIM-карты или TF-карты. Не пытайтесь изменить лоток или вашу SIM-карту.

 ▲ Visión de conjunto

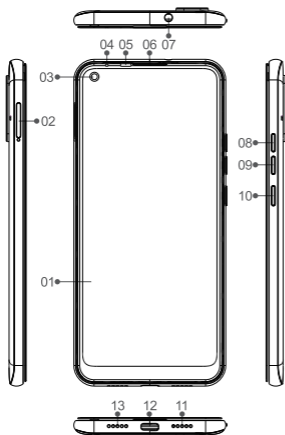

01: pantalla táctil

02: tarjeta SIM / TF

03: cámara frontal

04: luz indicadora

05: Sensor de luz ambiental

06: receptor

07: enchufe de auriculares

08: Volumen +

09: Volumen -

 
10: tecla de encendido

11: altavoz

12: conector USB tipo C

13: micrófono

▲ Visión de conjunto

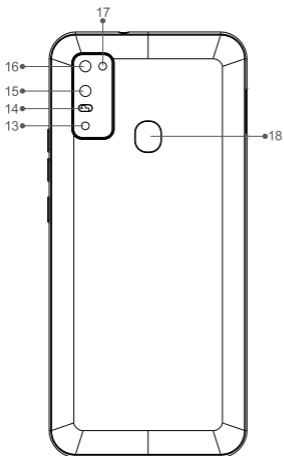


- 13: cámara macro
- 14: flash trasero
- 15: cámara principal
- 16: cámara gran angular
- 17: Cámara de retrato
- 18: huella digital trasera

▲ Batería

El teléfono incluye una batería incorporada.

 Puede rastrear el estado de la batería con el icono que se muestra en la esquina superior derecha de la pantalla

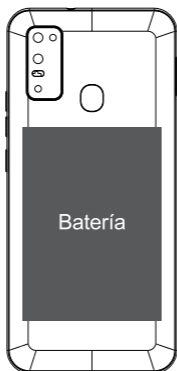

Advertencia

.Use solo baterías aprobadas por DOOGEE diseñadas específicamente para su teléfono. Las baterías incompatibles pueden causar lesiones o daños a su teléfono.

 
.Never place batteries or phones on or in heating devices, such as microwave ovens, stoves, or radiators. Batteries may explode when overheated.

▲ Corregir la instalación de la tarjeta

Puede instalar una tarjeta Nano SIM1 y una tarjeta Nano SIM2 y una tarjeta TF.

Cómo insertar la tarjeta SIM:


1. Asegúrese de que el dispositivo esté apagado;
2. Utilice el pin de la tarjeta SIM para desbloquear la bandeja de la tarjeta SIM insertándolo en la ranura provista.
3. Inserte la tarjeta Nano SIM o la tarjeta TF en la bandeja de la tarjeta SIM.
4. Introduzca la bandeja de la tarjeta SIM y bloquéela en el lugar.

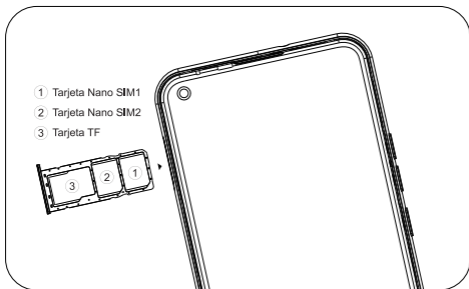

Precaución:

Solo la tarjeta Nano SIM o la tarjeta TF son compatibles con este dispositivo. No modifique ni altere su tarjeta SIM.

 ▲ Vista Geral

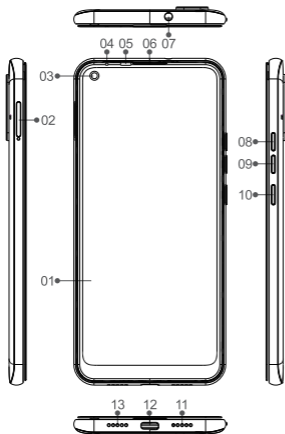

01: Tela de toque

02: Cartão SIM / TF

03: Câmera frontal

04: Luz indicadora

05: Senor da luz ambiente

06: Receptor

07: Plug para fone de ouvido

08: Volume +

09: Volume -

 
10: Tecla de alimentação

11: Alto-falante

12: Jack USB tipo C

13: Microfone

▲ Vista Geral

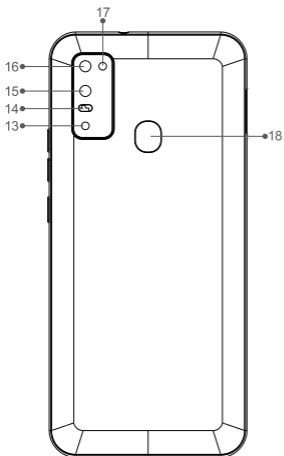

13: Câmera macro

14: Flash traseiro

15: Câmera principal

16: Câmera grande angular

 
17: Câmera Retrato

18: Impressão digital traseira

▲ Bateria

O telefone inclui uma bateria interna.

Pode acompanhar o estado da bateria com o ícone mostrado no canto superior direito do ecrã.

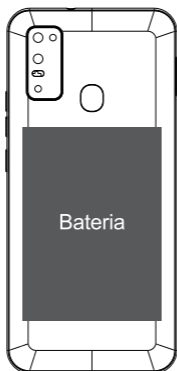

Aviso

 
- .Utilize apenas baterias aprovadas pela DOOGEE especificamente desenhadas para o seu telemóvel. Baterias incompatíveis podem causar ferimentos graves ou danos ao seu telemóvel.
- .Nunca coloque baterias ou telemóveis sobre ou em aparelhos de aquecimento, tais como microondas, fogões ou radiadores. As baterias podem explodir quando sobreaquecidas.

▲ Instalação correta do cartão

Você pode instalar um cartão Nano SIM1 e um cartão Nano SIM2 e um cartão TF.

Como inserir o cartão SIM:


1. Certifique-se de que o dispositivo está desligado;
2. Utilize o pino do cartão SIM para desbloquear o tabuleiro do cartão SIM ao inseri-lo na ranhura disponibilizada.
3. Insira o cartão Nano SIM ou Cartão TF no tabuleiro do cartão SIM.
4. Insira o tabuleiro do cartão SIM e bloqueie-o no sítio.

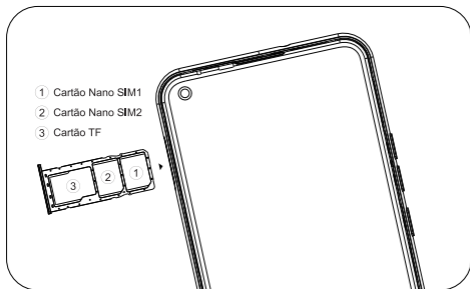

Cuidado:

Apenas o cartão Nano SIM ou cartão TF é suportado por este dispositivo. Não modifique nem altere o seu cartão SIM.

 ▲ Überblick

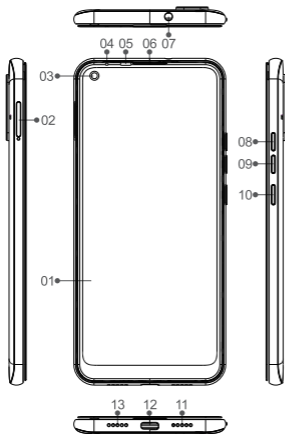

01: Touchscreen

02: SIM / TF-Karte

03: Frontkamera

04: Kontrollleuchte

05: Umgebungslicht Sensor

06: Empfänger

07: Kopfhörerstecker

08: Volume +

09: Band -

 
10: Ein- / Aus-Taste

11: Sprecher

12: USB-Buchse Typ C.

13: Mikrofon

▲ Überblick

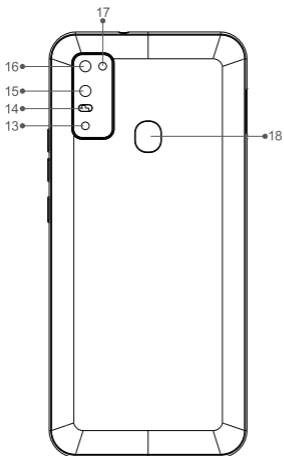


- 13: Makrokamera
- 14: Rückblitz
- 15: Hauptkamera
- 16: Weitwinkelkamera
- 17: Porträtkamera
- 18: Fingerabdruck hinten

▲ Akku

Das Telefon enthält einen eingebauten Akku.

 Sie können den Ladezustand des Akkus anhand des Symbols in der rechten oberen Ecke des Displays überprüfen.

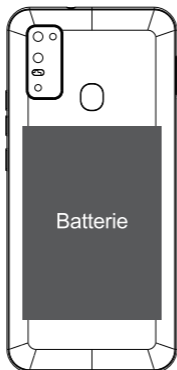

Warnung

 
- Verwenden Sie nur DOOGEE-zugelassene Batterien, die speziell für diesen Zweck entwickelt wurden. Inkompatible Batterien können zu schweren Verletzungen oder Schäden am Telefon führen.
- Legen Sie niemals Batterien oder Telefone auf oder in Heizgeräte, wie z.B. Mikrowellenherde, Öfen oder Heizkörper. Batterien können bei Überhitzung explodieren.

▲ Ordnungsgemäßes Einlegen der Karten

Sie können eine Nano SIM1-Karte und eine Nano SIM2-Karte sowie eine TF-Karte installieren.

Einlegen der SIM-Karte:


1. Stellen Sie sicher, dass das Gerät ausgeschaltet ist.
2. Verwenden Sie den SIM-Kartenpin, um den SIM-Kartenträger zu entriegeln, indem Sie ihn in das dafür vorgesehene Loch stecken.
3. Legen Sie die Nano-SIM-Karte oder TF-Karte in den SIM-Kartenträger ein.
4. Legen Sie den SIM-Kartenträger ein und verriegeln Sie ihn.

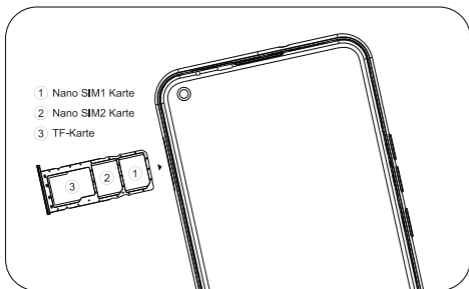

Vorsicht:

Von diesem Gerät werden nur Nano-SIM-Karten oder micro SD-Karten unterstützt. Nehmen Sie keine Änderungen an Ihrer SIM-Karte vor.

 ▲ Vue d'ensemble

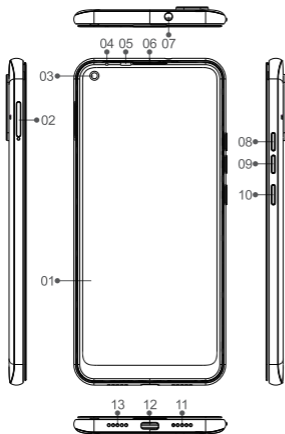

01: écran tactile

02: carte SIM / TF

03: Caméra frontale

04: Témoin lumineux

05: Capteur de lumière ambiante

06: récepteur

07: Prise casque

08: Volume +

09: Volume -

 
10: clé d'alimentation

11: Président

12: prise USB de type C

13: Microphone

▲ Vue d'ensemble

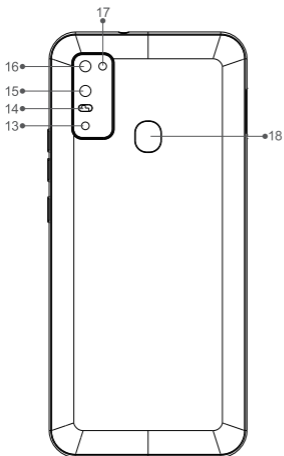


- 13: Caméra macro
- 14: Flash arrière
- 15: Caméra principale
- 16: caméra grand angle
- 17: Caméra Portrait
- 18: empreinte digitale arrière

▲ Batterie

Le téléphone comprend une batterie intégrée.

 Vous pouvez suivre l'état de votre batterie à l'aide de l'icône affichée en haut à droite de l'écran.

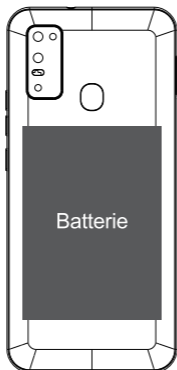

Attention

.Utilisez uniquement des batteries approuvées par DOOGEE spécialement conçues. Les piles incompatibles peuvent causer des blessures graves ou endommager votre téléphone.

 
.Ne placez jamais de piles ou de téléphones sur ou dans des appareils de chauffage tels que des fours à micro-ondes, des cuisinières ou des radiateurs. Les piles peuvent exploser en cas de surchauffe.

▲ Installation correcte de la carte

Vous pouvez installer une carte Nano SIM1 et une carte Nano SIM2 et une carte TF.


Comment insérer une carte SIM:

1. Vérifiez que l'appareil est éteint;
2. Utilisez le code PIN de la carte SIM pour déverrouiller le plateau de la carte SIM en l'insérant dans la fente fournie.
3. Insérez la carte Nano SIM ou la carte TF dans le plateau de la carte SIM.
4. Insérez le plateau de la carte SIM, verrouillez-le à l'endroit.

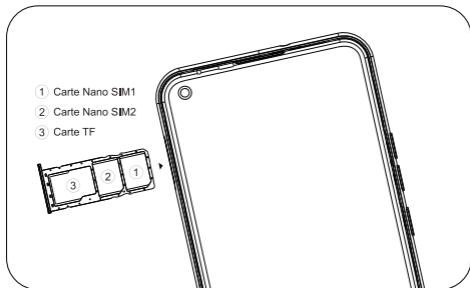


Mise en garde:

 Seules les cartes Nano SIM ou TF sont prises en charge par cette appareil. Ne modifiez pas ni ne modifiez votre carte SIM.

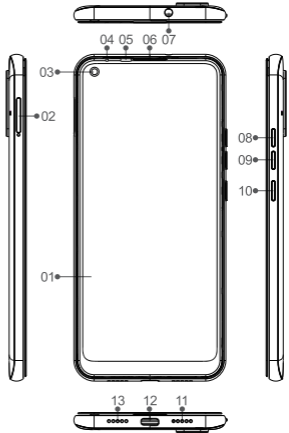

- | | |
|-------------------|-------------------------|
| 08: حجم + | 01: شاشة لمس |
| 09: الصوت - | 02: بطاقة SIM / TF |
| 10: مفتاح التشغيل | 03: كاميرا أمامية |
| 11: مكبر الصوت | 04: ضوء المؤشر |
| 12: اكتب USB جاك | 05: مستشعر الضوء المحيط |
| 13: ميكروفون | 06: المتلقي |
| | 07: قابس سماعة الرأس |

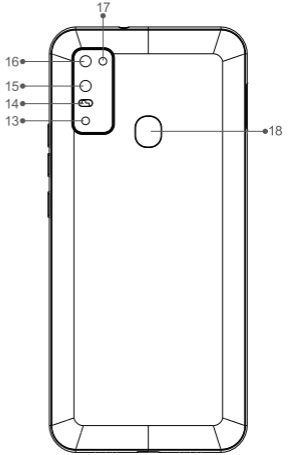 

13: كاميرا ماكرو

14: فلاش خلفي

15: الكاميرا الرئيسية

16: كاميرا بزواوية عريضة

17: كاميرا بورتريه

18: بصمة خلفية

البطارية ▲

يشتمل الهاتف على بطارية مدمجة.
يمكنك تتبع حالة البطارية عن طريق الرمز المعروض في
أعلى يمين الشاشة.



تحذير

استخدم فقط البطاريات المعتمدة من DOOGEE والمصممة خصيصًا
من أجل هاتفك. يمكن أن تسبب البطاريات غير المتوافقة إصابات
خطيرة أو تلف هاتفك.

 
لا تضع أبداً البطاريات أو الهواتف في أو أعلى أجهزة التسخين
مثل أفران الميكروويف أو الأفران أو المشعات. فقد تنفجر البطاريات
عند حدوث سخونة زائدة.

▲ التركيب الصحيح للبطاقة

يمكنك تثبيت بطاقة Nano SIM1 و بطاقة Nano SIM2 و بطاقة TF.

كيفية إدخال البطاقة الذكية:


1. تأكد من إيقاف تشغيل الجهاز.
2. استخدم دبوس بطاقة SIM لفتح درج بطاقة SIM عن طريق إدخاله في الفتحة المتوافرة.
3. أدخل بطاقة Nano SIM أو بطاقة TF في درج بطاقة SIM.
4. أدخل درج بطاقة SIM وأقفله في مكانه.

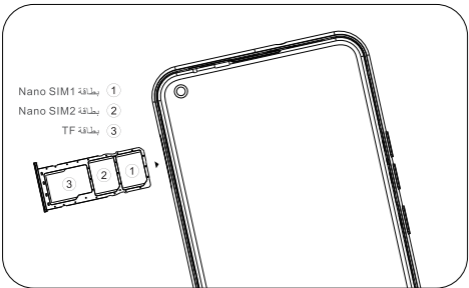

تنبيه:

لا يدعم هذا الجهاز سوى بطاقة Nano SIM أو بطاقة TF. لا تدخل أية تعديلات أو تغييرات على بطاقة SIM الخاصة بك.

 ▲ Огляд

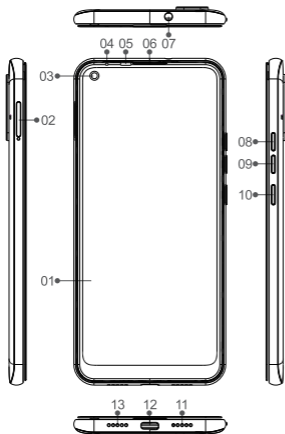

01: Сенсорний екран

02: SIM / TF-карта

03: Передня камера

04: Індикатор світла

05: Сенсор навколишнього світла

06: приймач

07: штекер для навушників

08: Том +

09: Том -

 
10: Ключ живлення

11: спікер

12: USB-роз'єм Type-C

13: Мікрофон

▲ Огляд

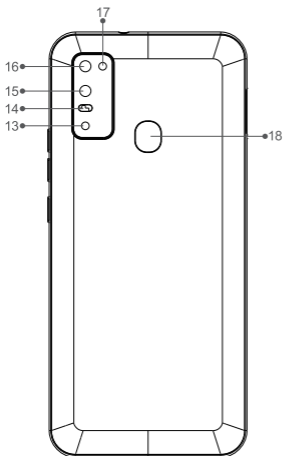

- 13: Макрокамера
- 14: задній спалах
- 15: Основна камера
- 16: ширококутна камера
- 17: Портретна камера
- 18: Задній відбиток пальця

▲ Акумуляторна батарея

Цей телефон має вбудований акумулятор.

За допомогою значка у верхній правій частині екрана можна відстежувати стан акумулятора.



Застереження

.Використовуйте тільки акумуляторні батареї, які схвалено компанією DOOGEE та які розроблені спеціально для вашого телефону. Використання несумісних акумуляторних батарей може призвести до серйозних травм або пошкодження телефону.

.Ніколи не кладіть акумуляторні батареї або телефони на чи у нагрівальні пристрої, такі як мікрохвильові печі, кухонні плити або радіатори. Акумуляторні батареї можуть вибухнути у разі перегрівання.