




User Manual

Product Illustration

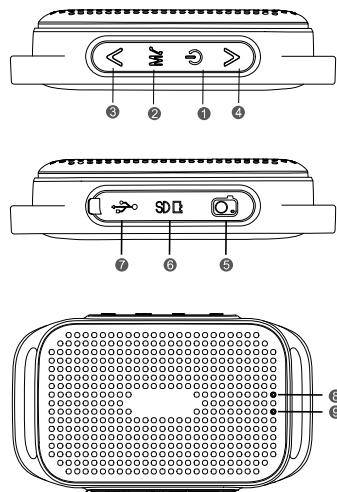

1. Power on/off: Press for 3 seconds; Short press to play/pause.
2. Short press for mode switch (Camera mode / MicroSD Mode / Bluetooth mode) When Bluetooth is connected with a mobile phone, short press the mode button to answer/end the call or long press the button to reject the call.
3. Press once, track forward, hold on the key, volume up.
4. Press once, track back, hold on the key, volume down.
5. Long press to enter camera mode, open phone camera and short press selfie button to take photos.
6. Micro SD.
7. Micro USB for charging
8. LED Indicates
Turn on: Blue light twinkles, device is waiting for Bluetooth connected.
After connected successfully, blue light is on.
Music play: Blue light flashes slowly.
Charging: Red LED Glows.
Full charge: Red LED off.
9. Microphone

Features:
Wireless BT
Supports Micro SD card
Camera shutter mode
Media / Volume control
Call function
Built-in rechargeable battery

Warning:

Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC Statement:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.