 
 
 


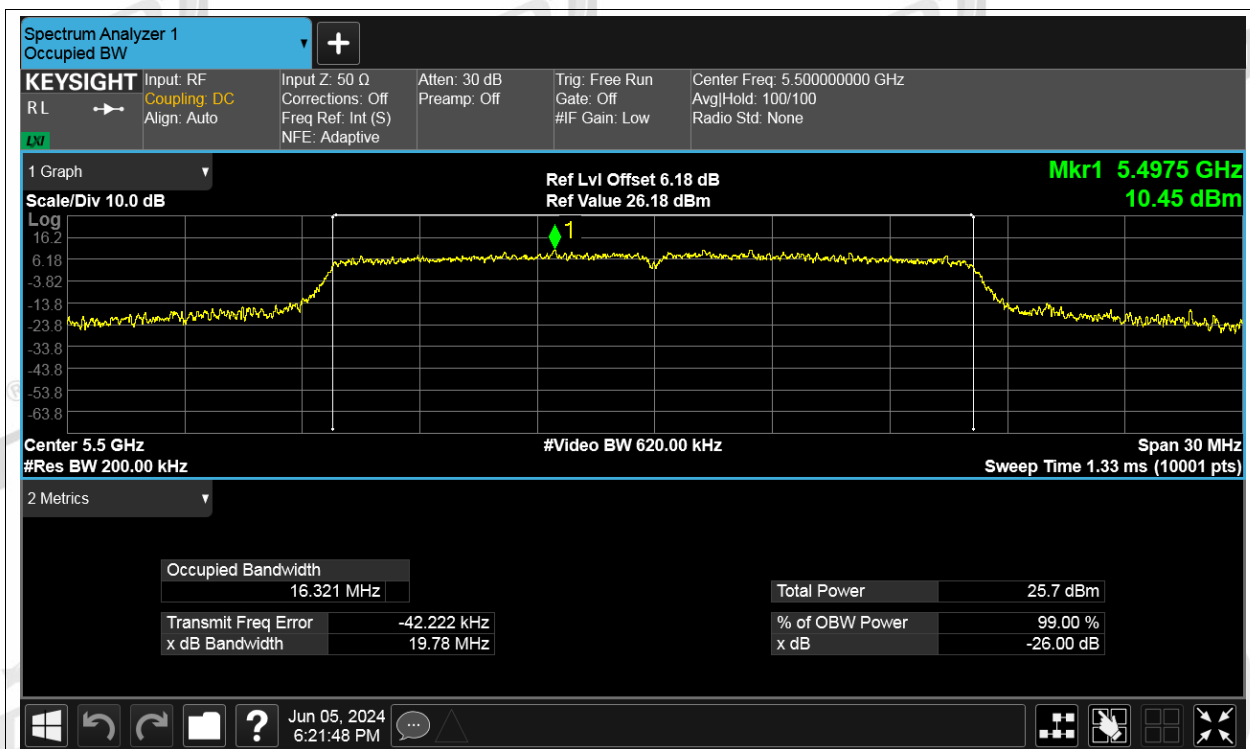


OBW NVNT a 5580MHz Ant2

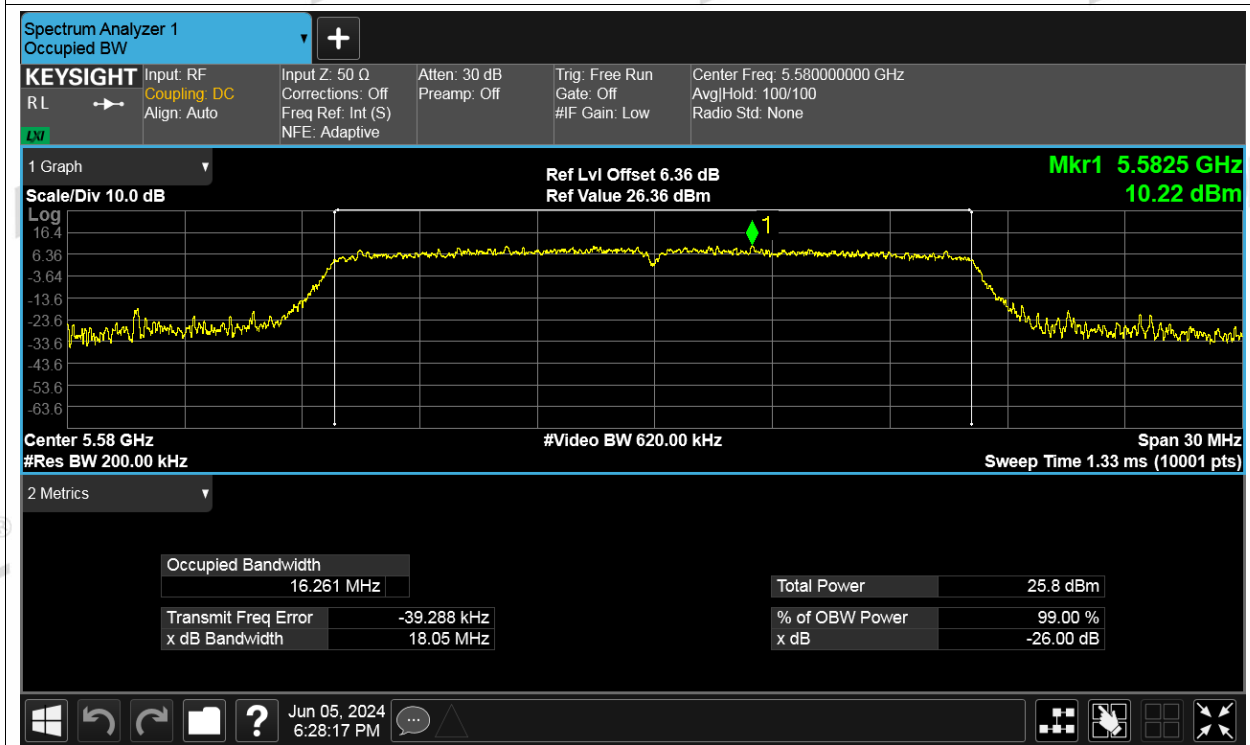


OBW NVNT a 5700MHz Ant2

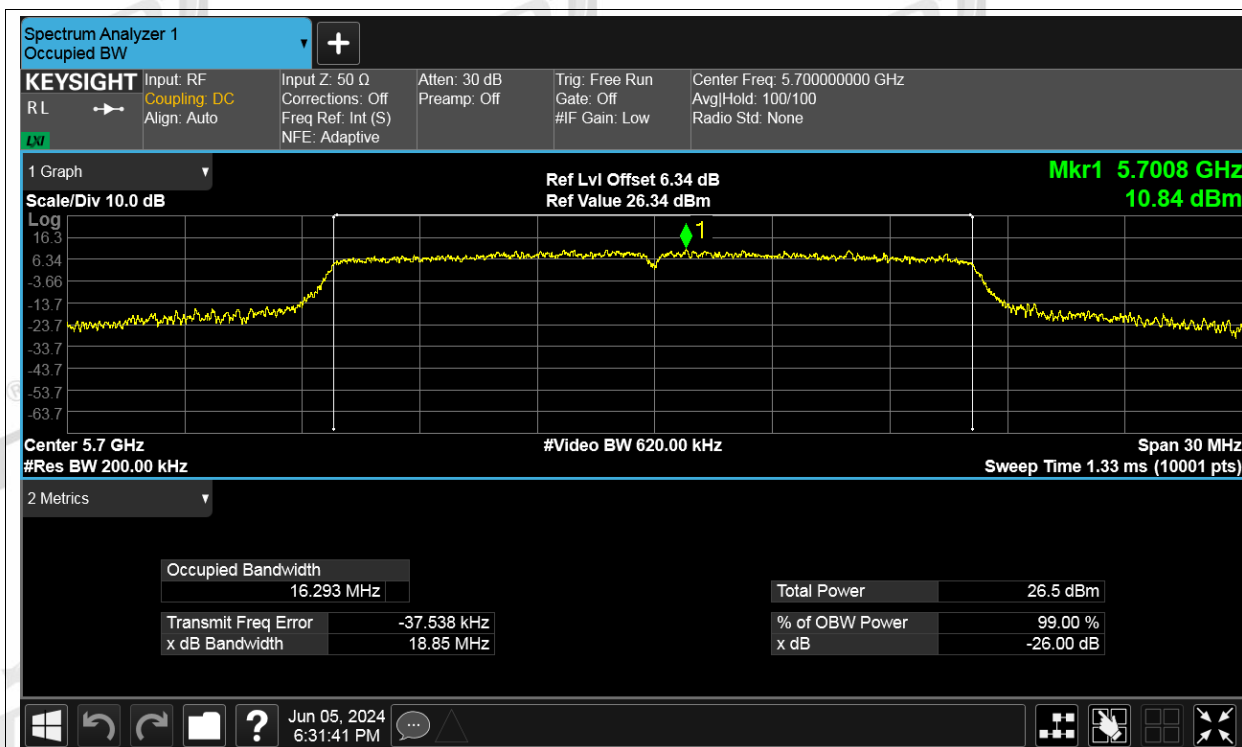

 
OBW NVNT a 5745MHz Ant2

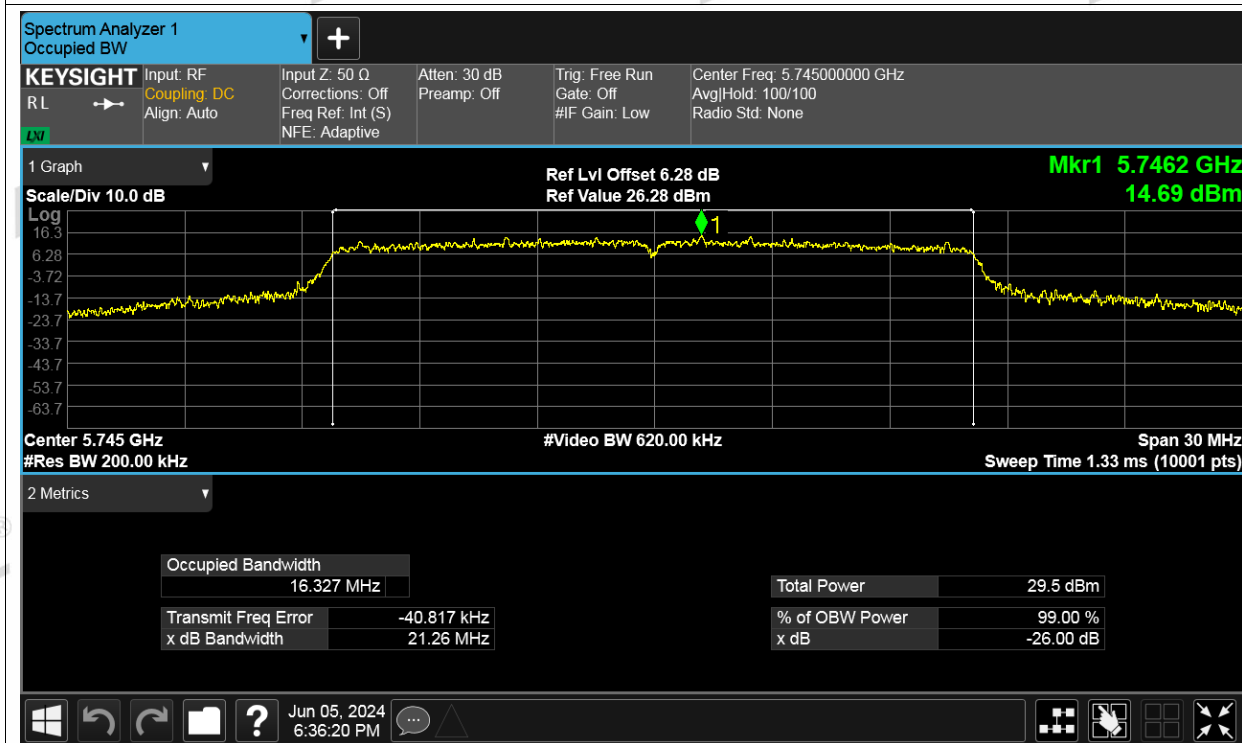


OBW NVNT a 5785MHz Ant2

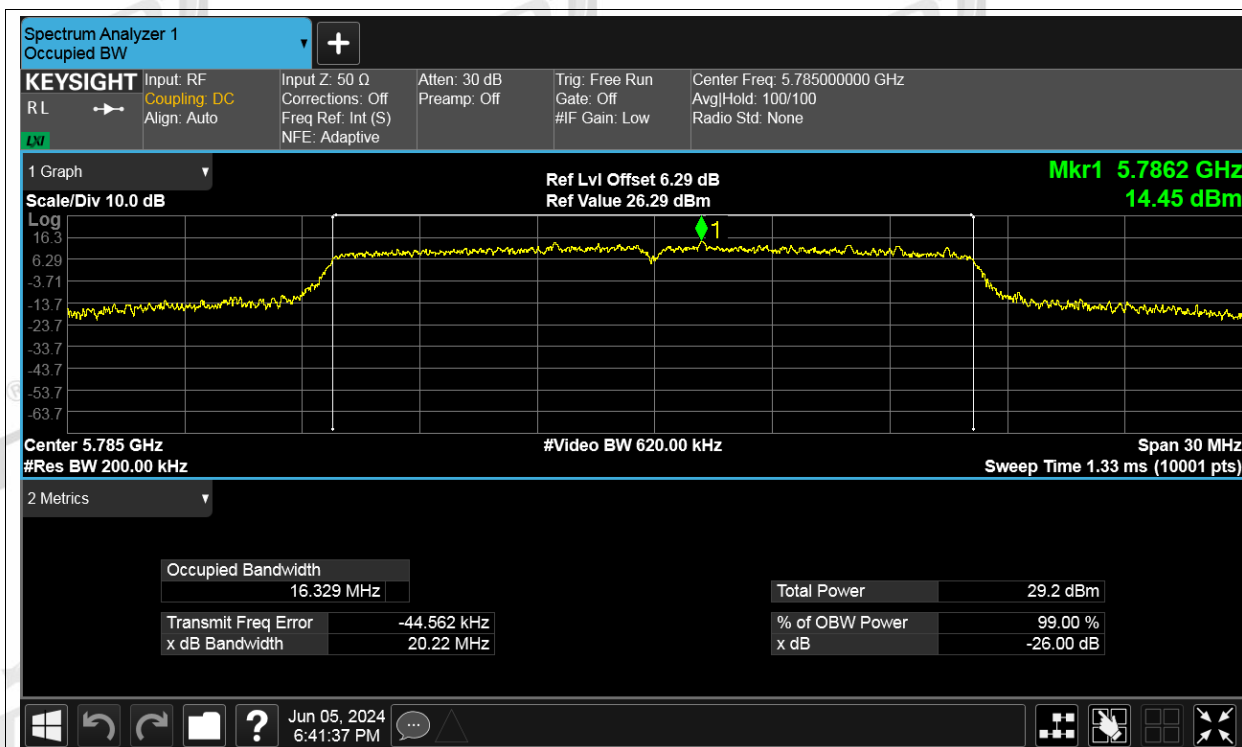 


OBW NVNT a 5825MHz Ant2

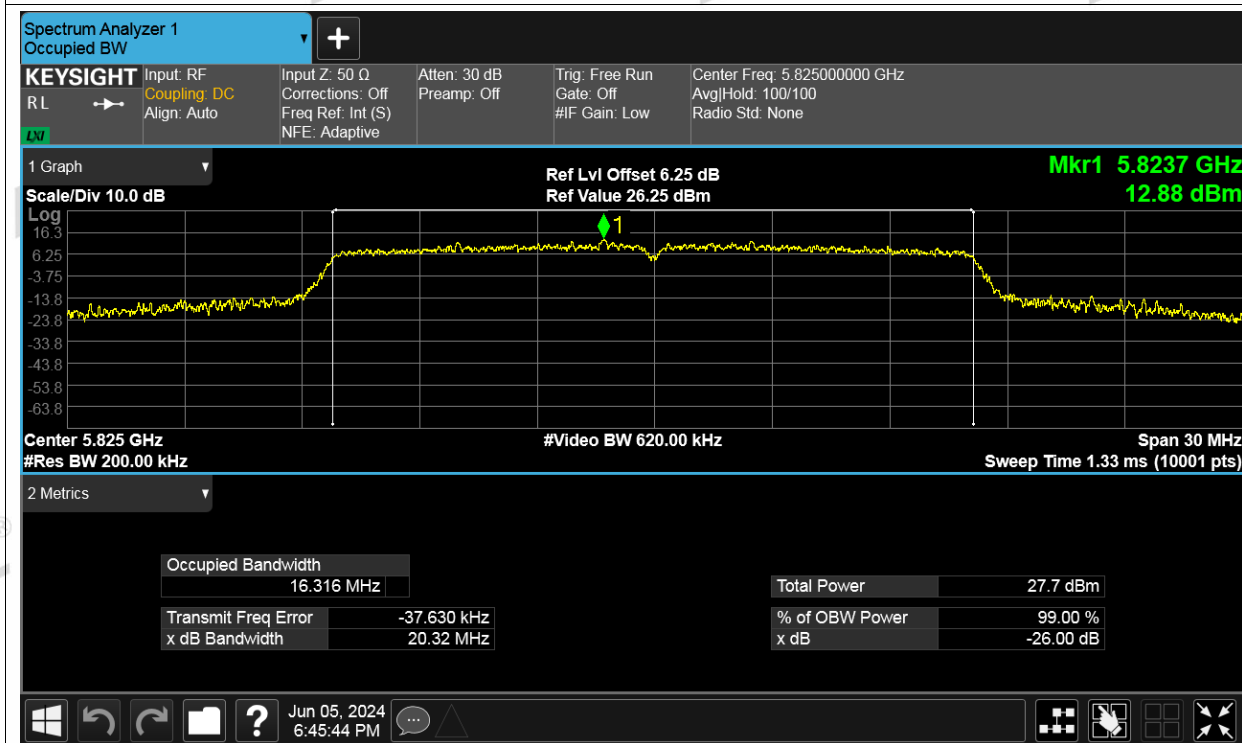 


OBW NVNT a 5180MHz Ant3

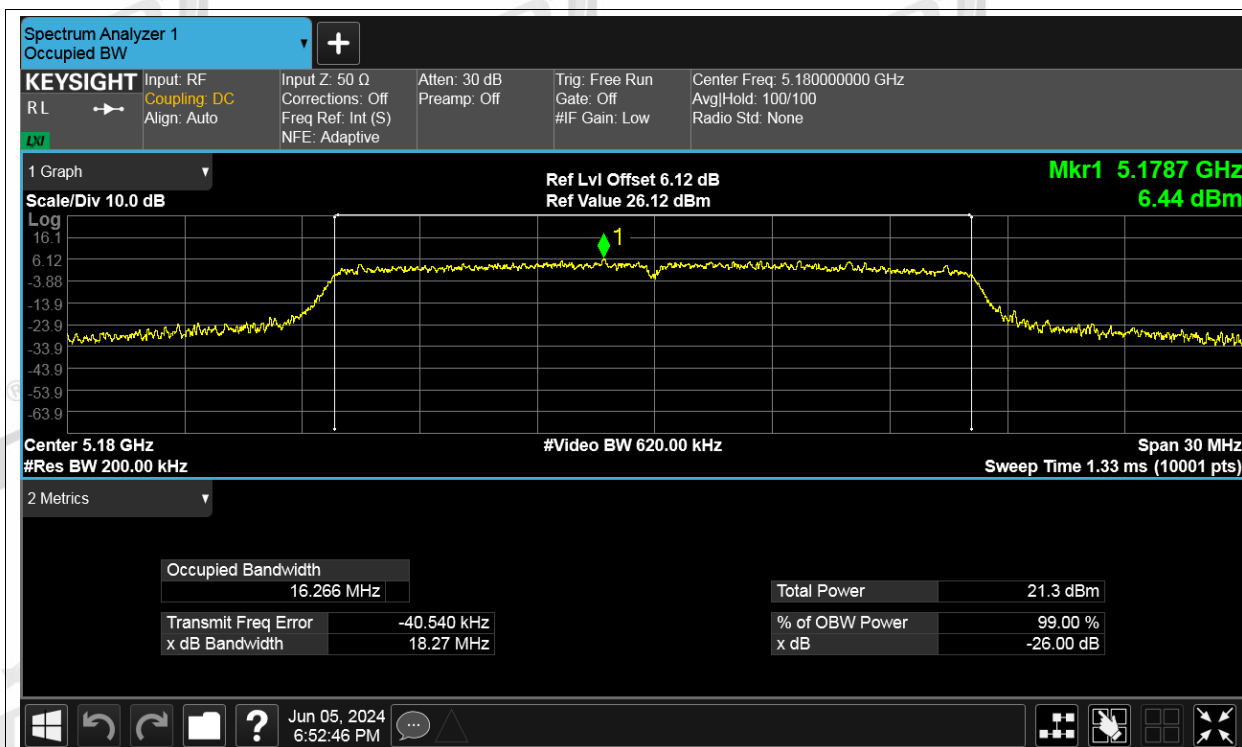 


OBW NVNT a 5200MHz Ant3

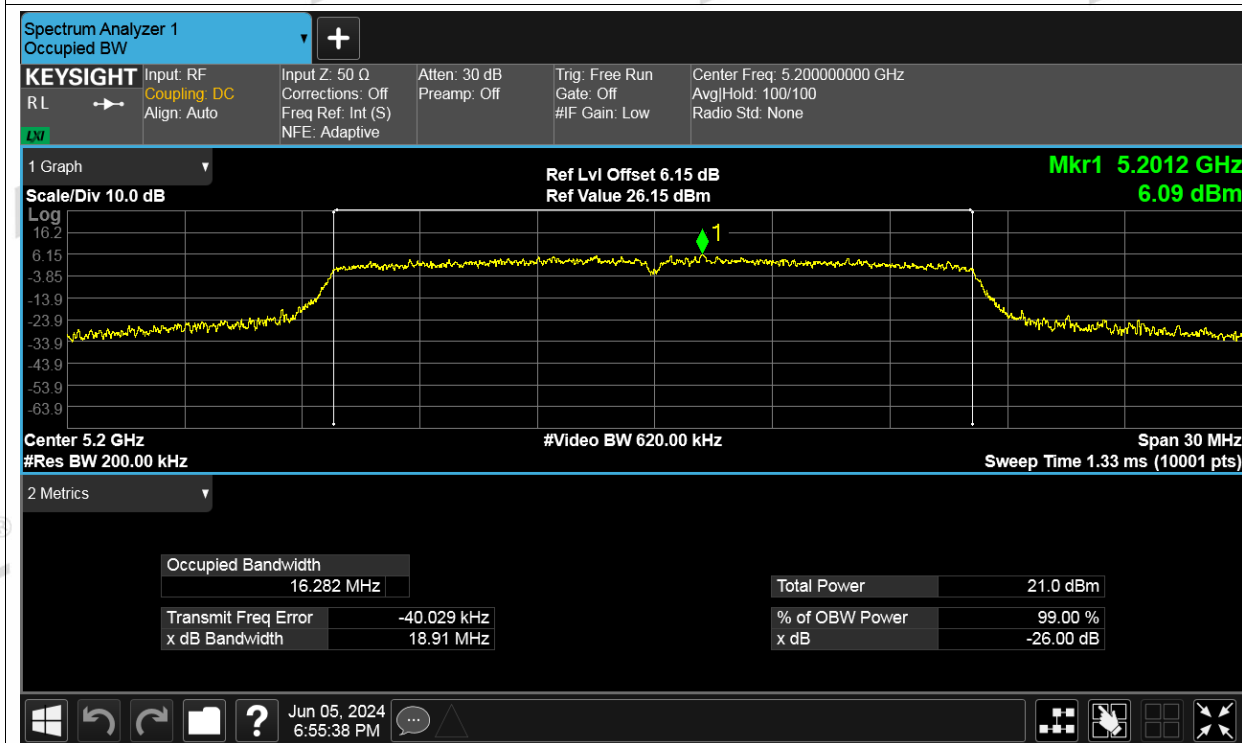 


OBW NVNT a 5240MHz Ant3

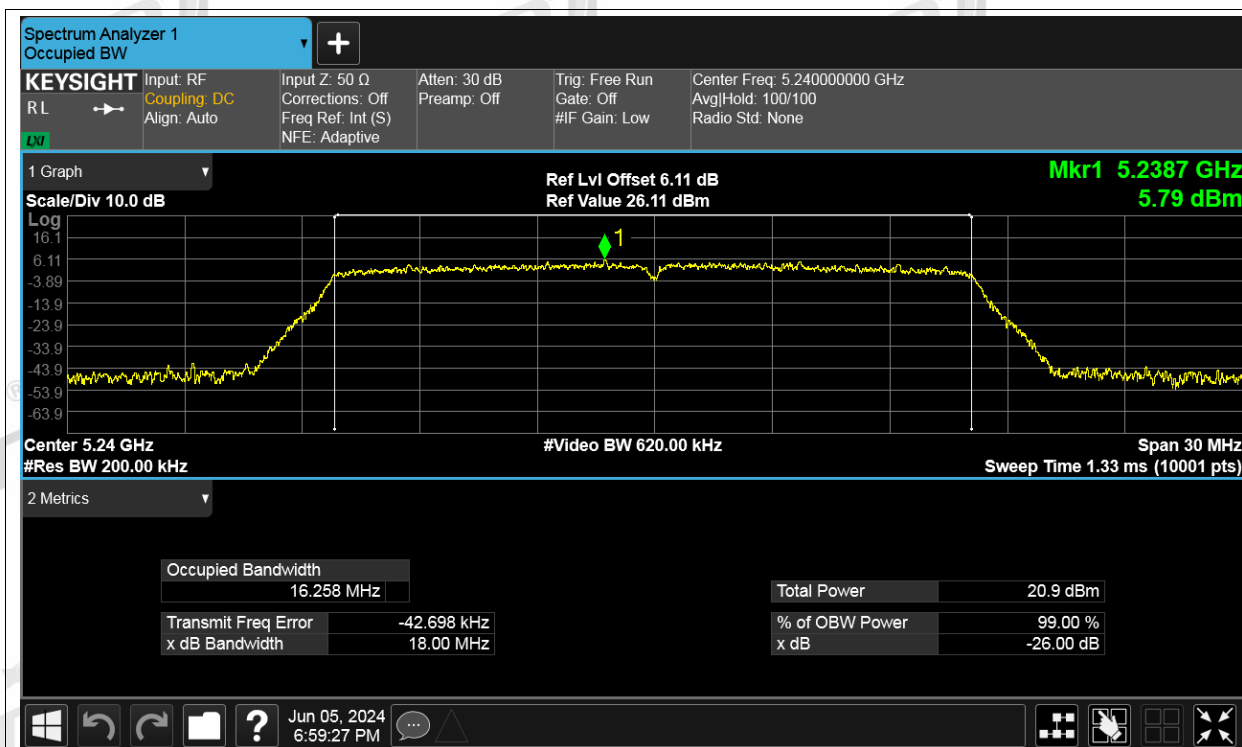 


OBW NVNT a 5260MHz Ant3

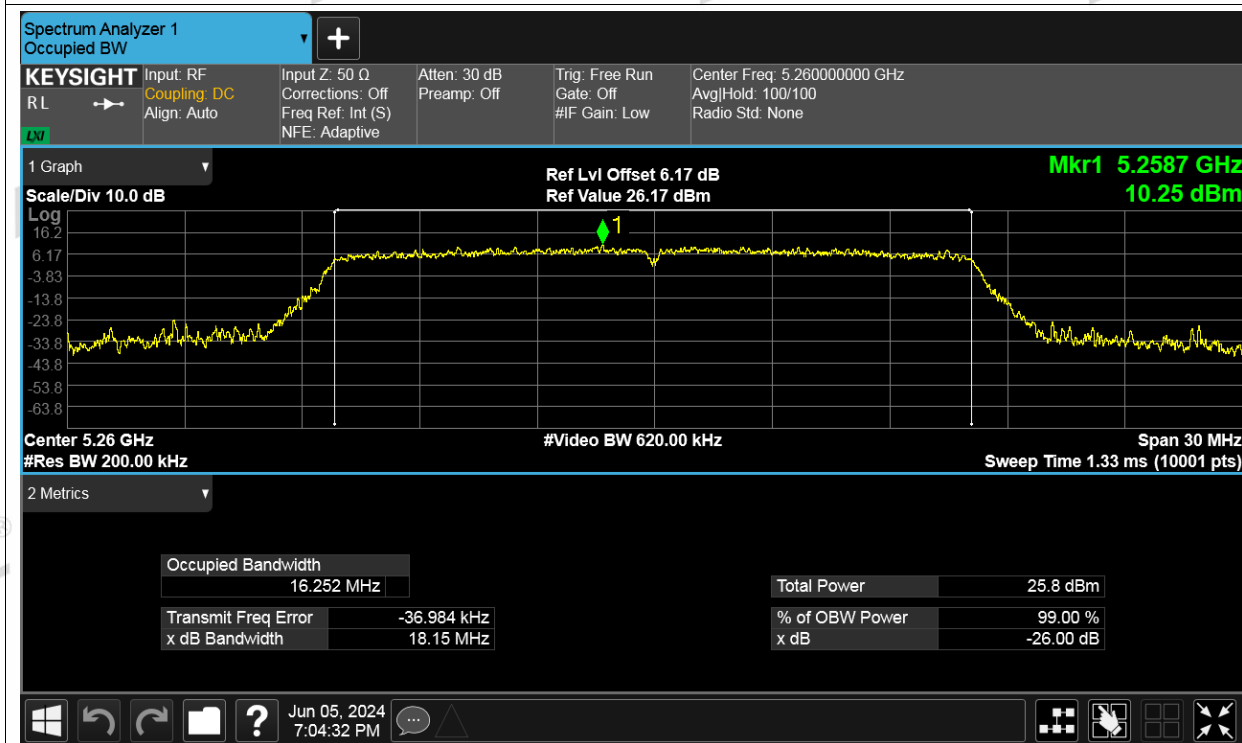 

OBW NVNT a 5280MHz Ant3

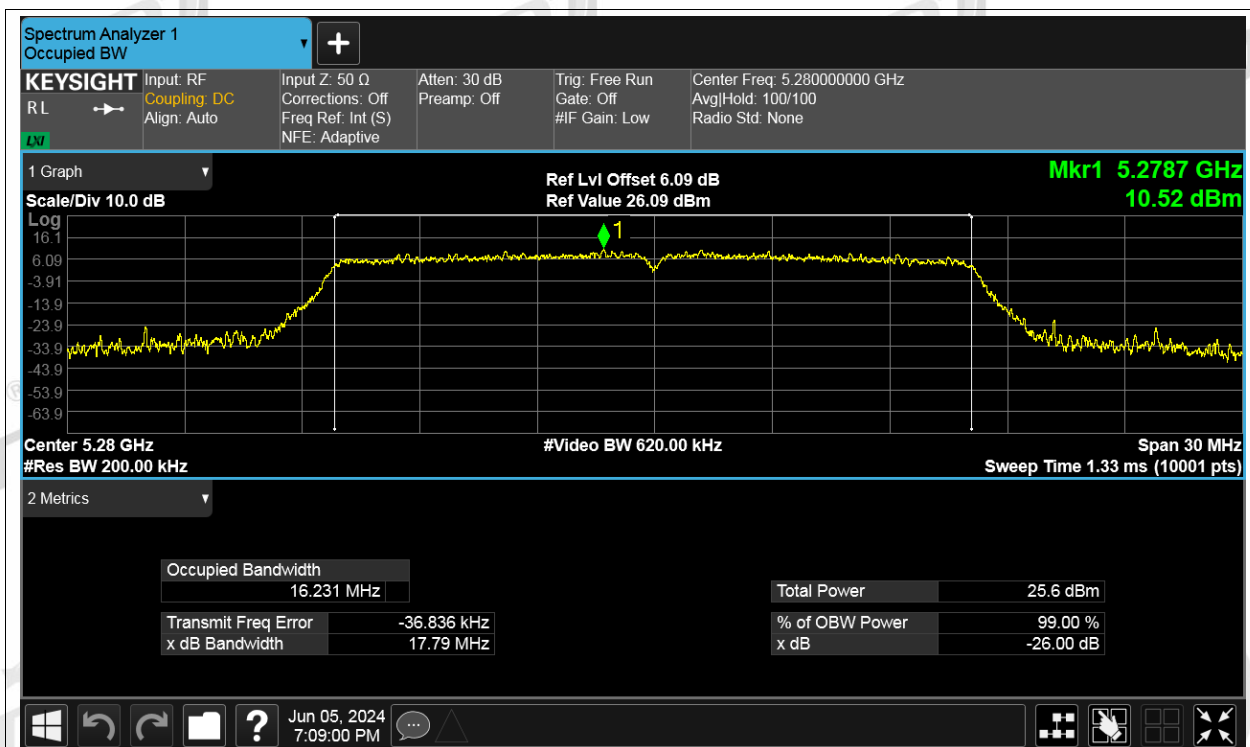 


OBW NVNT a 5320MHz Ant3

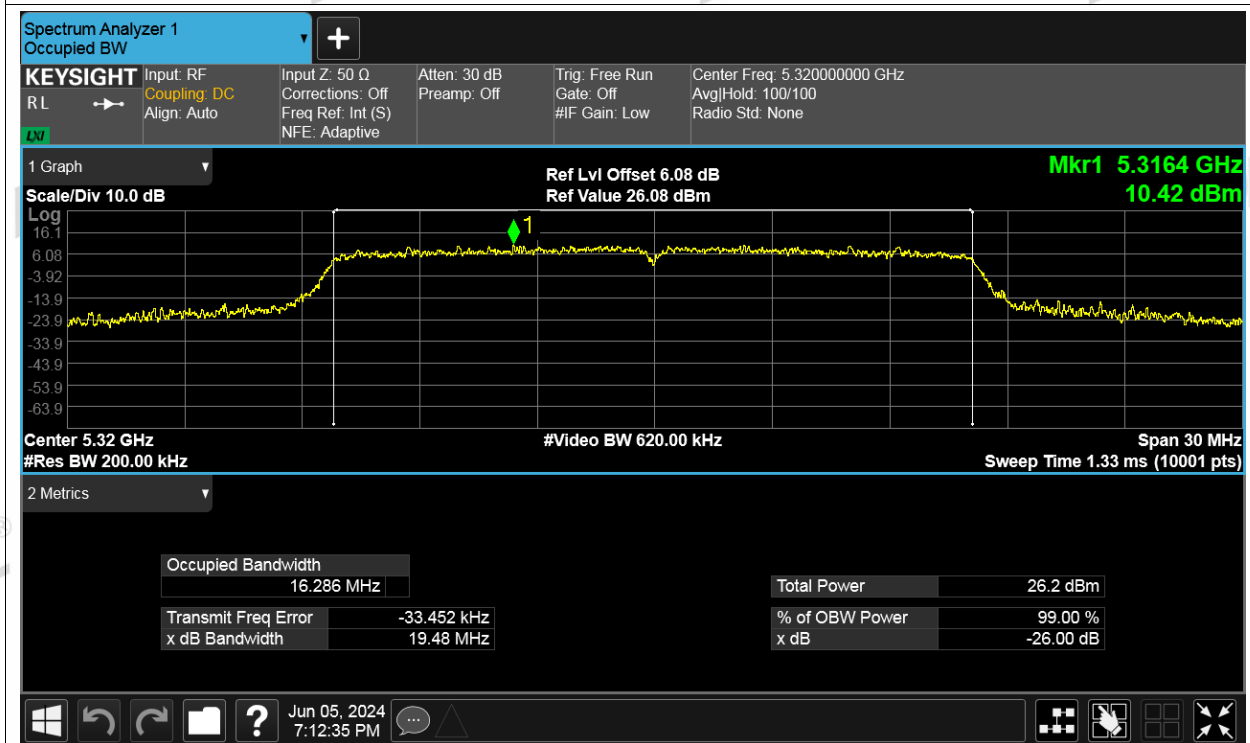 


OBW NVNT a 5500MHz Ant3




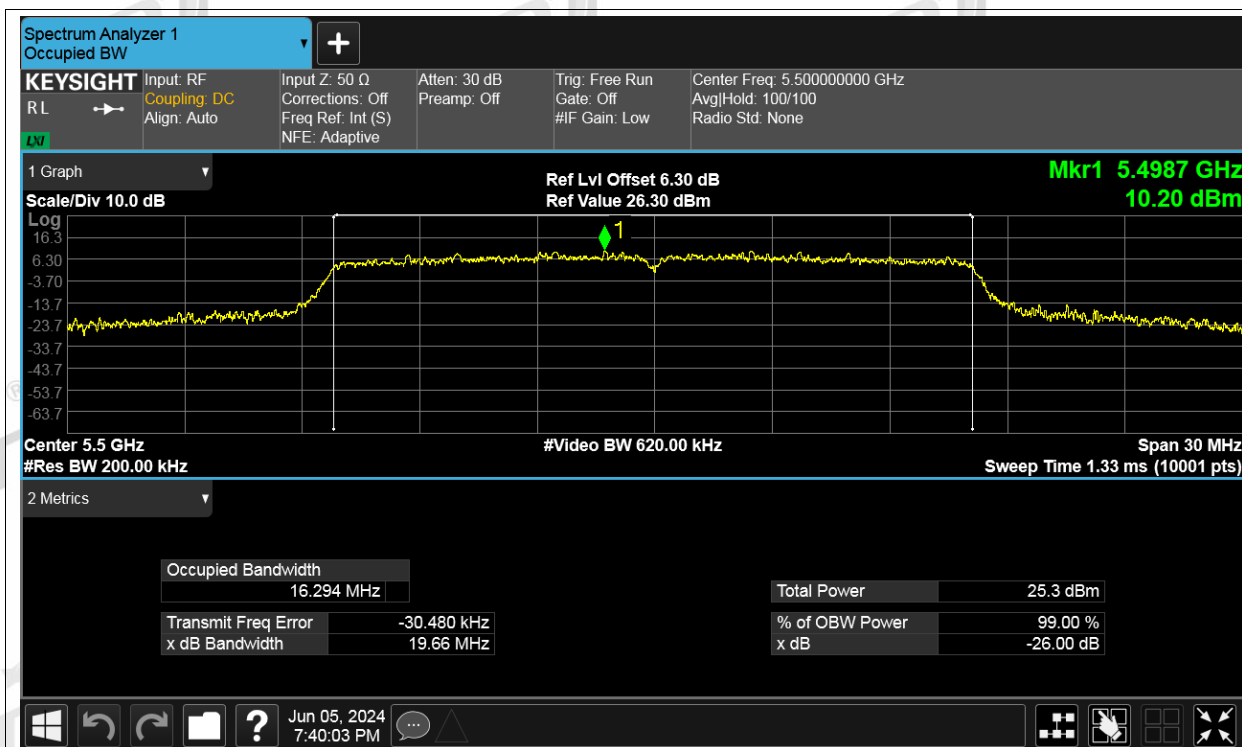 


OBW NVNT a 5580MHz Ant3

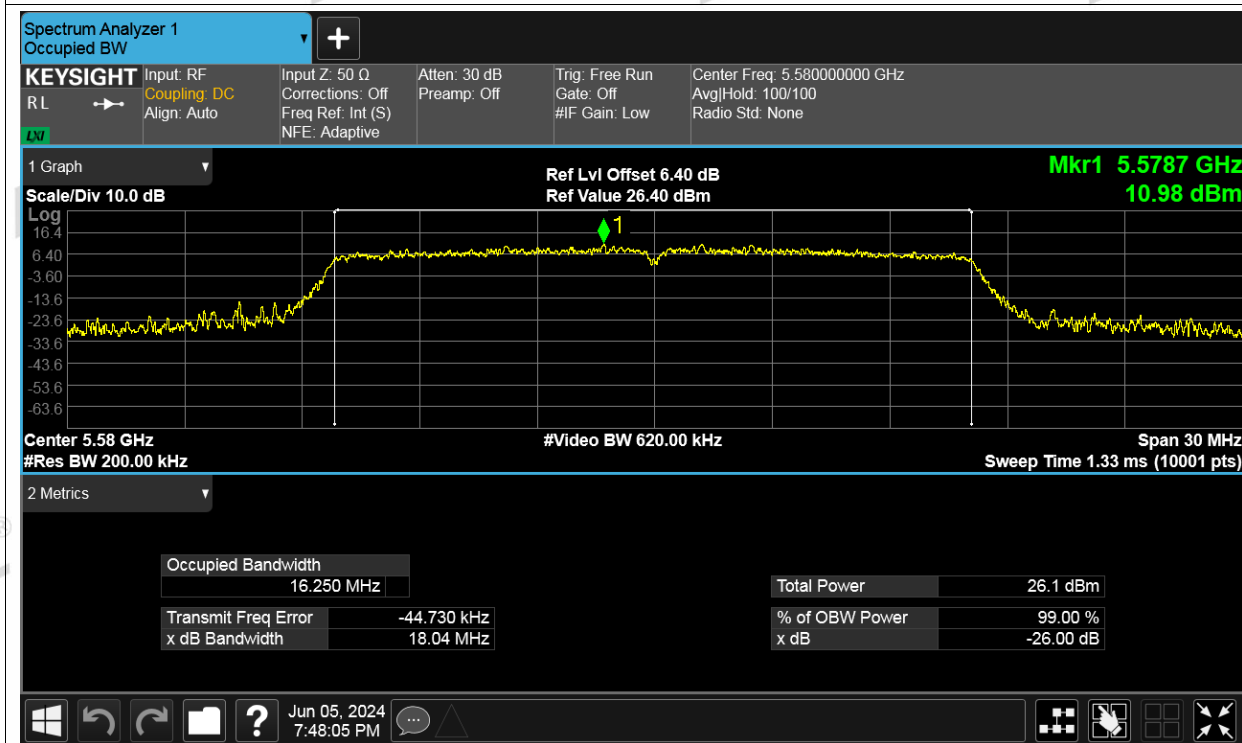 

OBW NVNT a 5700MHz Ant3

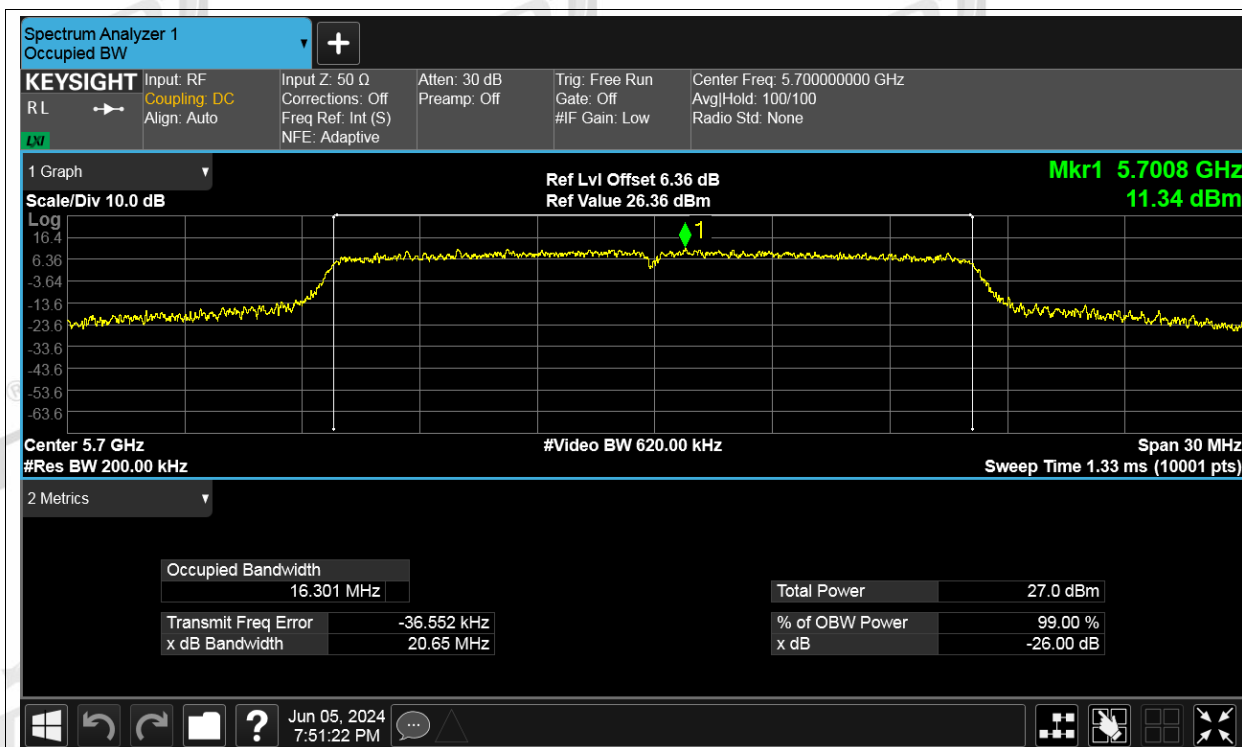 


OBW NVNT a 5745MHz Ant3

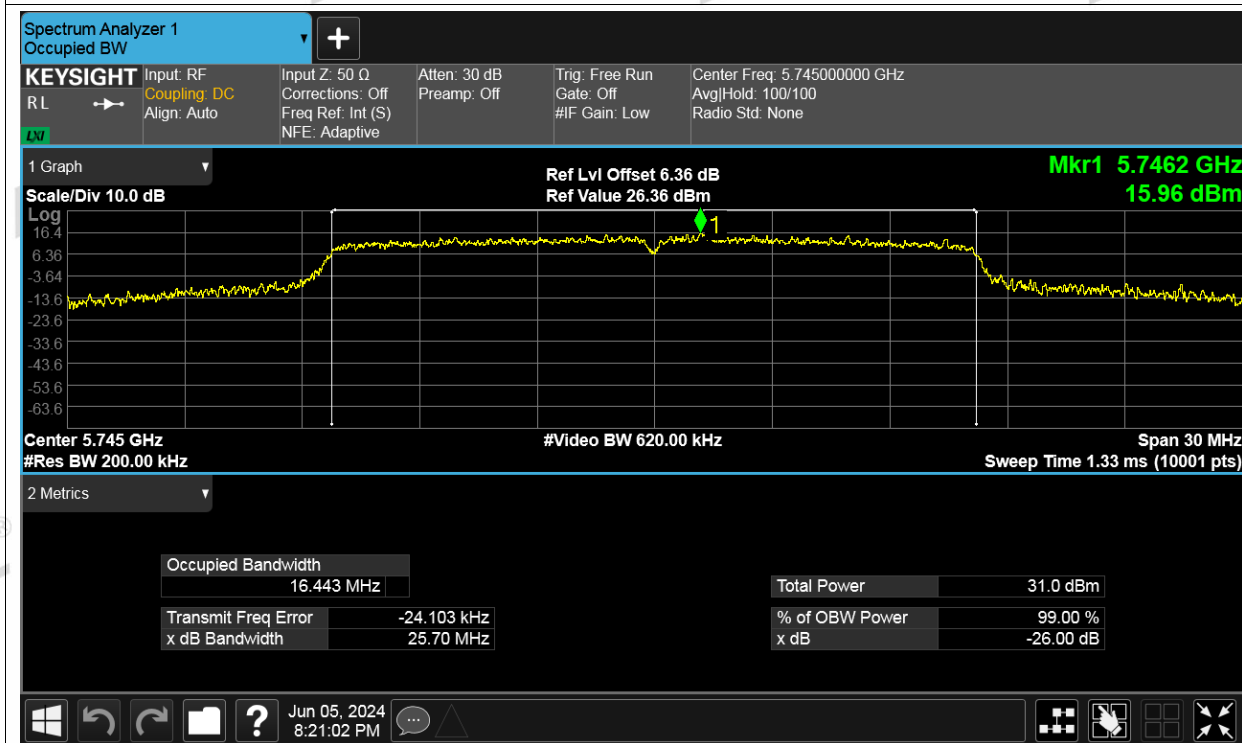 


OBW NVNT a 5785MHz Ant3




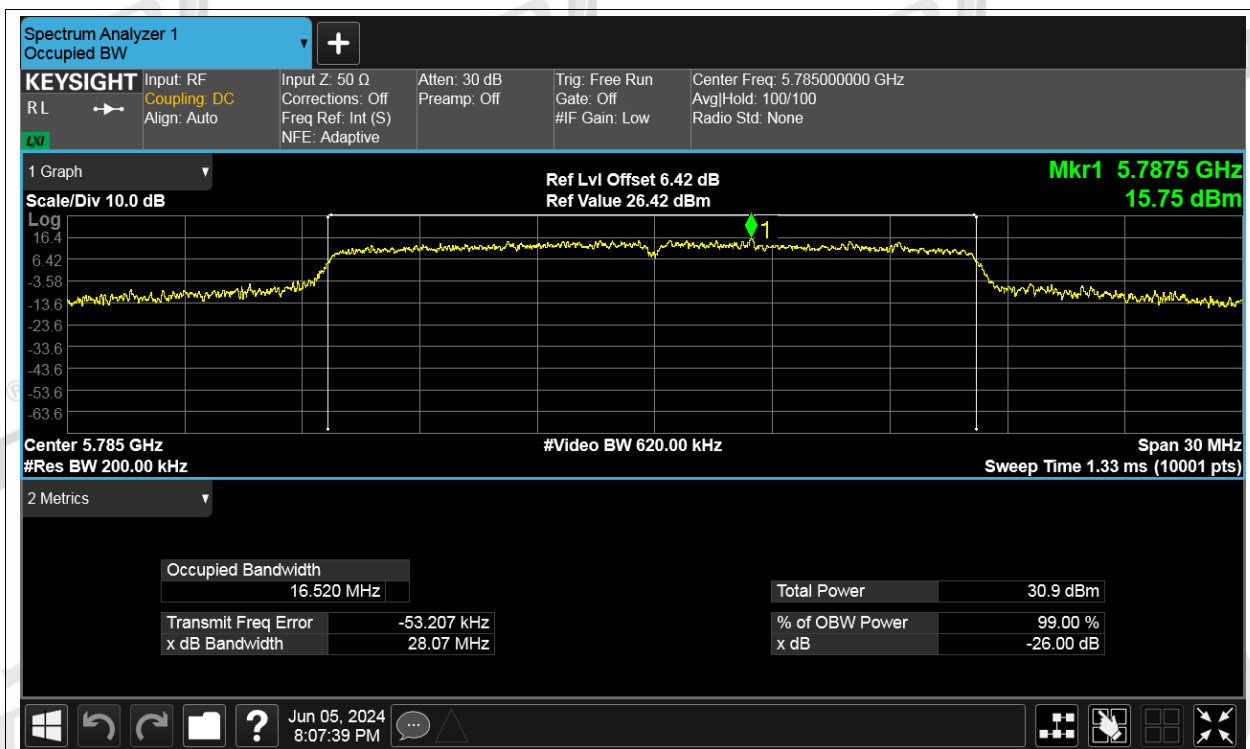 


OBW NVNT a 5825MHz Ant3

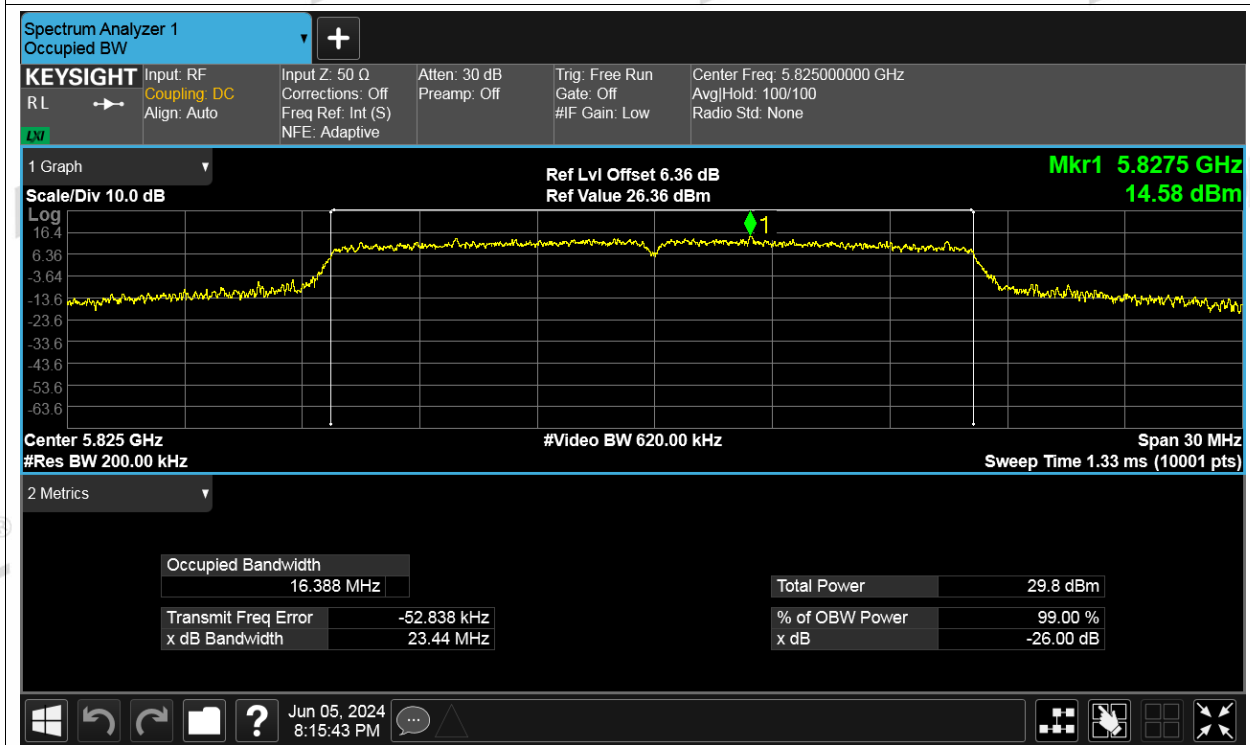 


OBW NVNT ac160 5250MHz Ant1

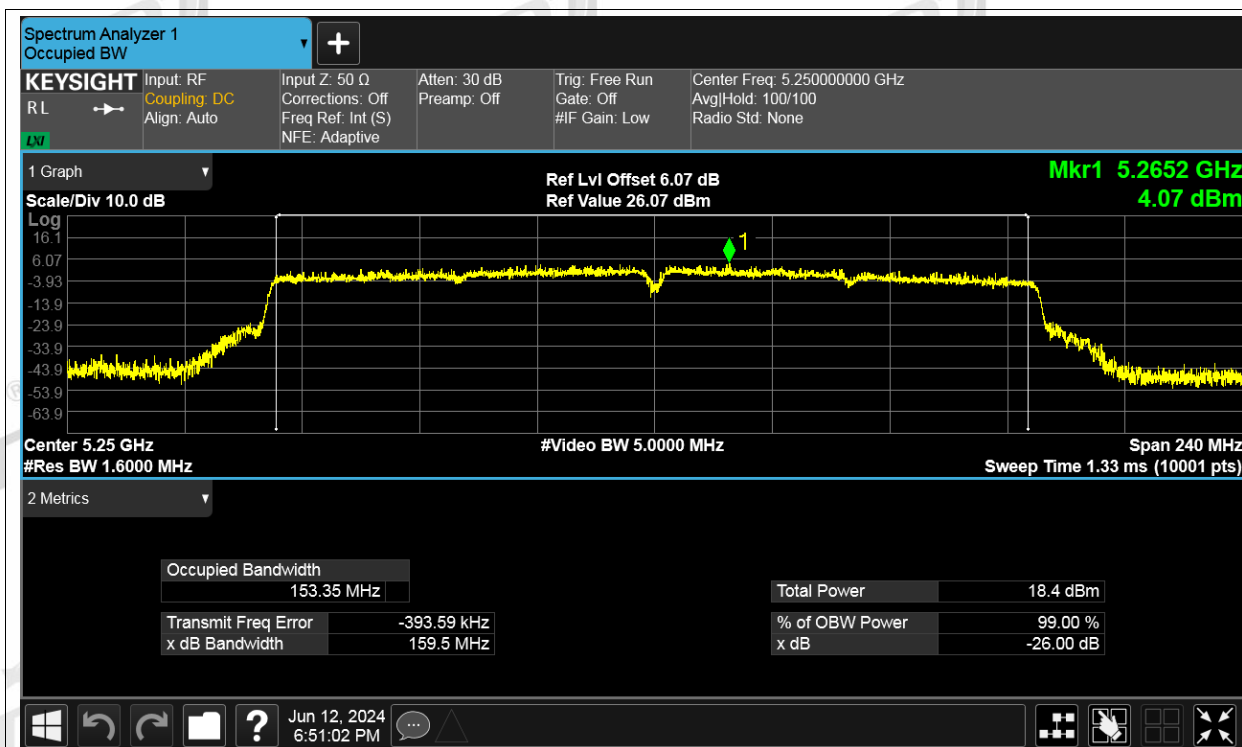 


OBW NVNT ac160 5250MHz Ant2

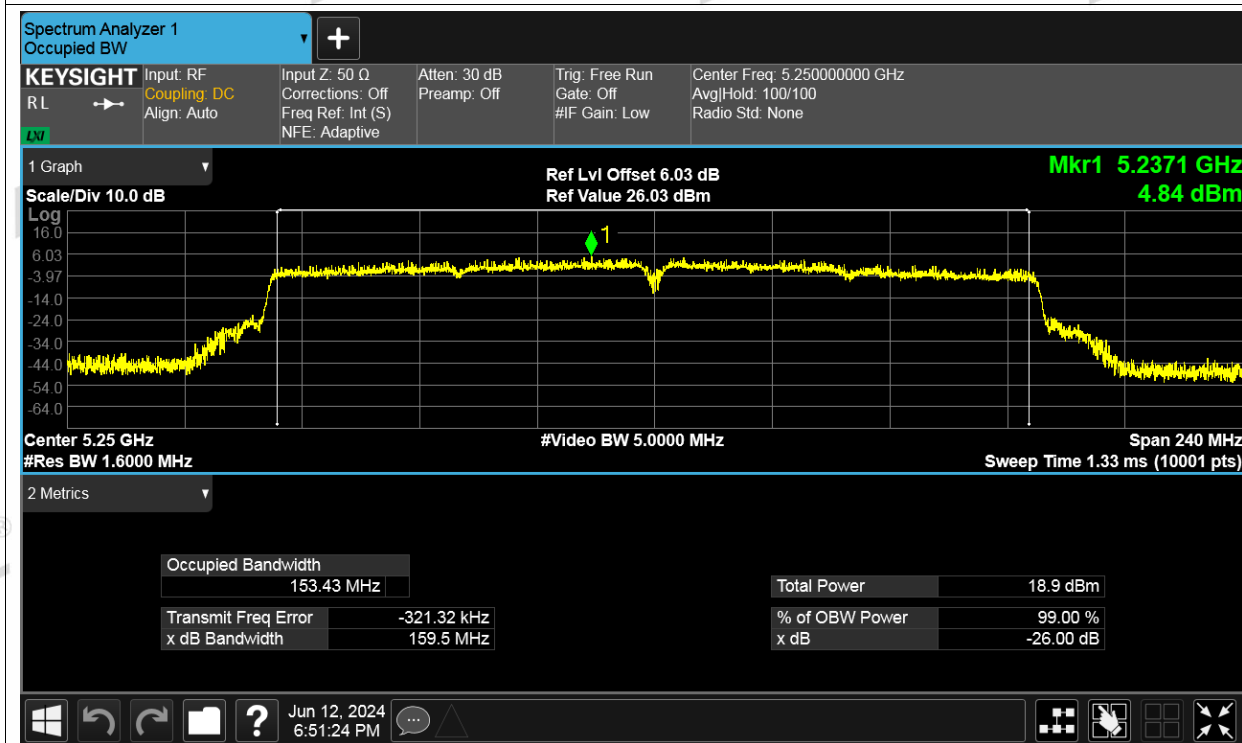 


OBW NVNT ac160 5250MHz Ant3

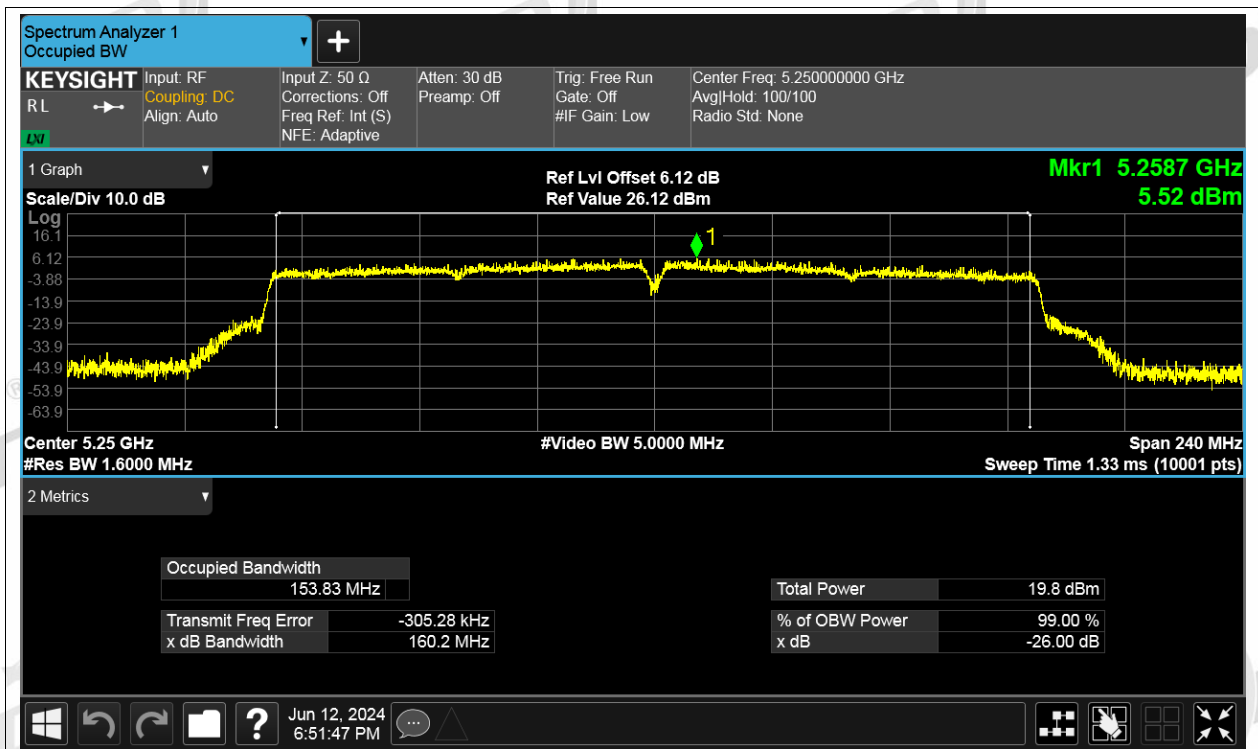 


OBW NVNT ac160 5570MHz Ant1

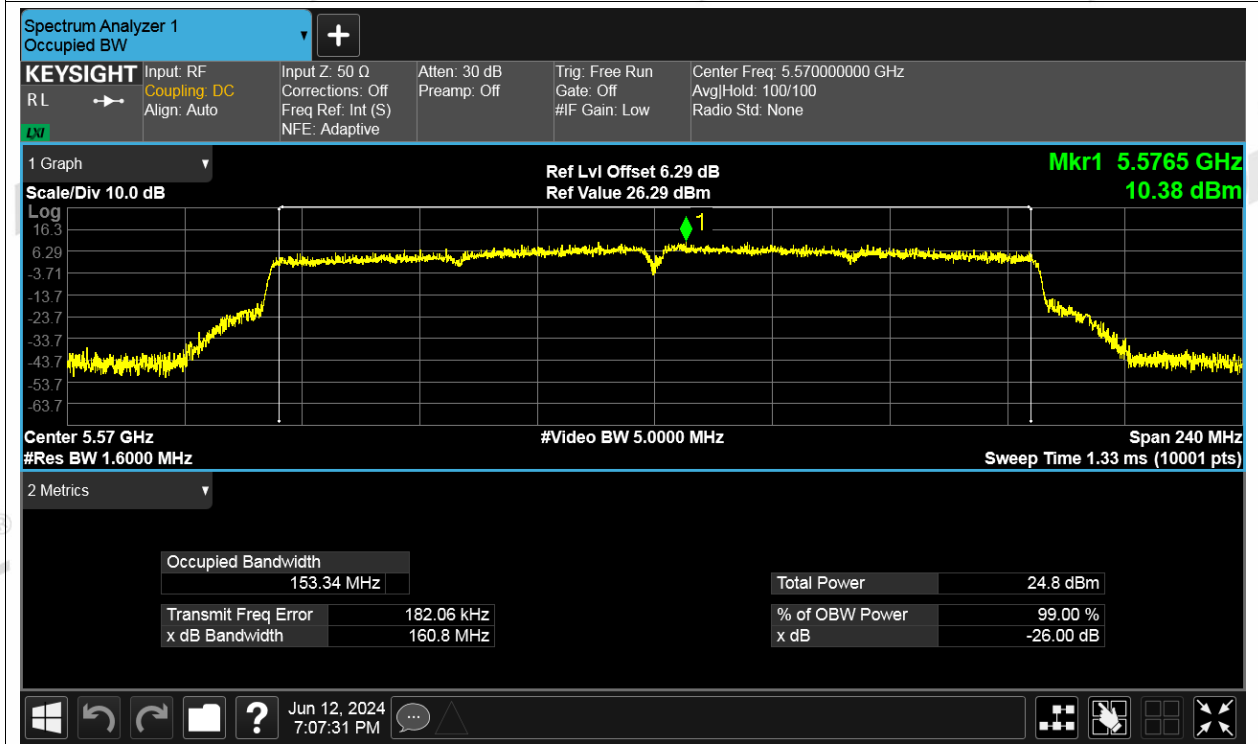 


OBW NVNT ac160 5570MHz Ant2

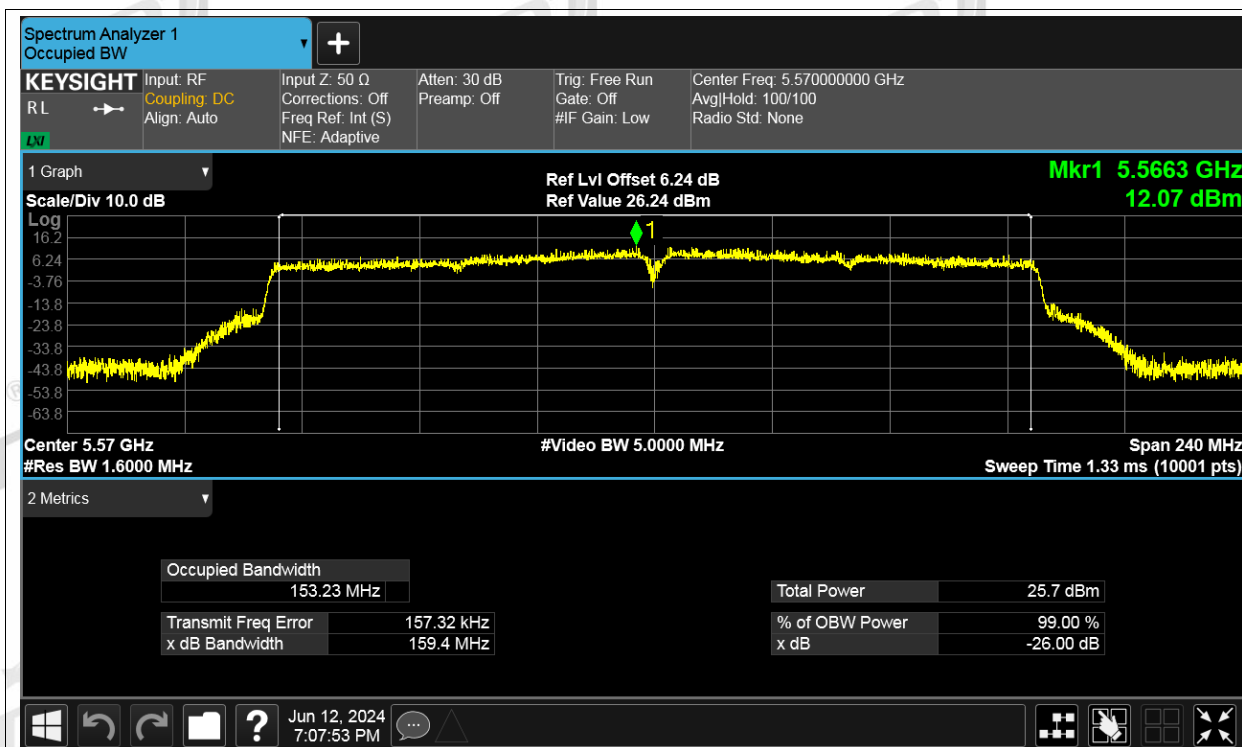 


OBW NVNT ac160 5570MHz Ant3

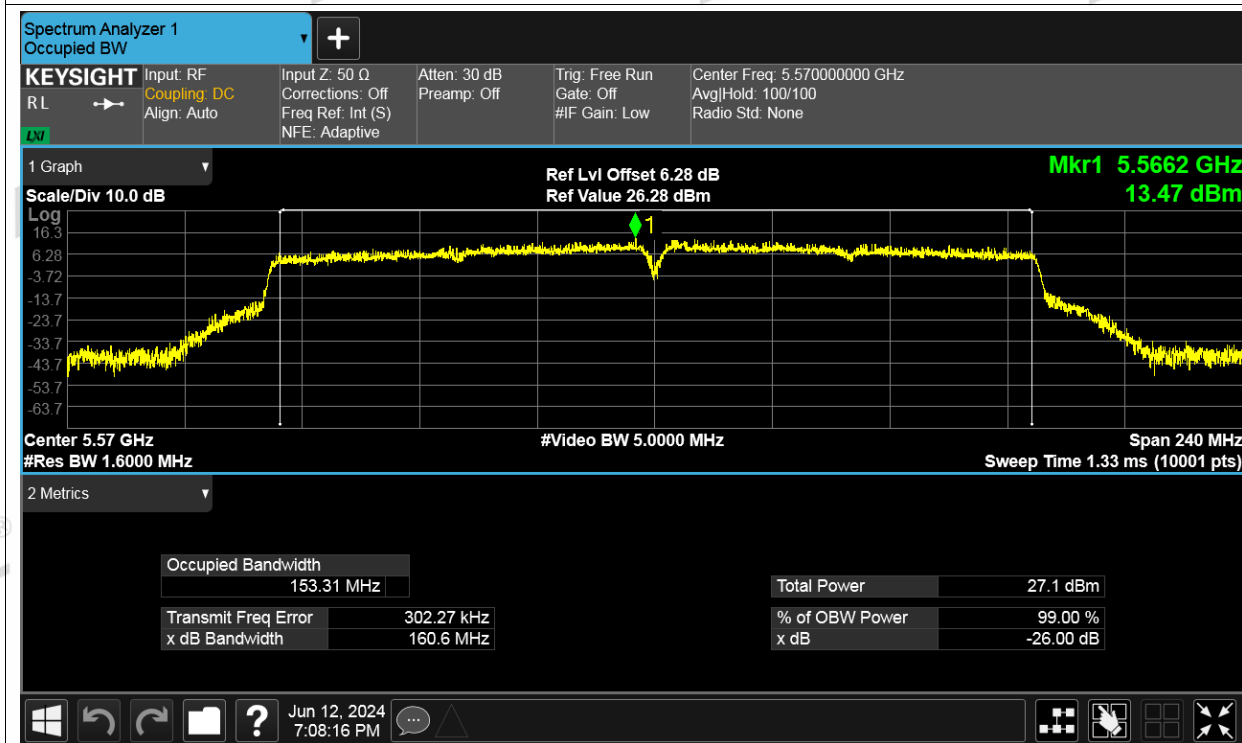 


OBW NVNT ac20 5180MHz Ant1

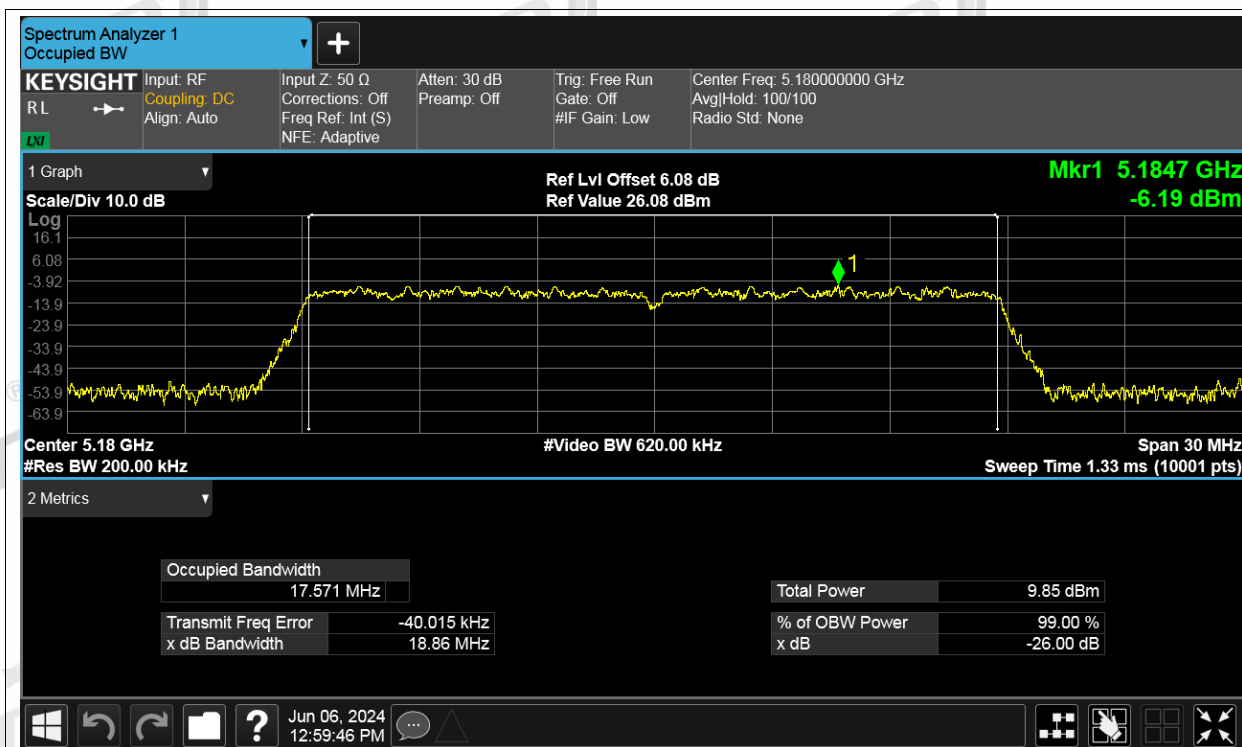 


OBW NVNT ac20 5180MHz Ant2

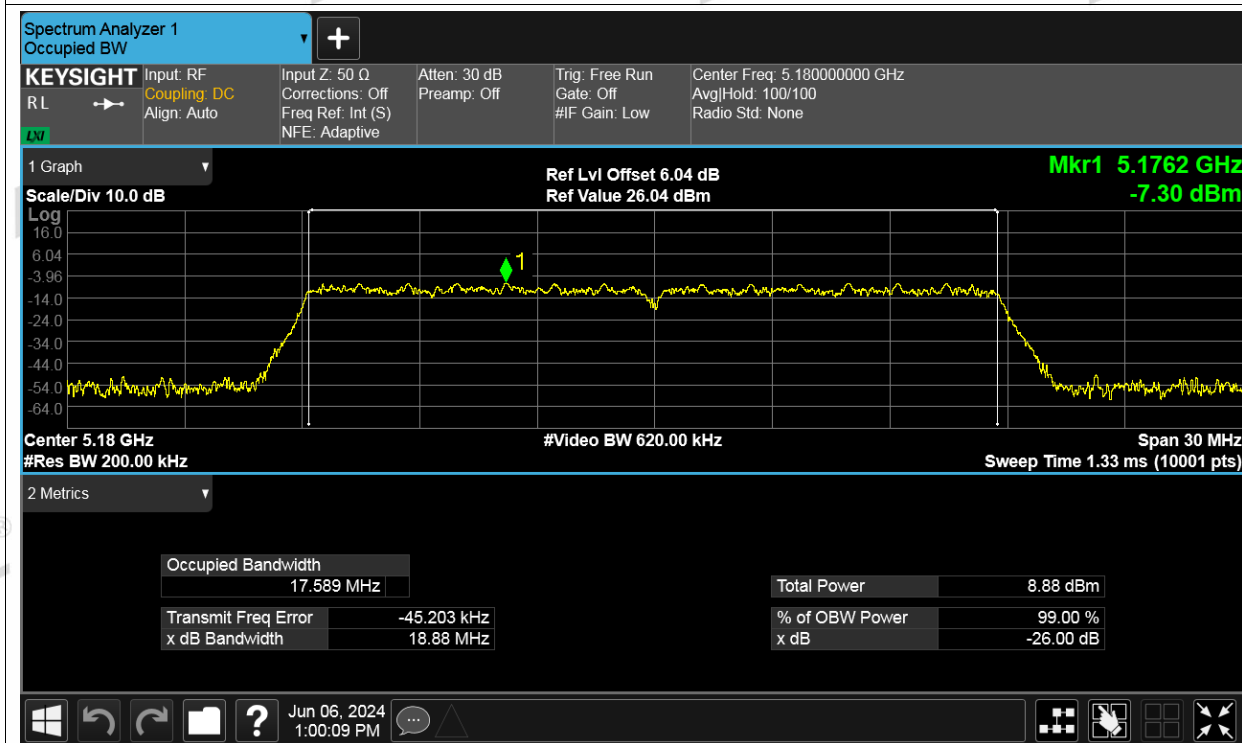 

OBW NVNT ac20 5180MHz Ant3

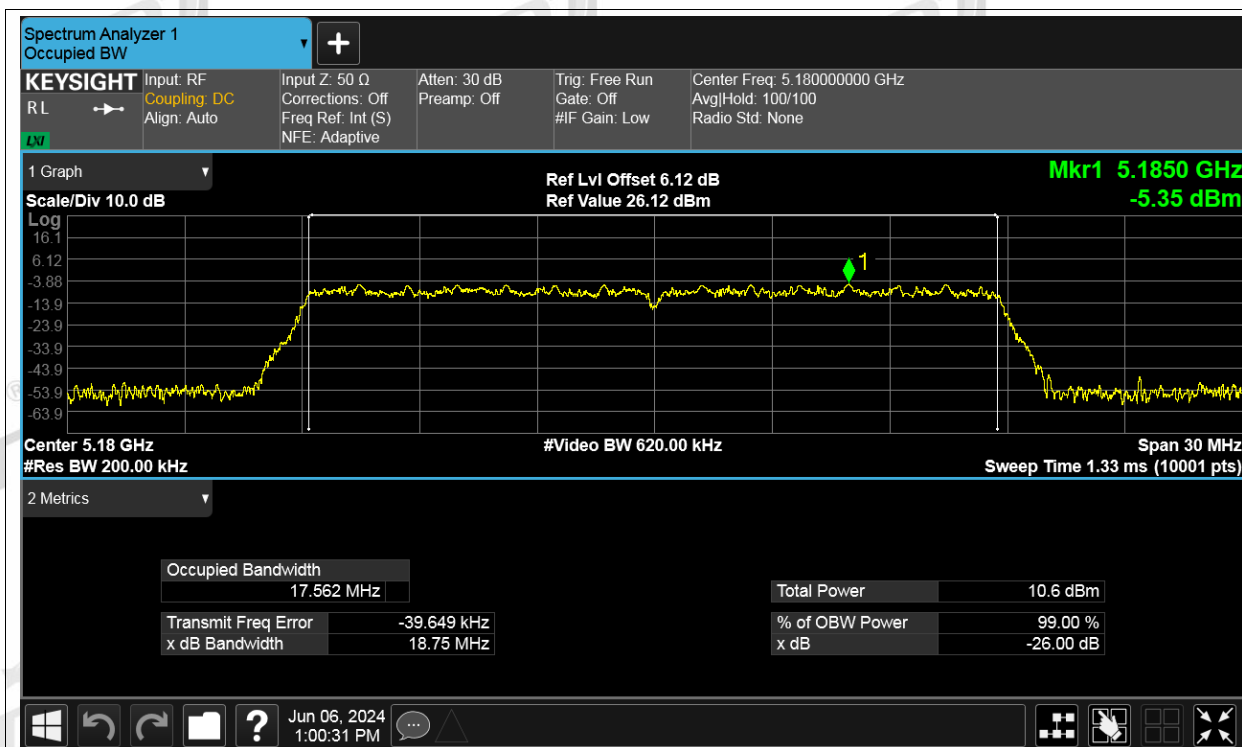 


OBW NVNT ac20 5200MHz Ant1

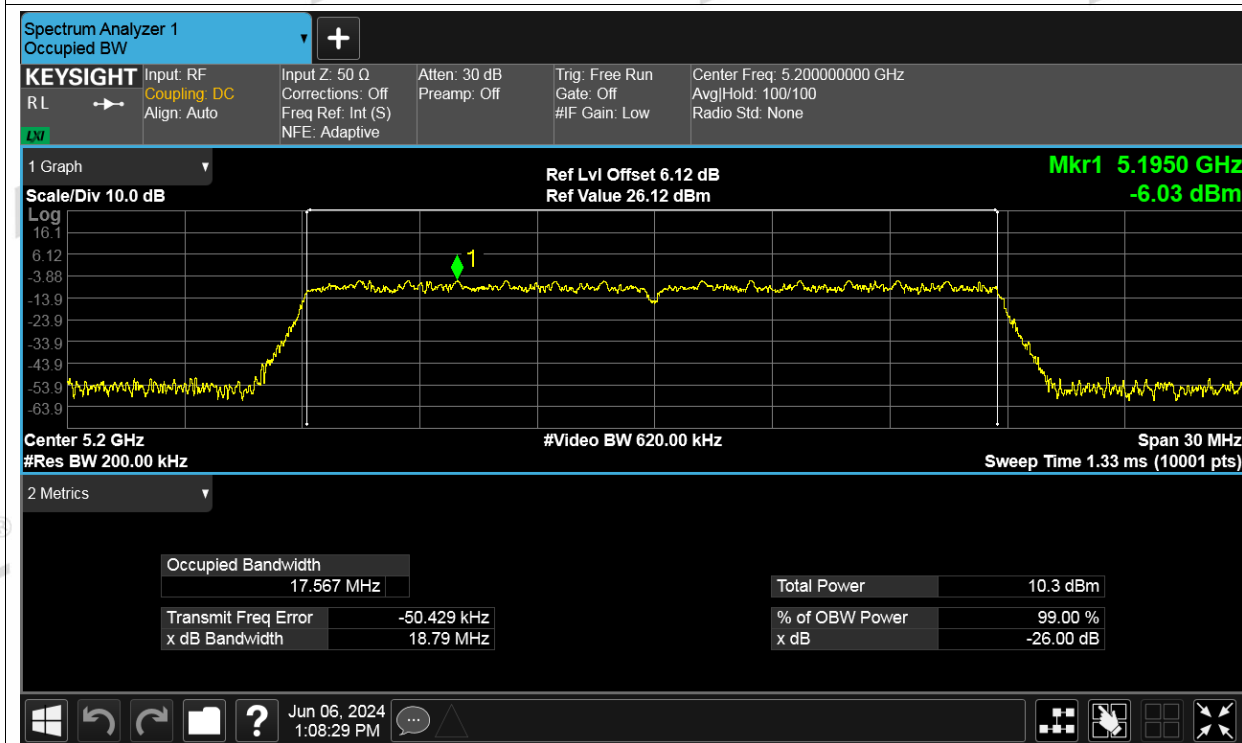 


OBW NVNT ac20 5200MHz Ant2




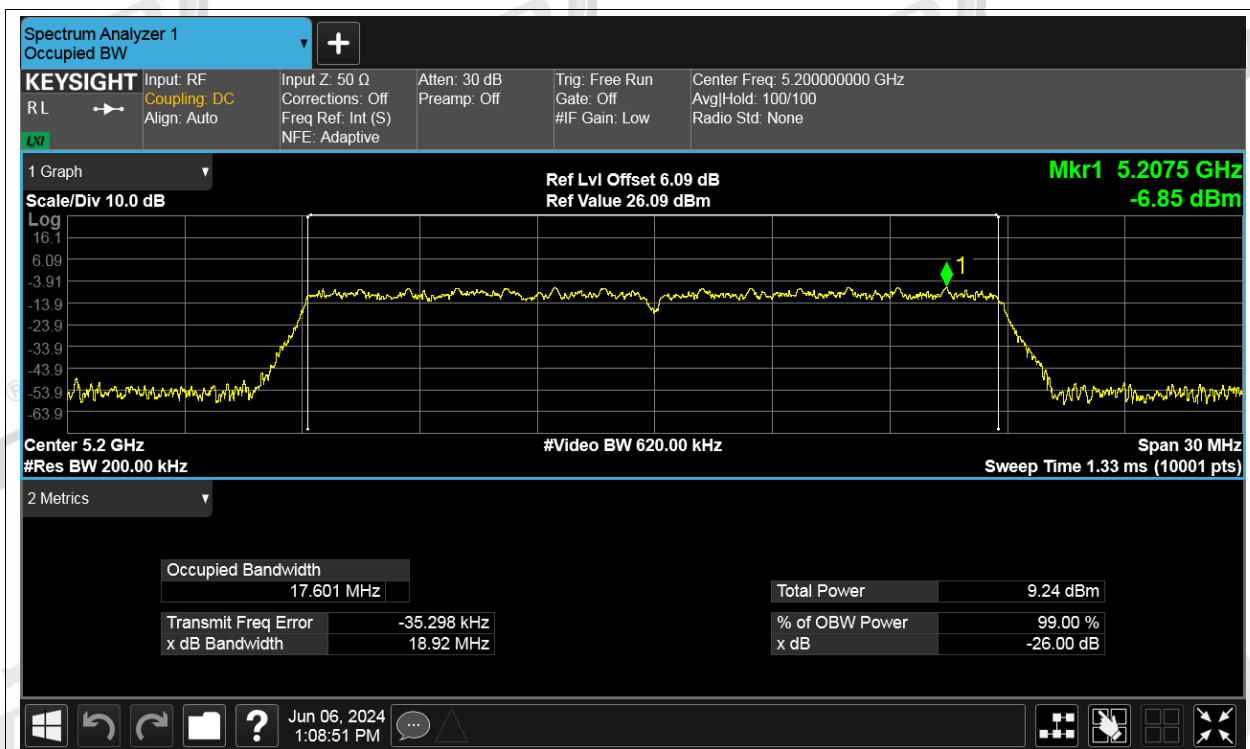 


OBW NVNT ac20 5200MHz Ant3

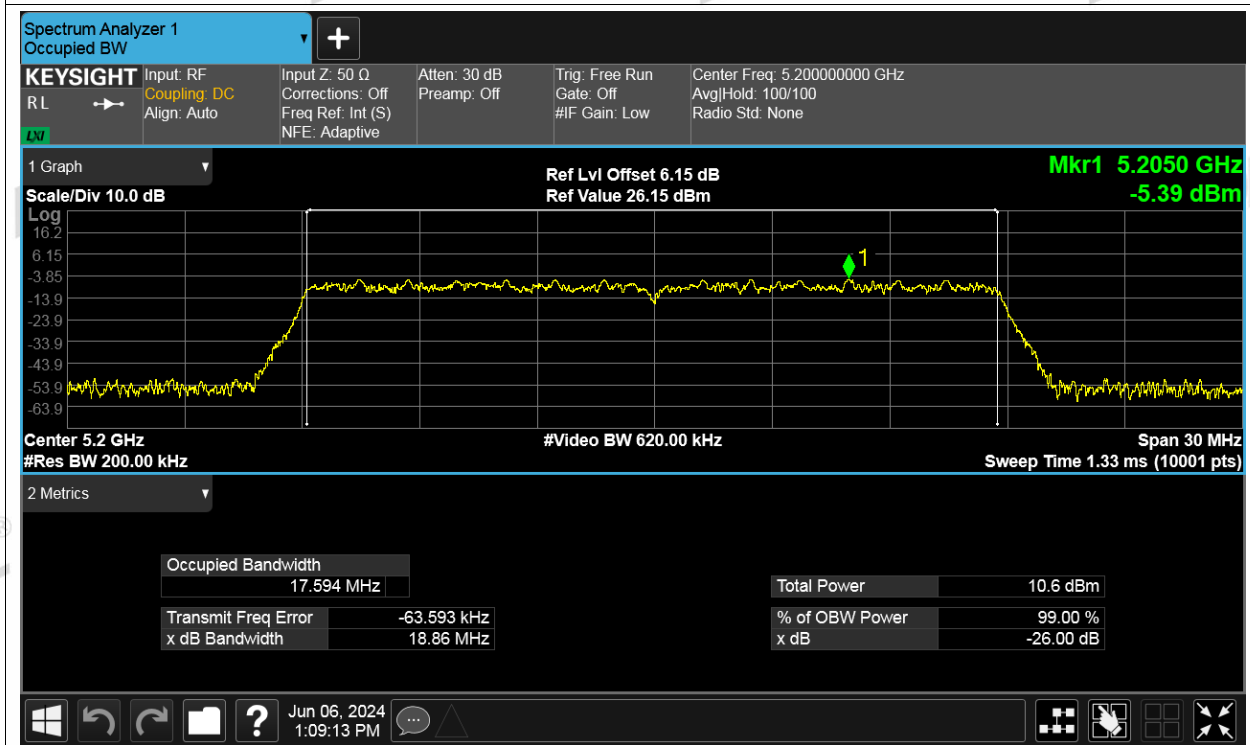 


OBW NVNT ac20 5240MHz Ant1

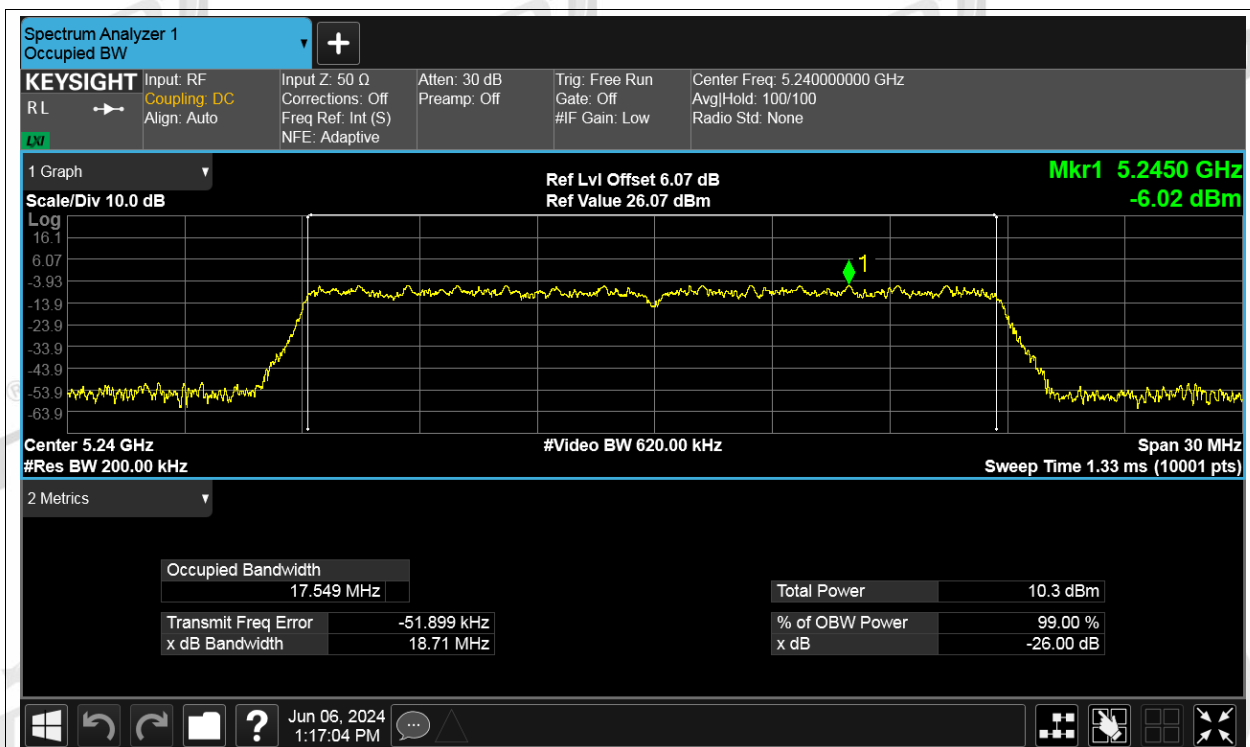 


OBW NVNT ac20 5240MHz Ant2

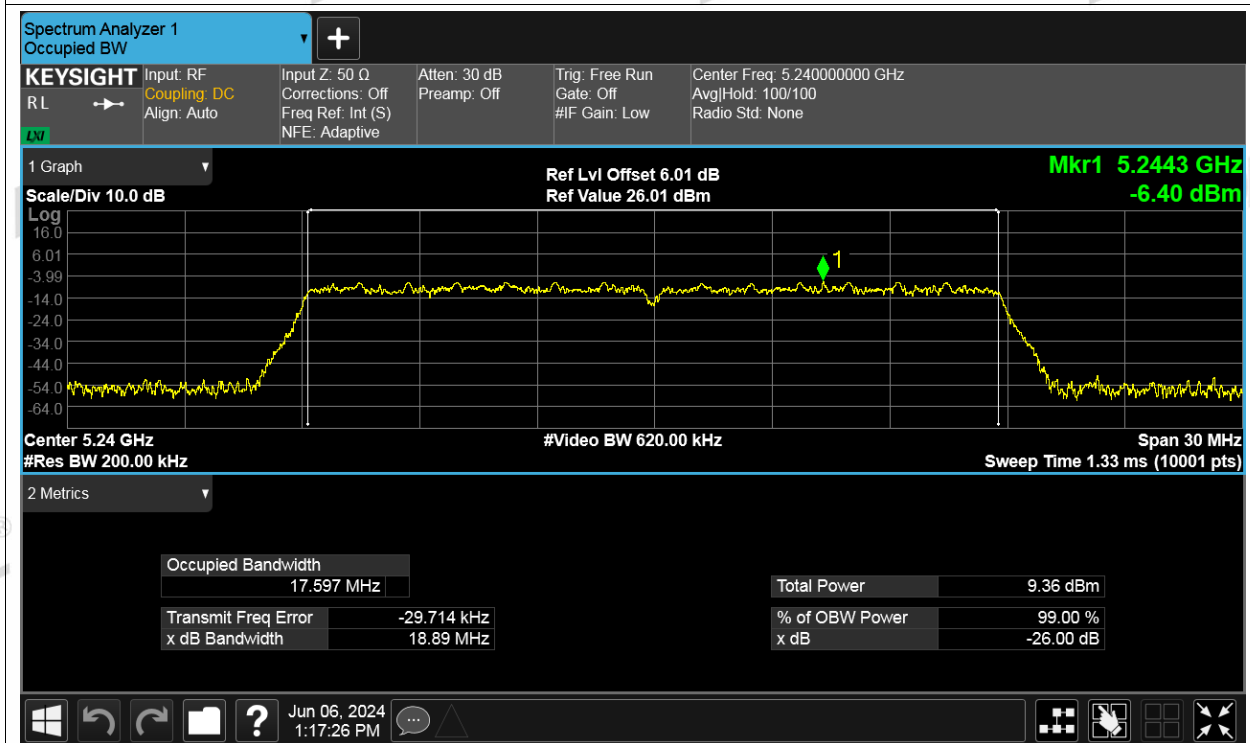 


OBW NVNT ac20 5240MHz Ant3

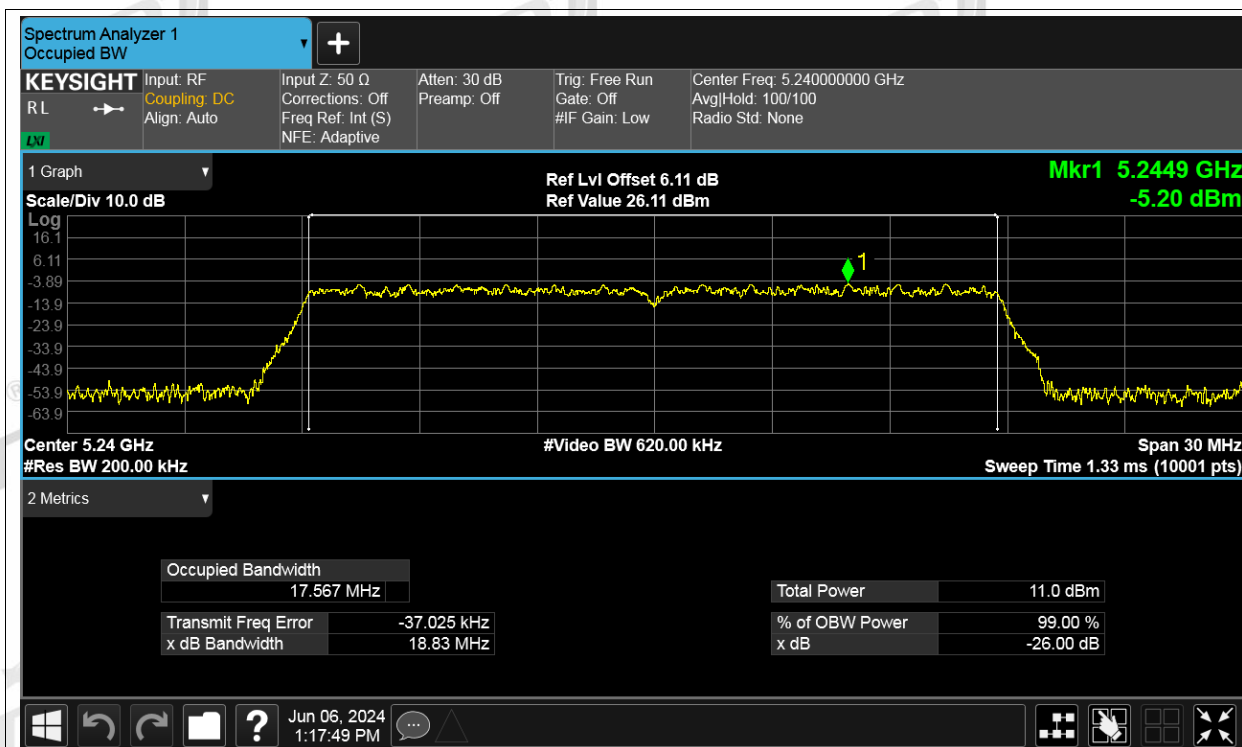 


OBW NVNT ac20 5260MHz Ant1

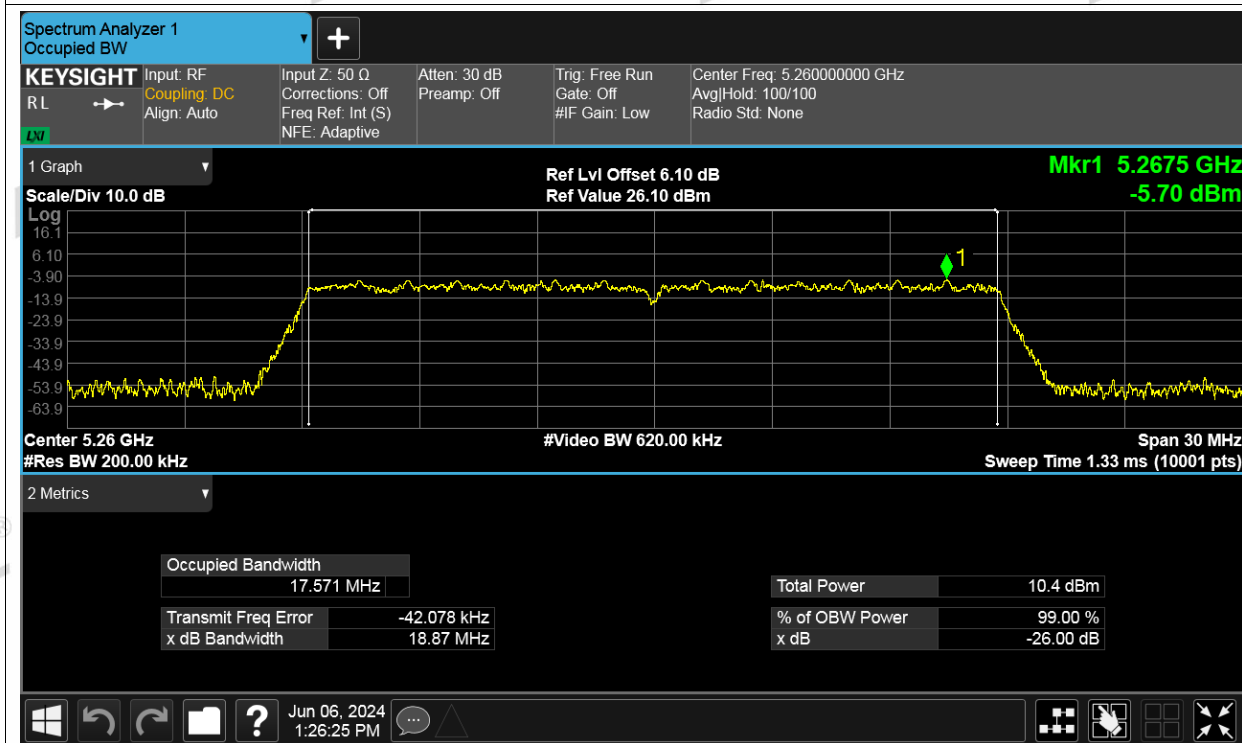 


OBW NVNT ac20 5260MHz Ant2

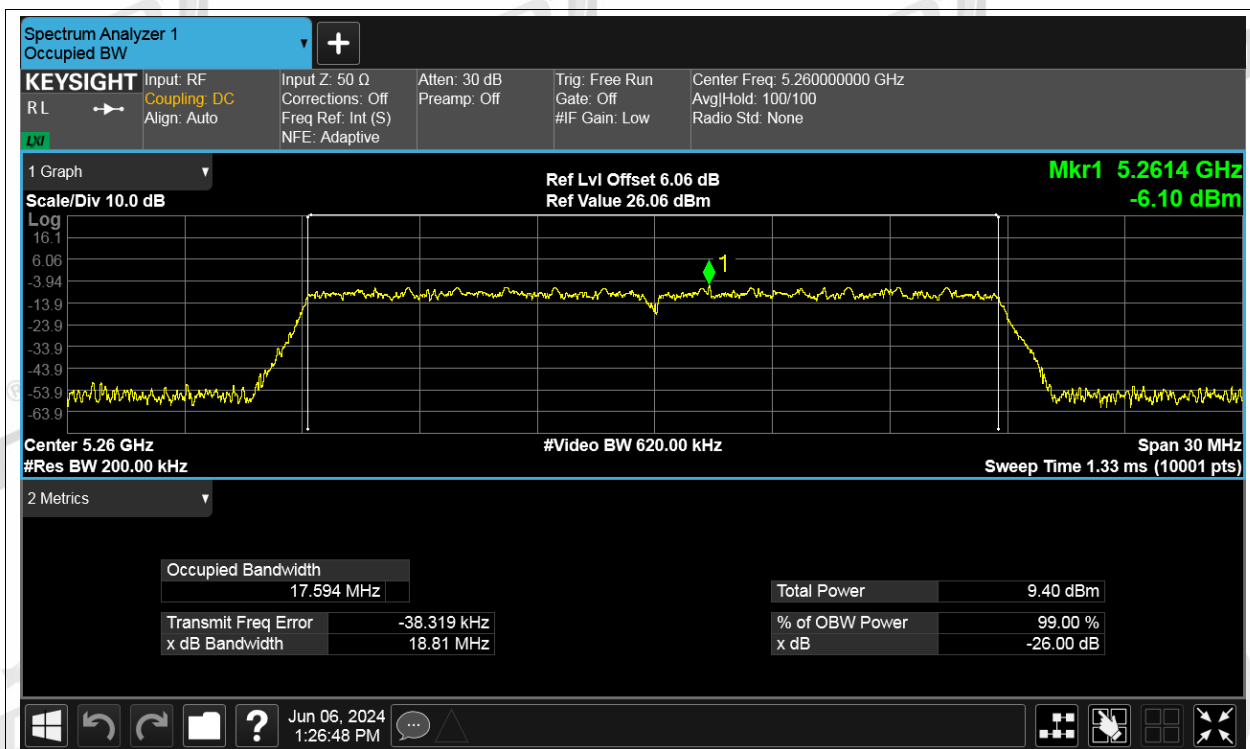 


OBW NVNT ac20 5260MHz Ant3

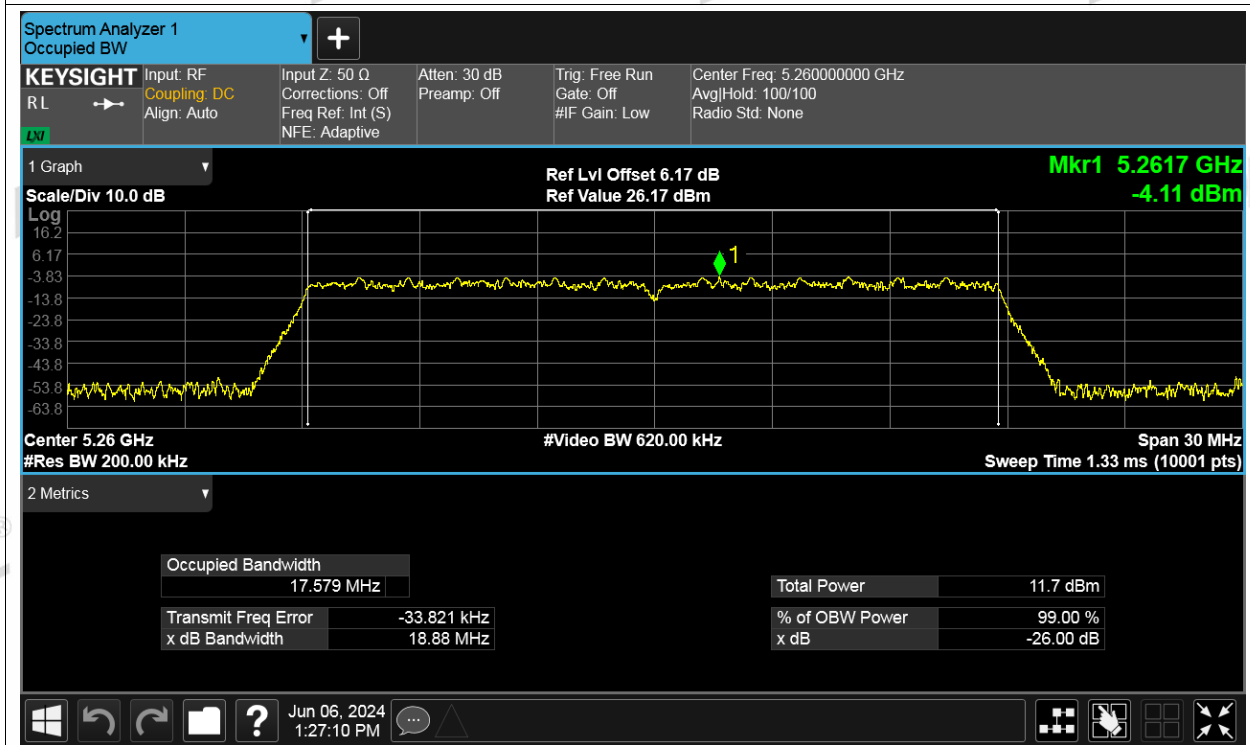 


OBW NVNT ac20 5280MHz Ant1

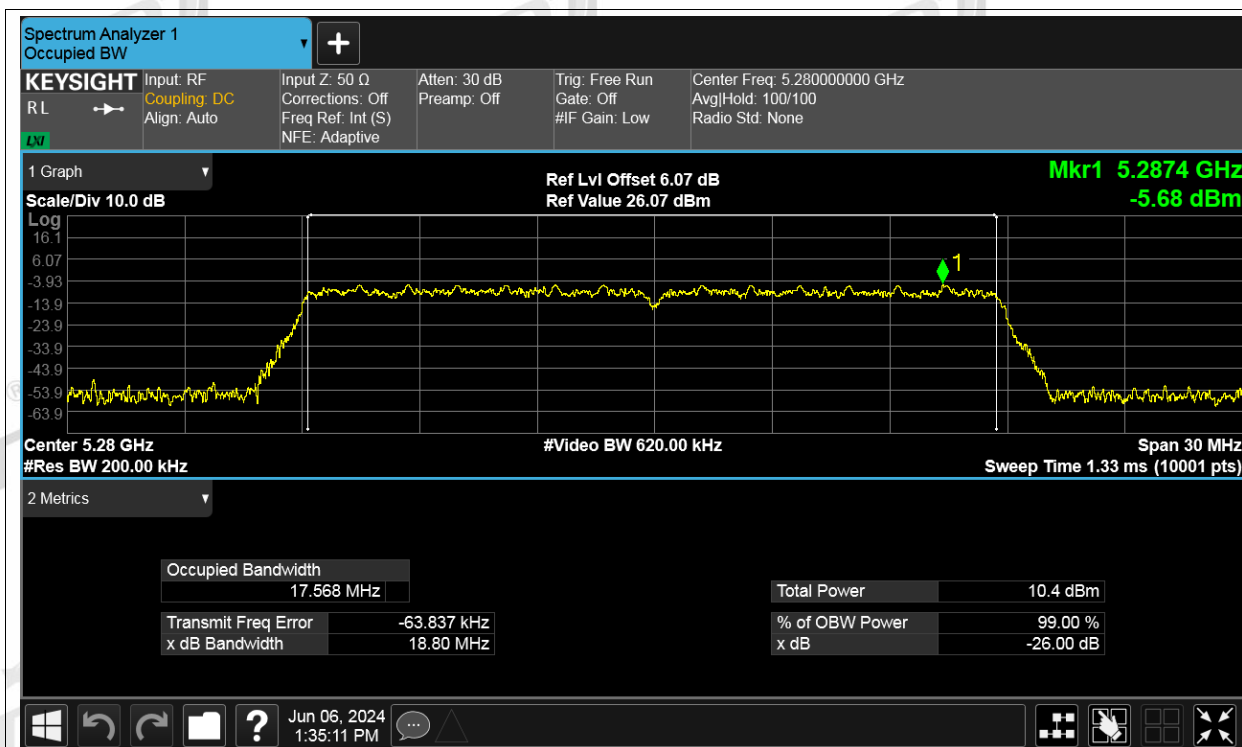 


OBW NVNT ac20 5280MHz Ant2

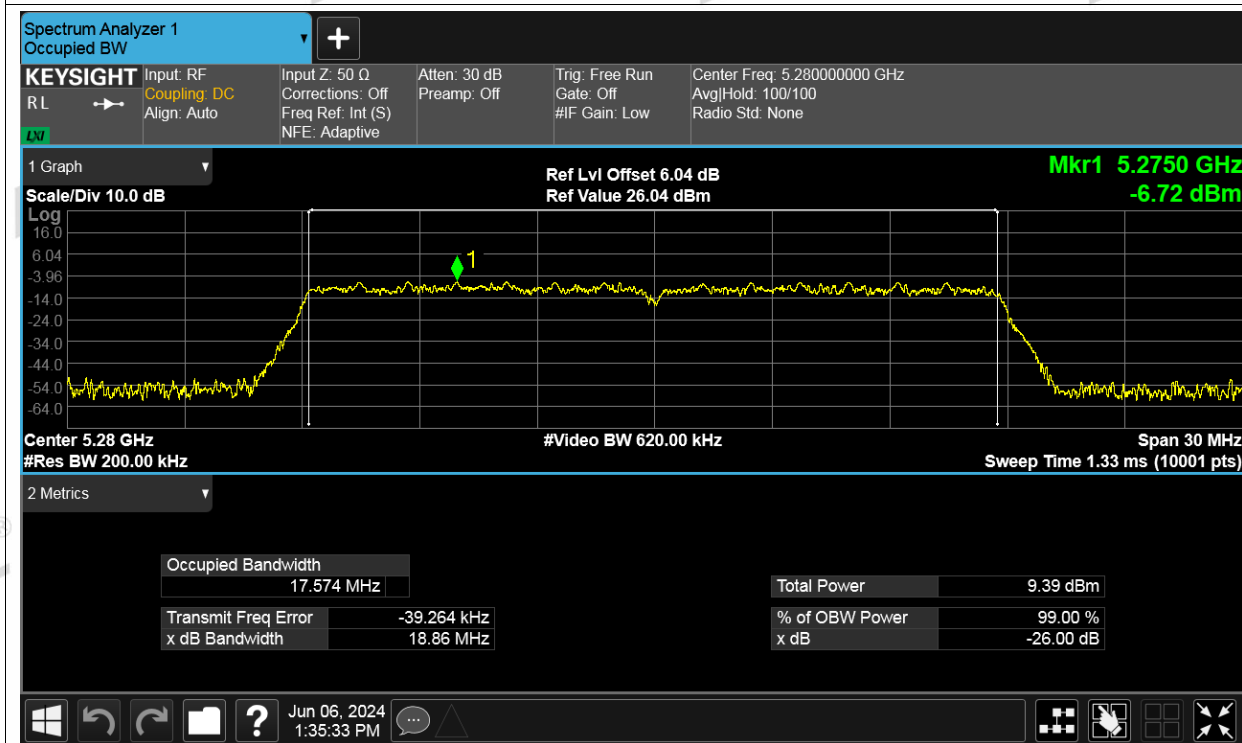 

OBW NVNT ac20 5280MHz Ant3

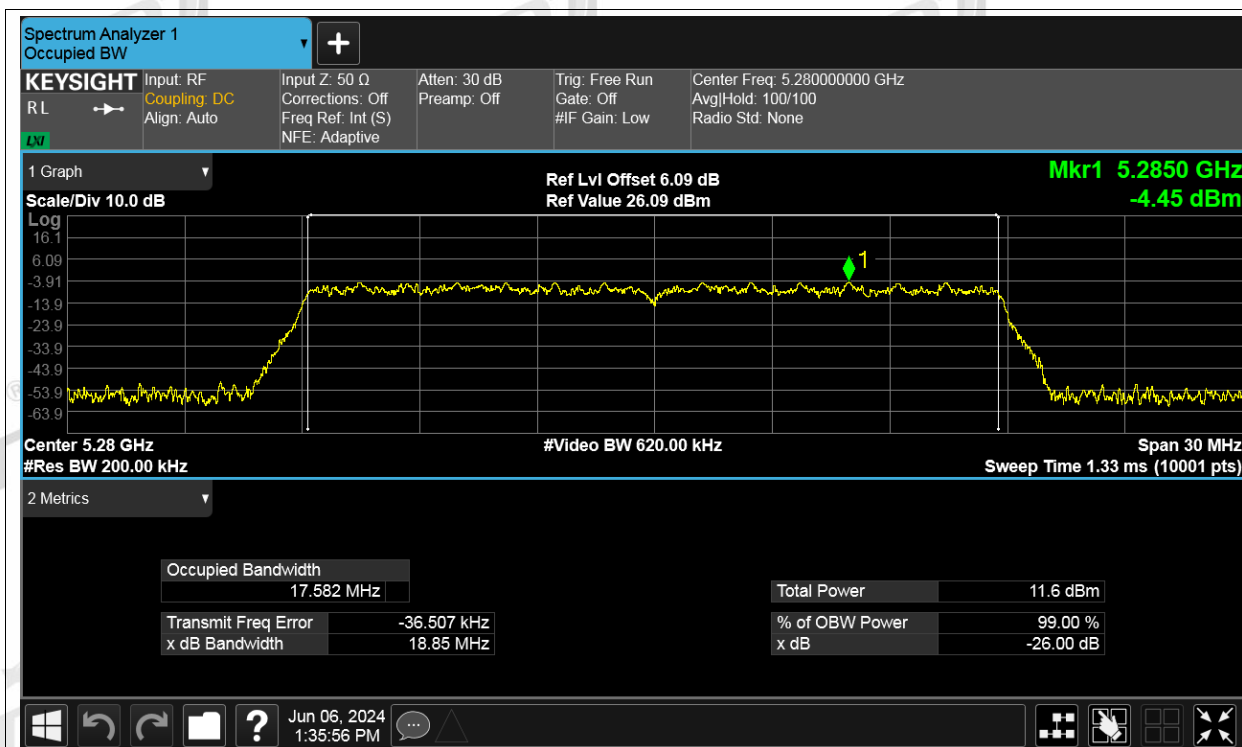 


OBW NVNT ac20 5320MHz Ant1

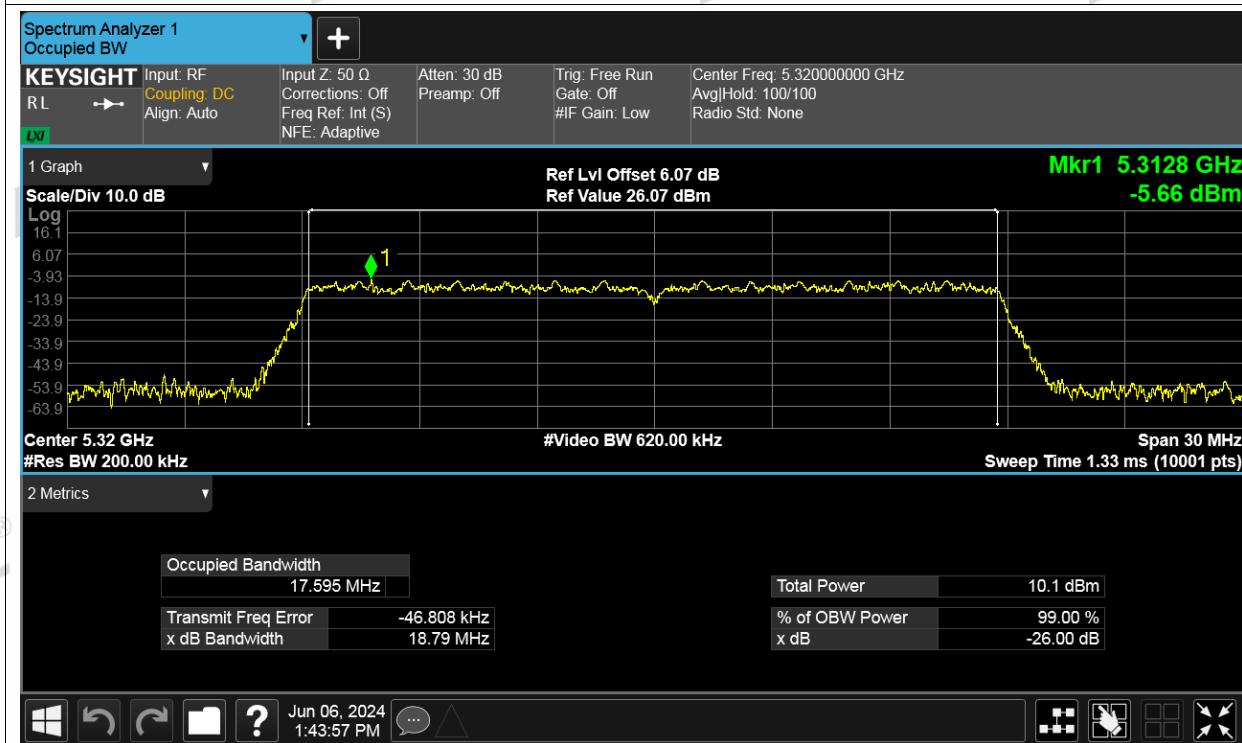 


OBW NVNT ac20 5320MHz Ant2




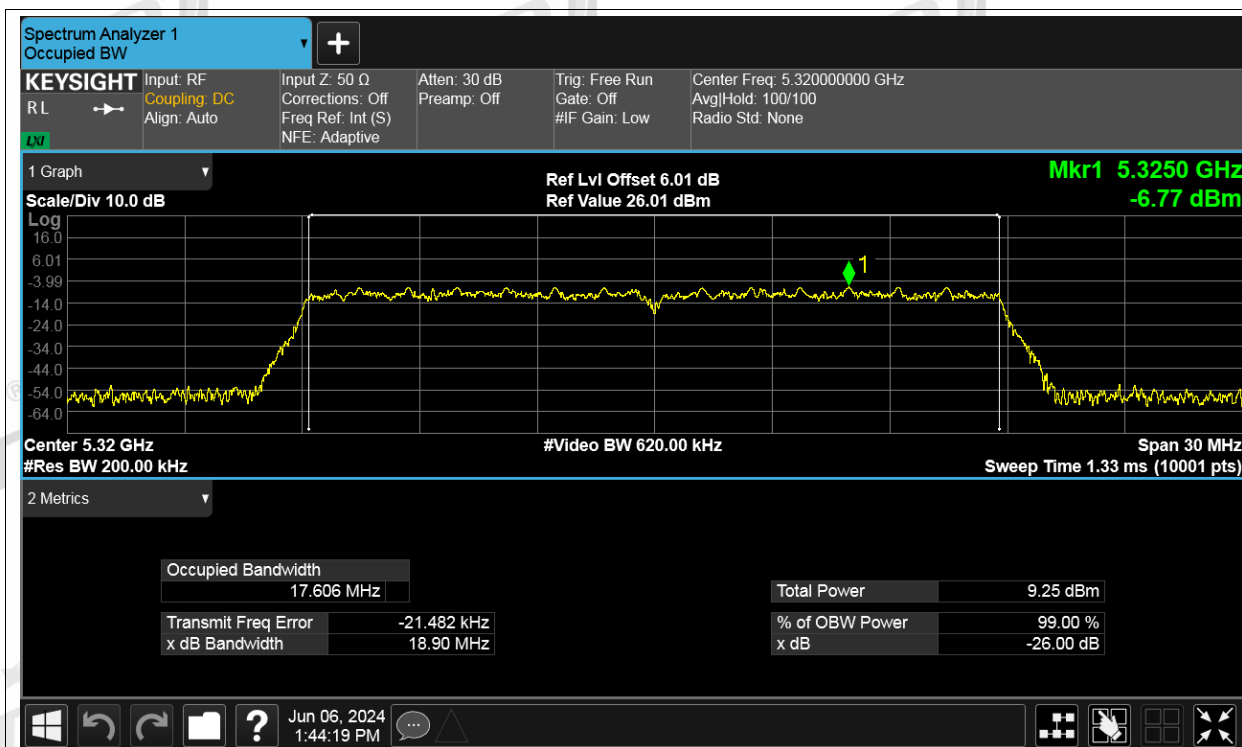 


OBW NVNT ac20 5320MHz Ant3

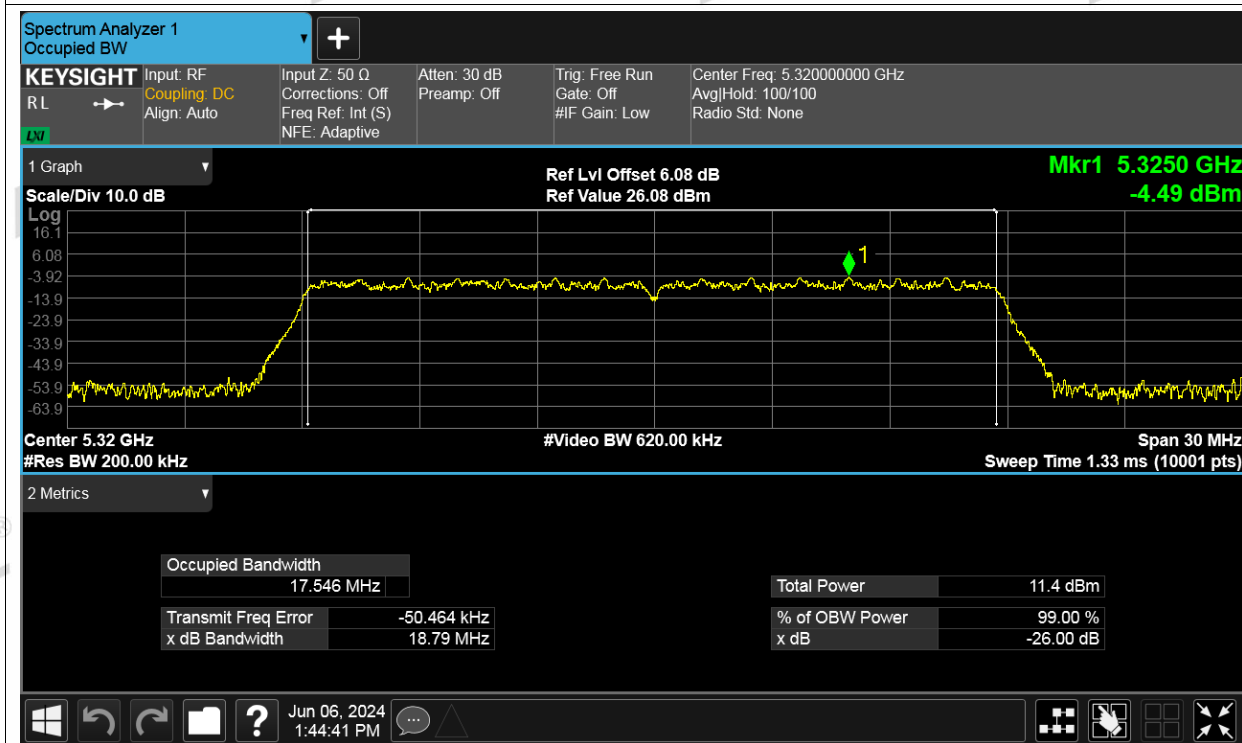 


OBW NVNT ac20 5500MHz Ant1

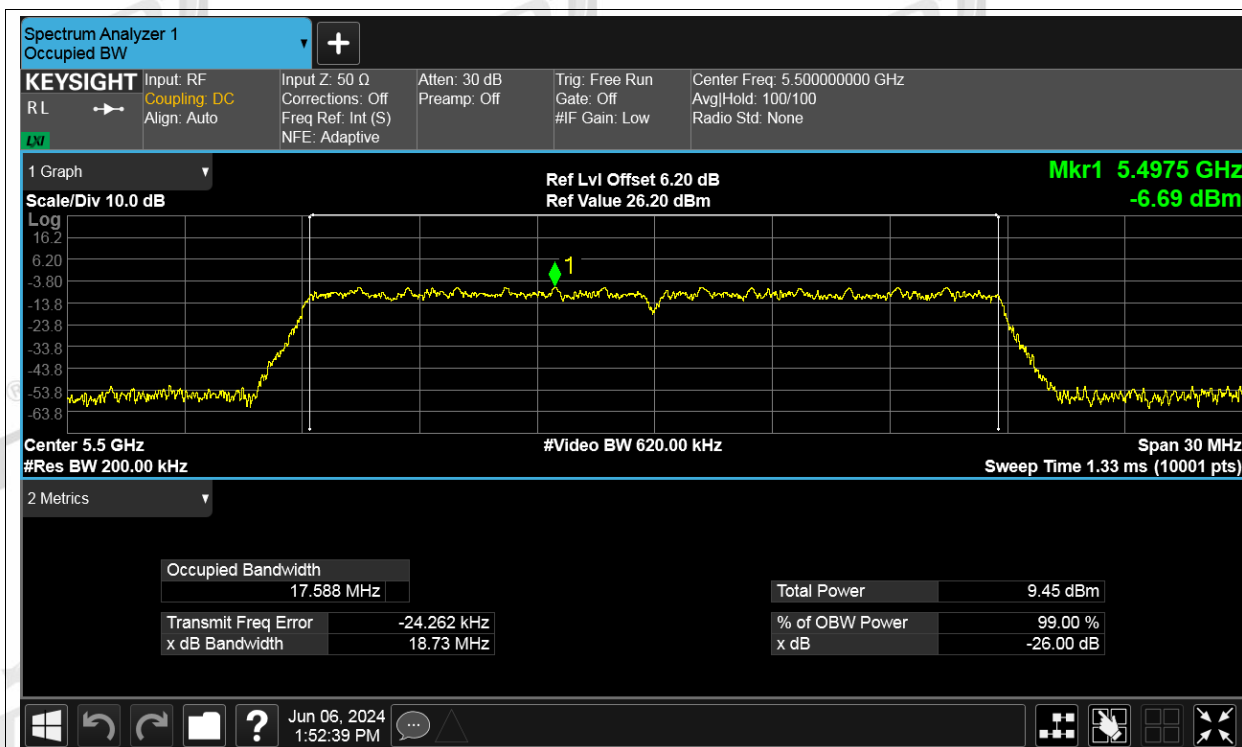 


OBW NVNT ac20 5500MHz Ant2

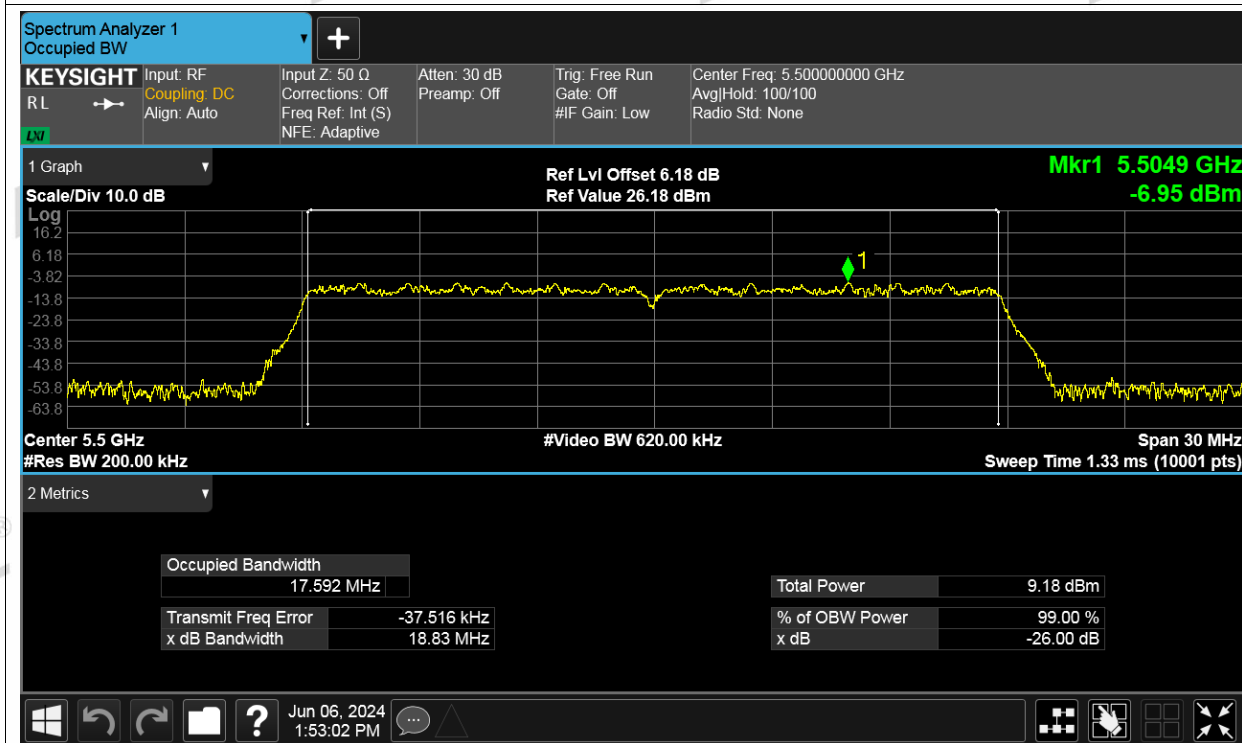 


OBW NVNT ac20 5500MHz Ant3

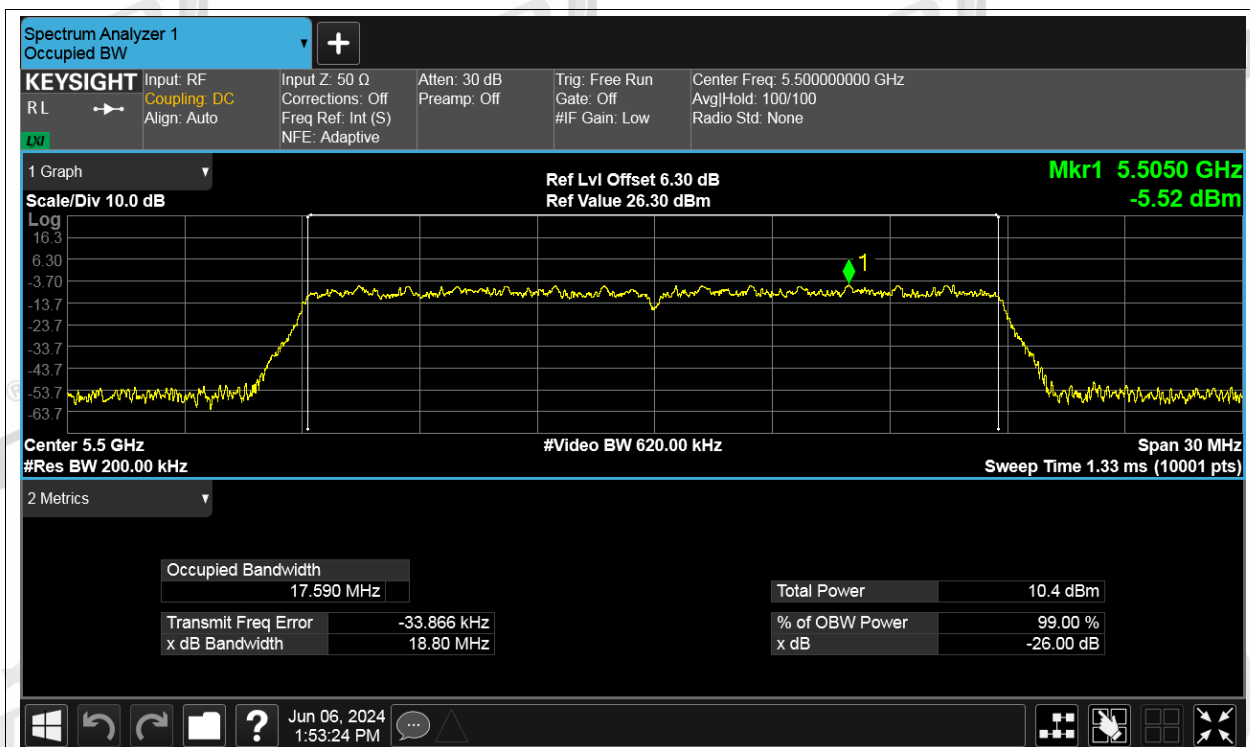 


OBW NVNT ac20 5580MHz Ant1

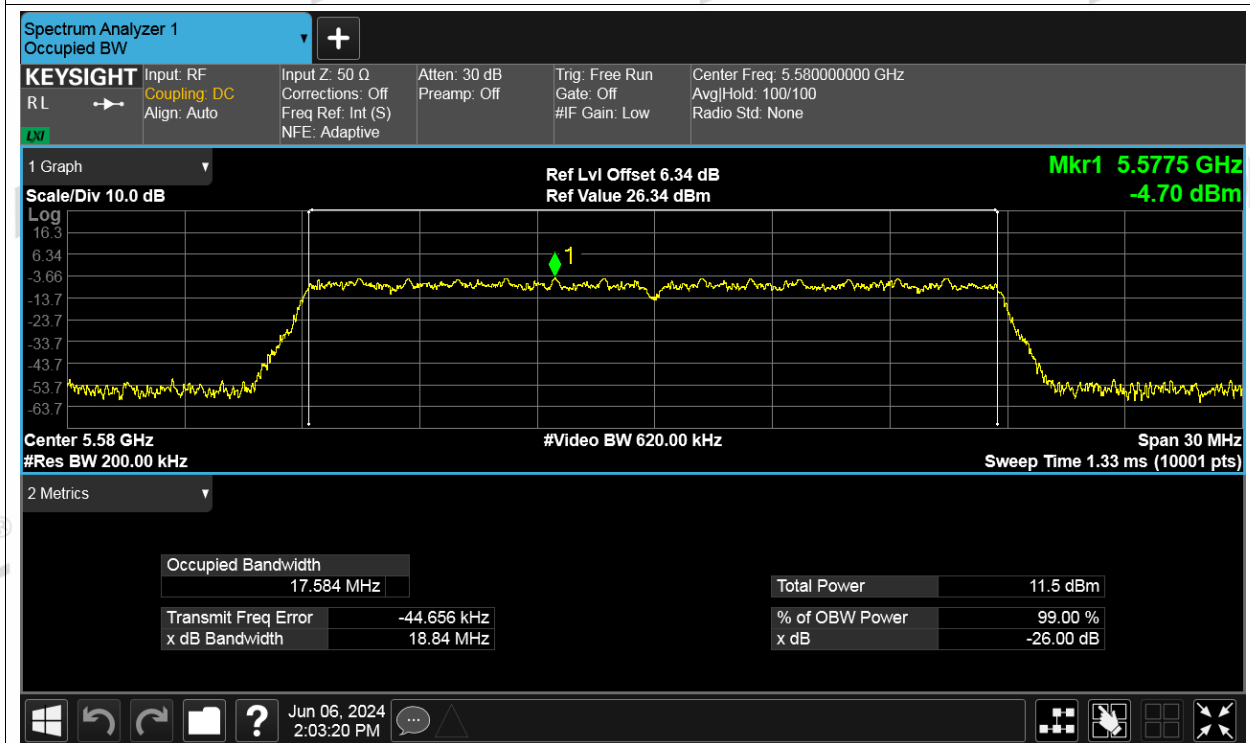 


OBW NVNT ac20 5580MHz Ant2

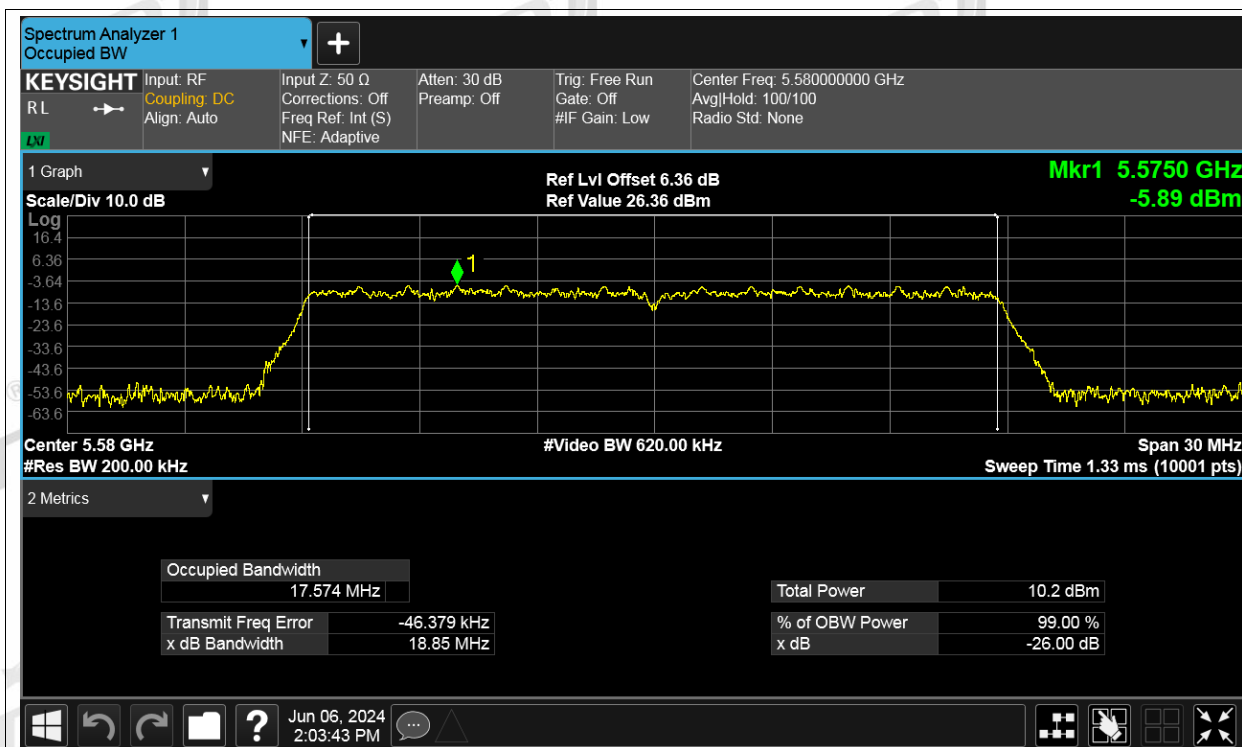 


OBW NVNT ac20 5580MHz Ant3

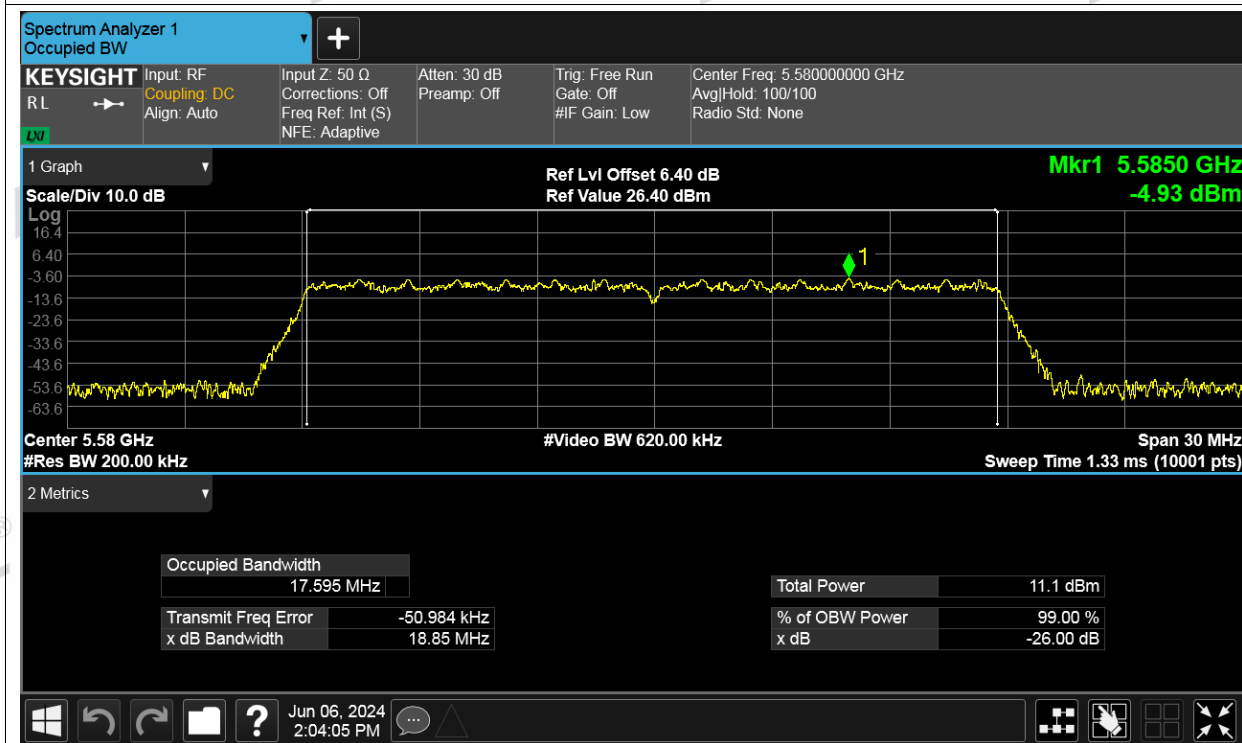 


OBW NVNT ac20 5700MHz Ant1

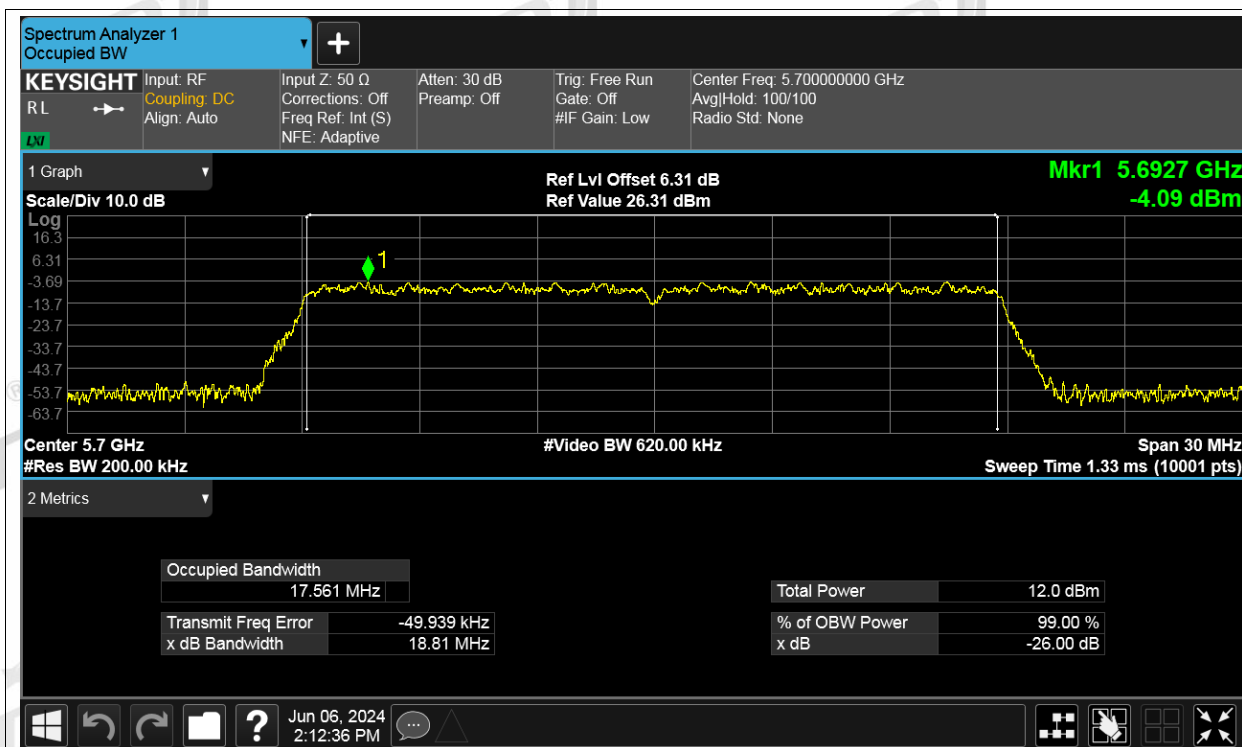 


OBW NVNT ac20 5700MHz Ant2

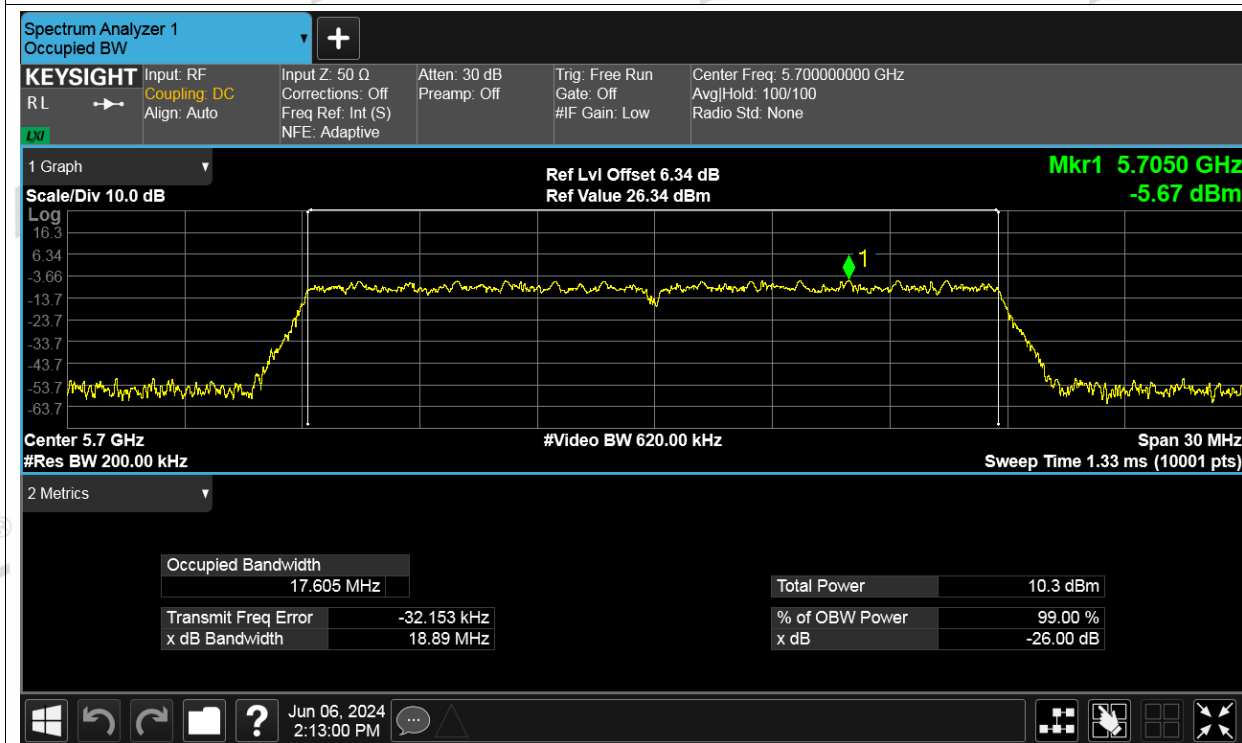 

OBW NVNT ac20 5700MHz Ant3

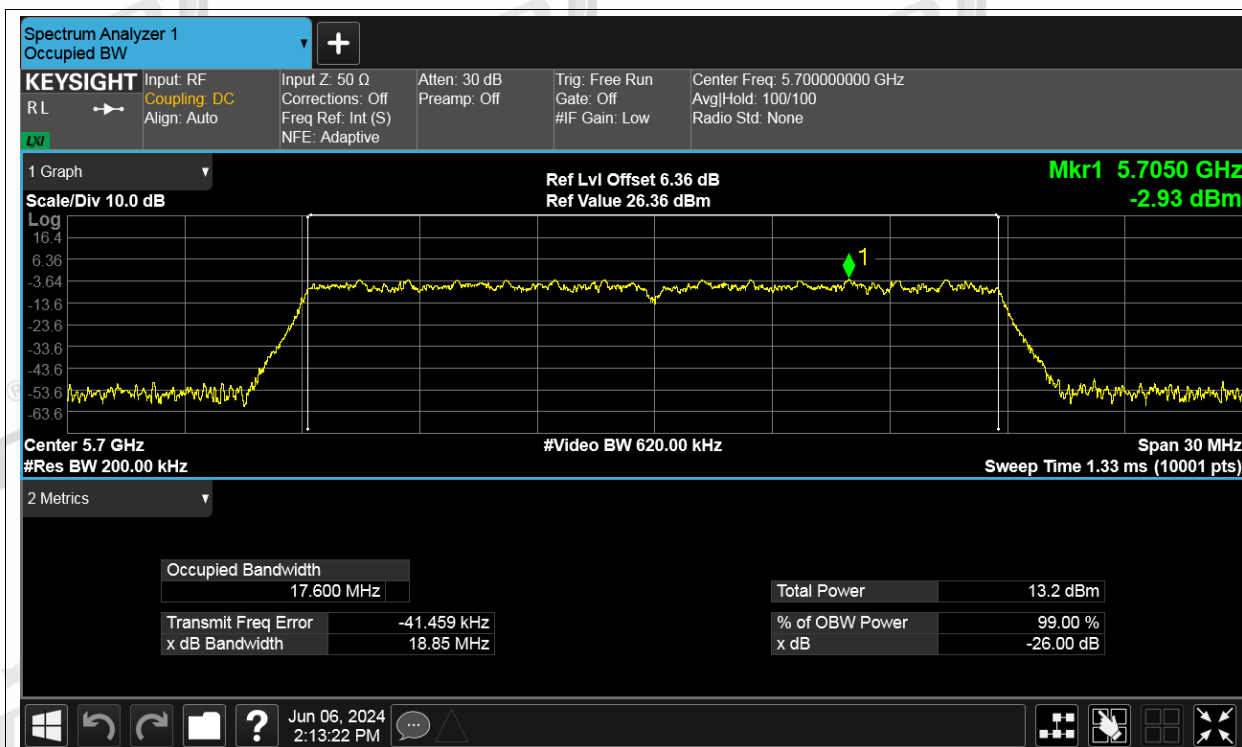 


OBW NVNT ac20 5745MHz Ant1

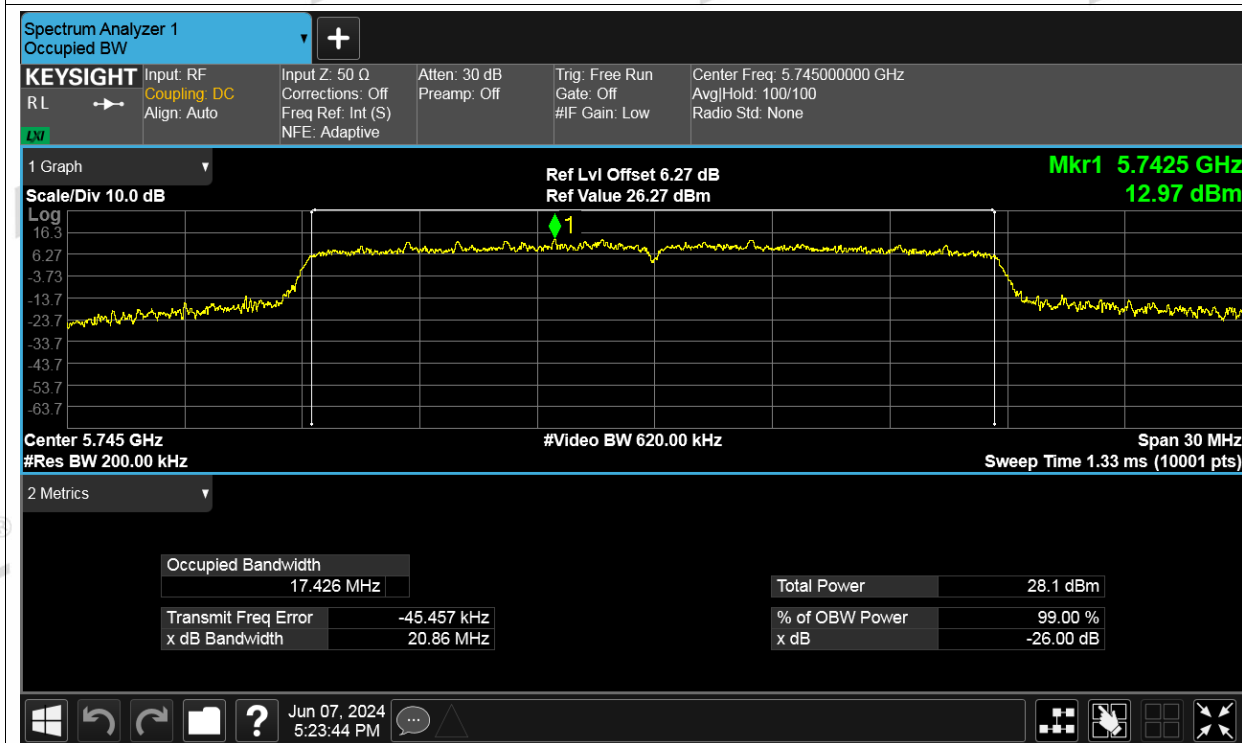 


OBW NVNT ac20 5745MHz Ant2




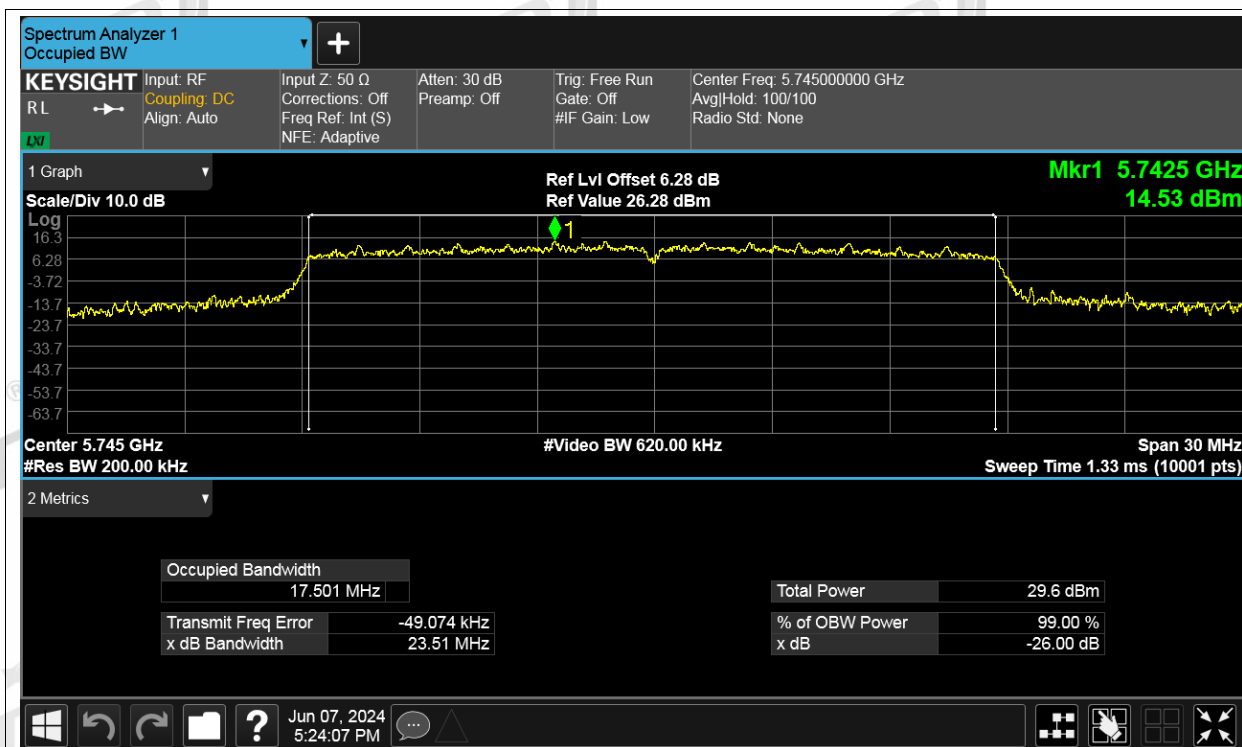 


OBW NVNT ac20 5745MHz Ant3

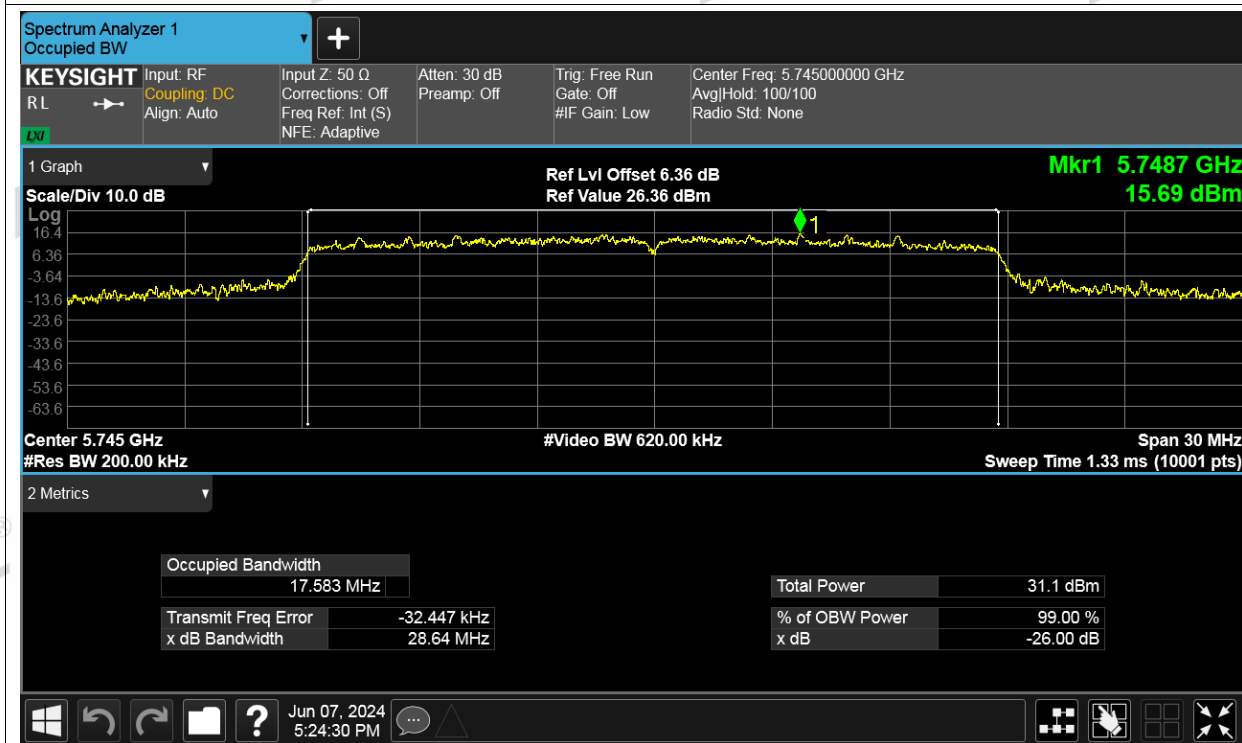 


OBW NVNT ac20 5785MHz Ant1

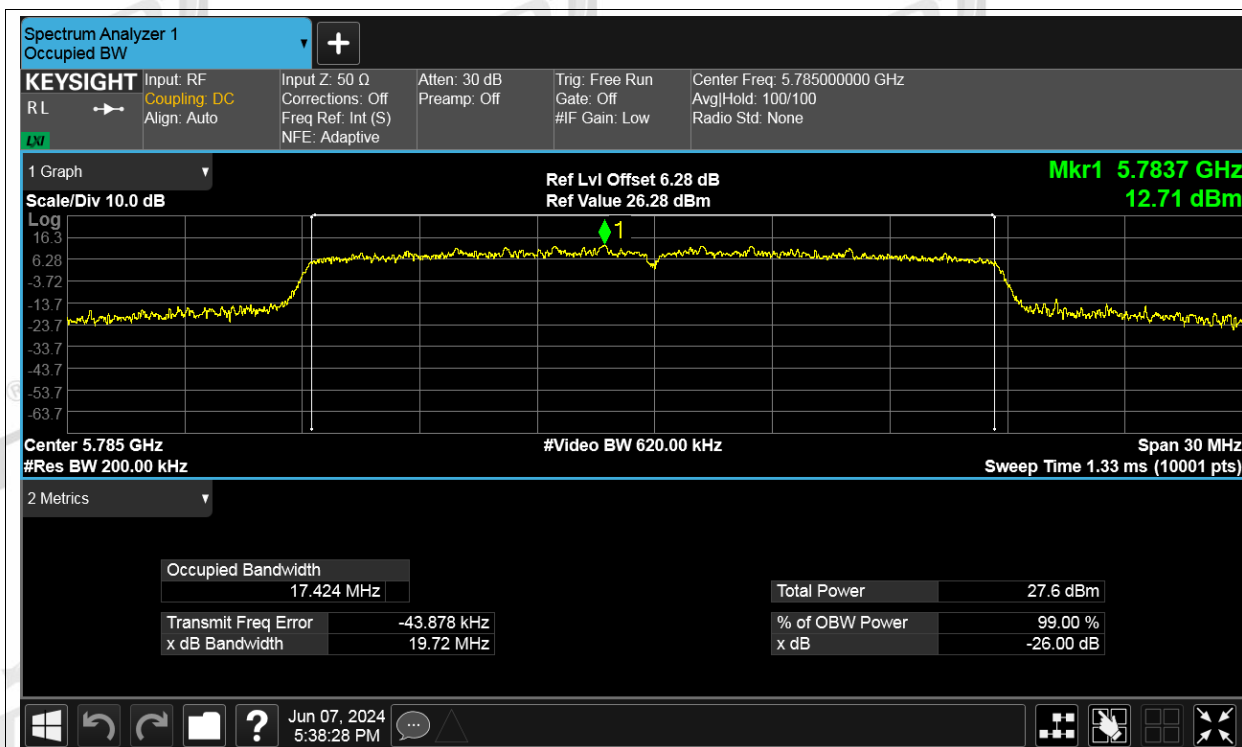 


OBW NVNT ac20 5785MHz Ant2

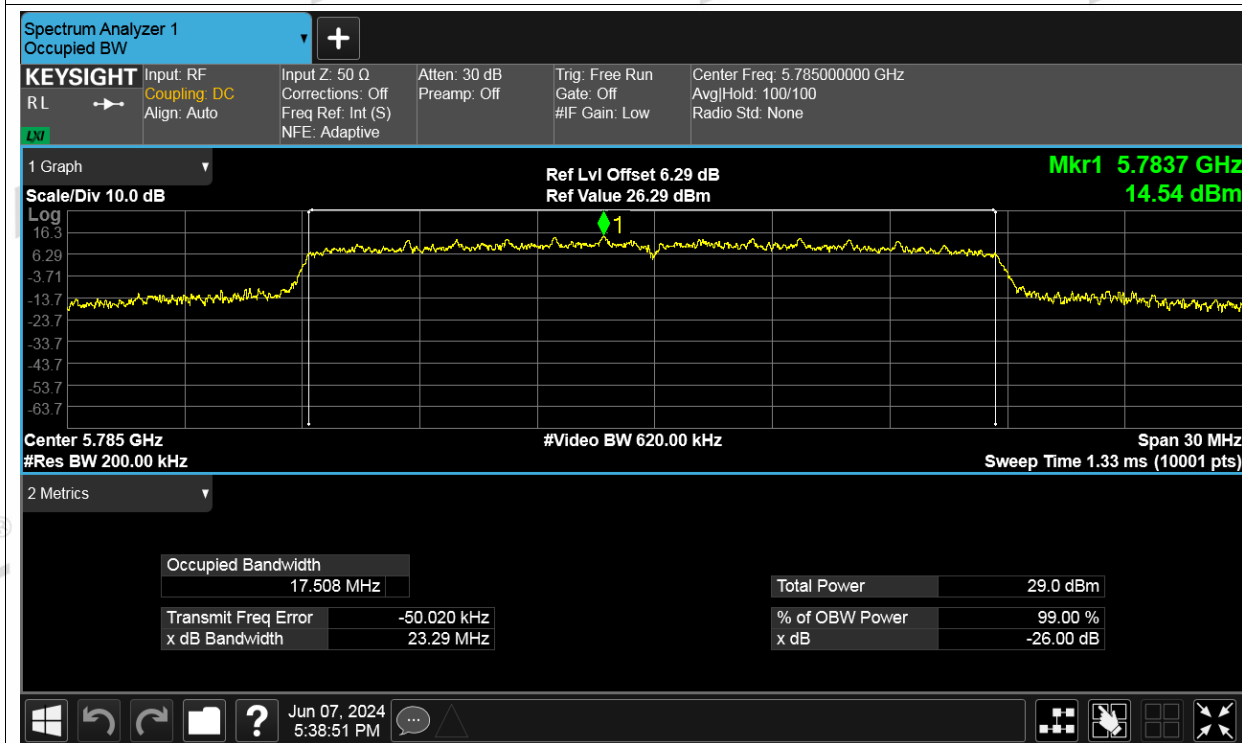 


OBW NVNT ac20 5785MHz Ant3

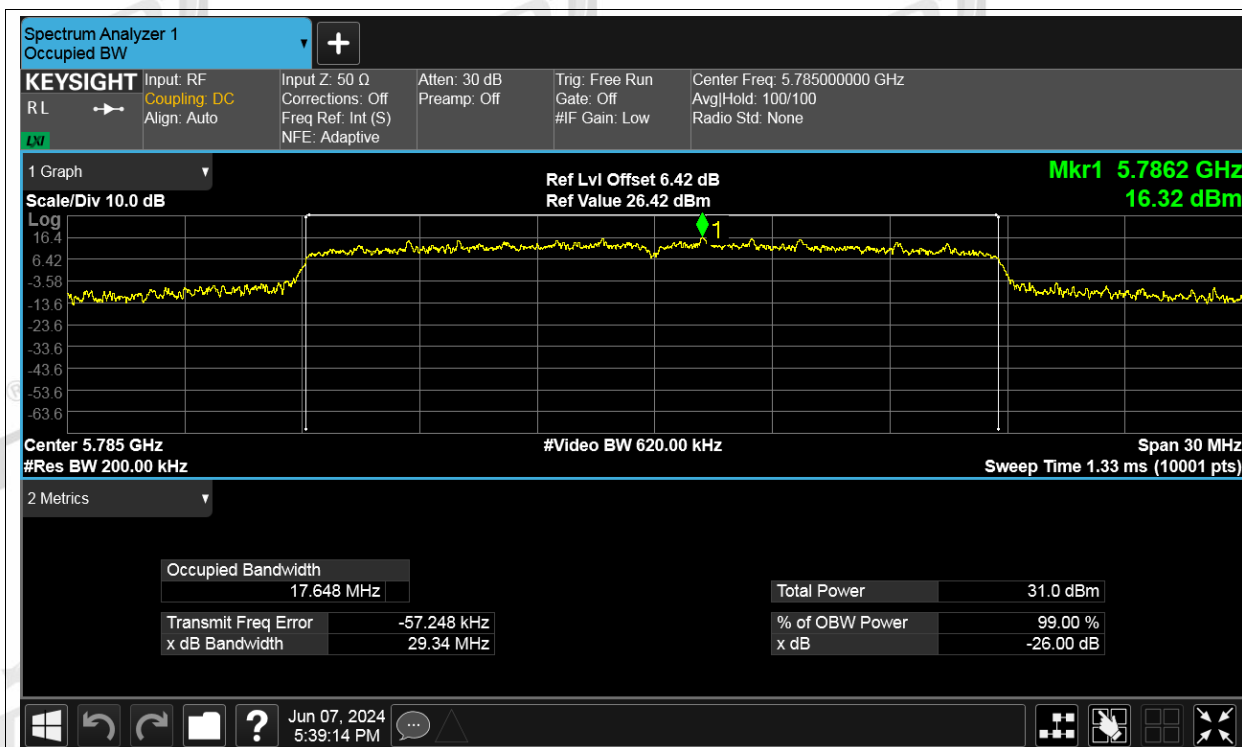 


OBW NVNT ac20 5825MHz Ant1

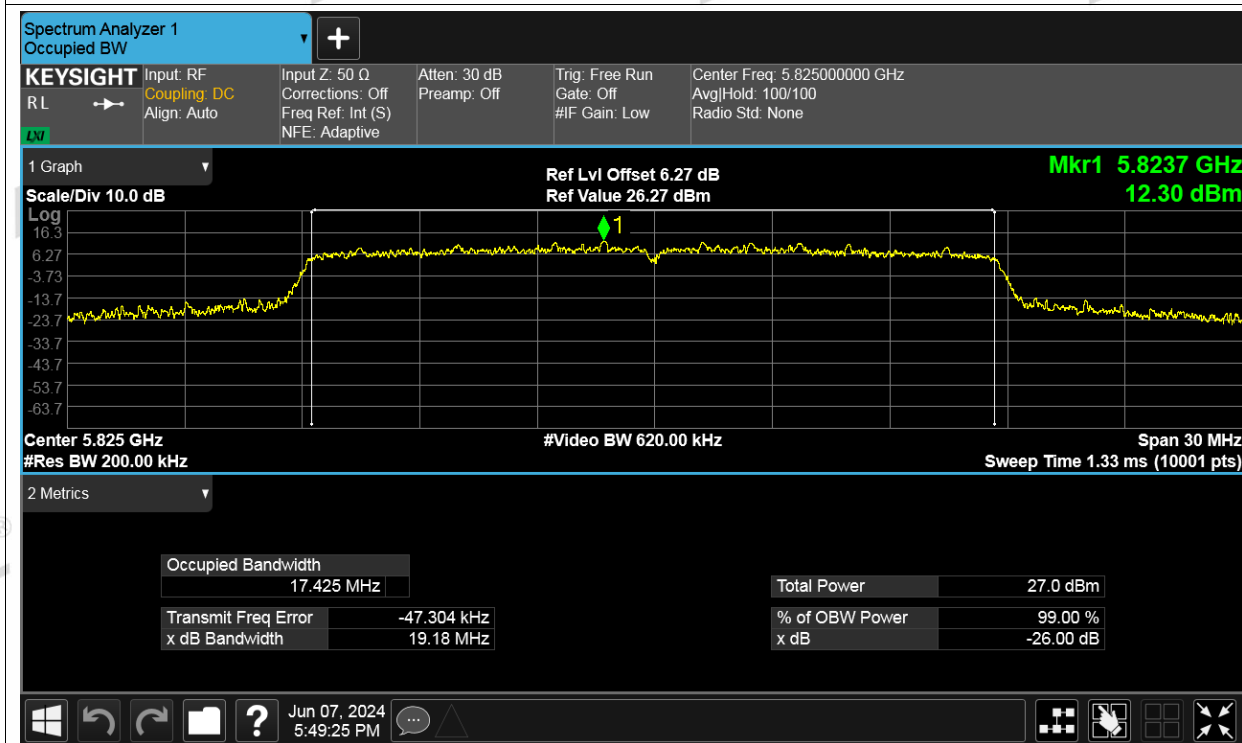 

OBW NVNT ac20 5825MHz Ant2

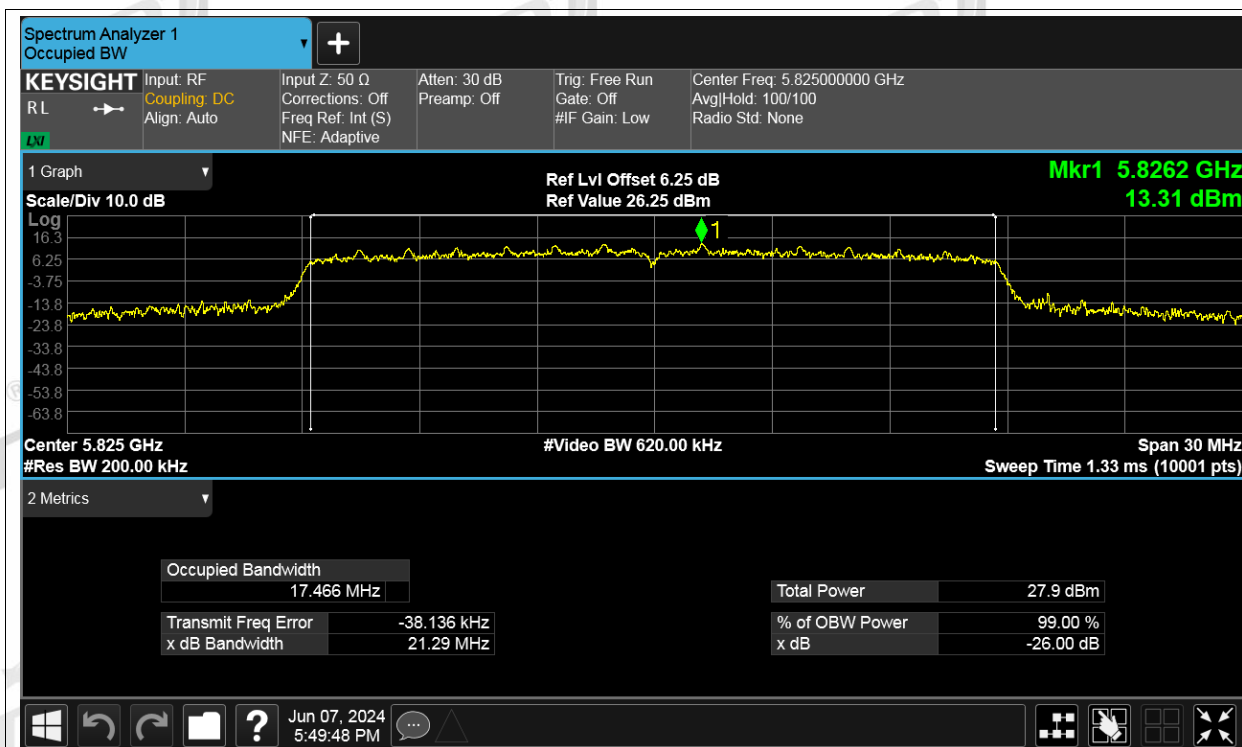 

OBW NVNT ac20 5825MHz Ant3

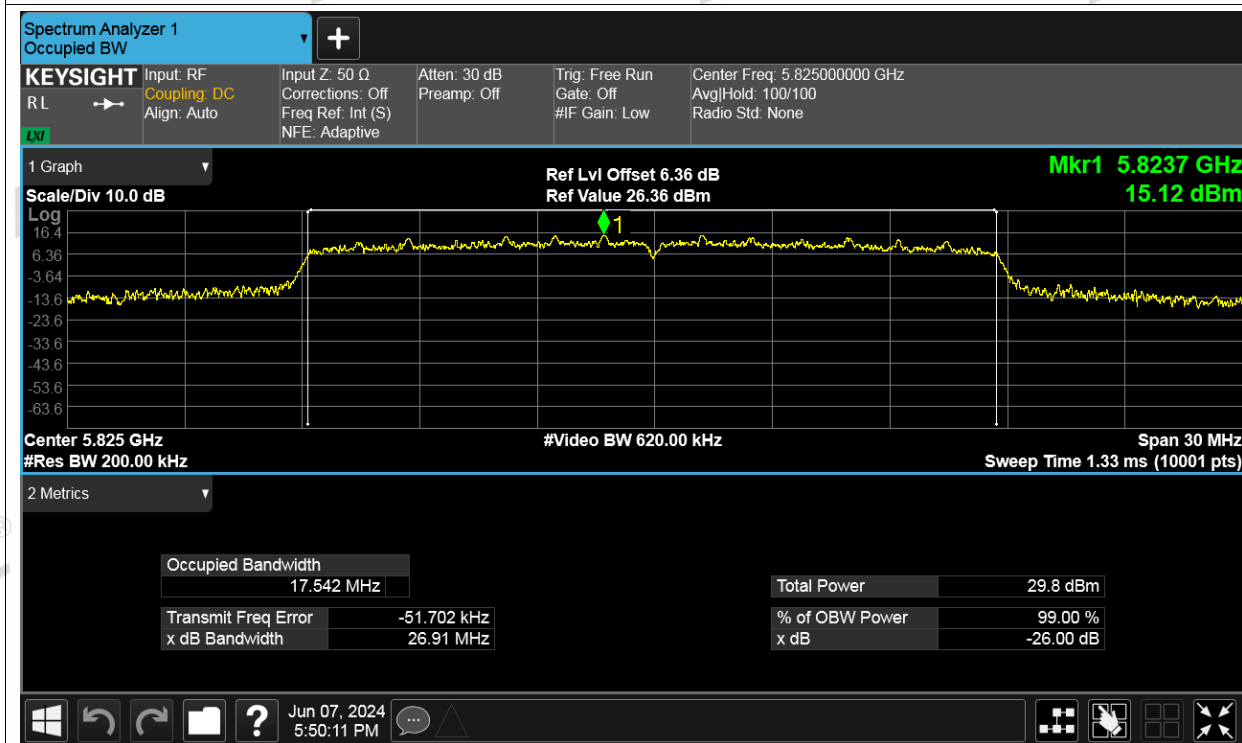 


OBW NVNT ac40 5190MHz Ant1



OBW NVNT ac40 5190MHz Ant2



 OBW NVNT ac40 5190MHz Ant3

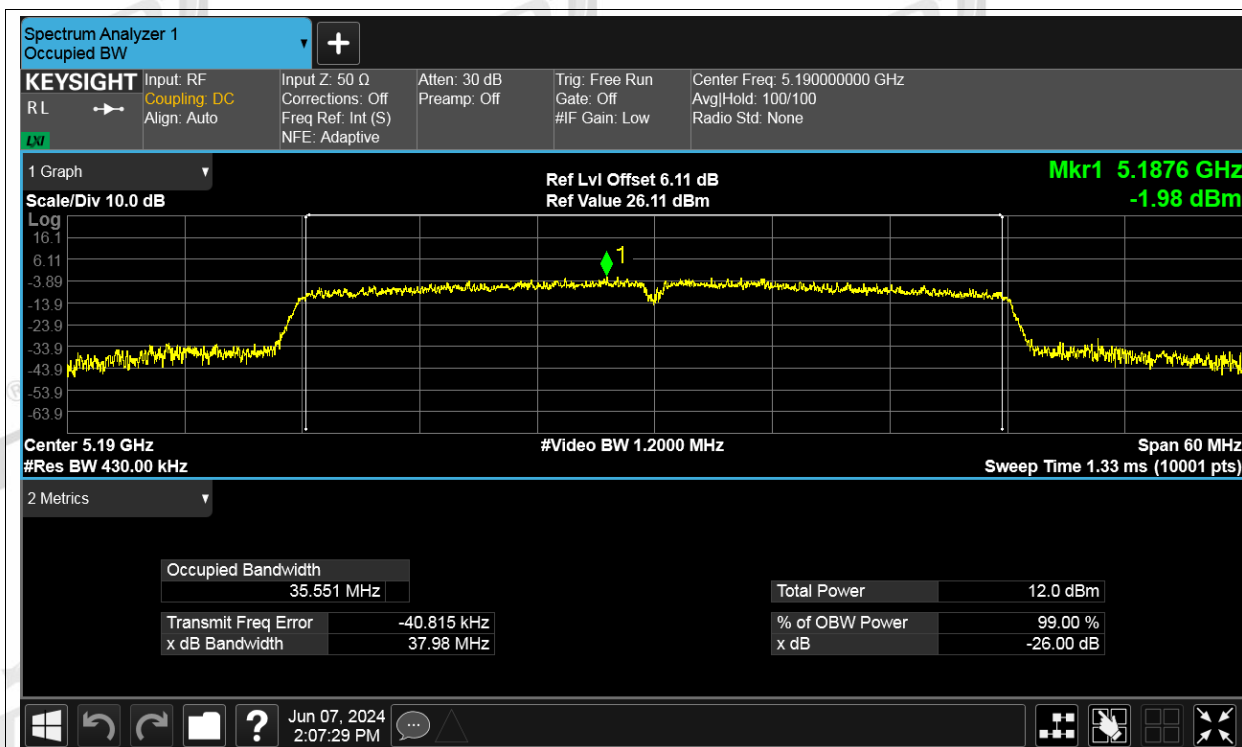


OBW NVNT ac40 5230MHz Ant1



 OBW NVNT ac40 5230MHz Ant2



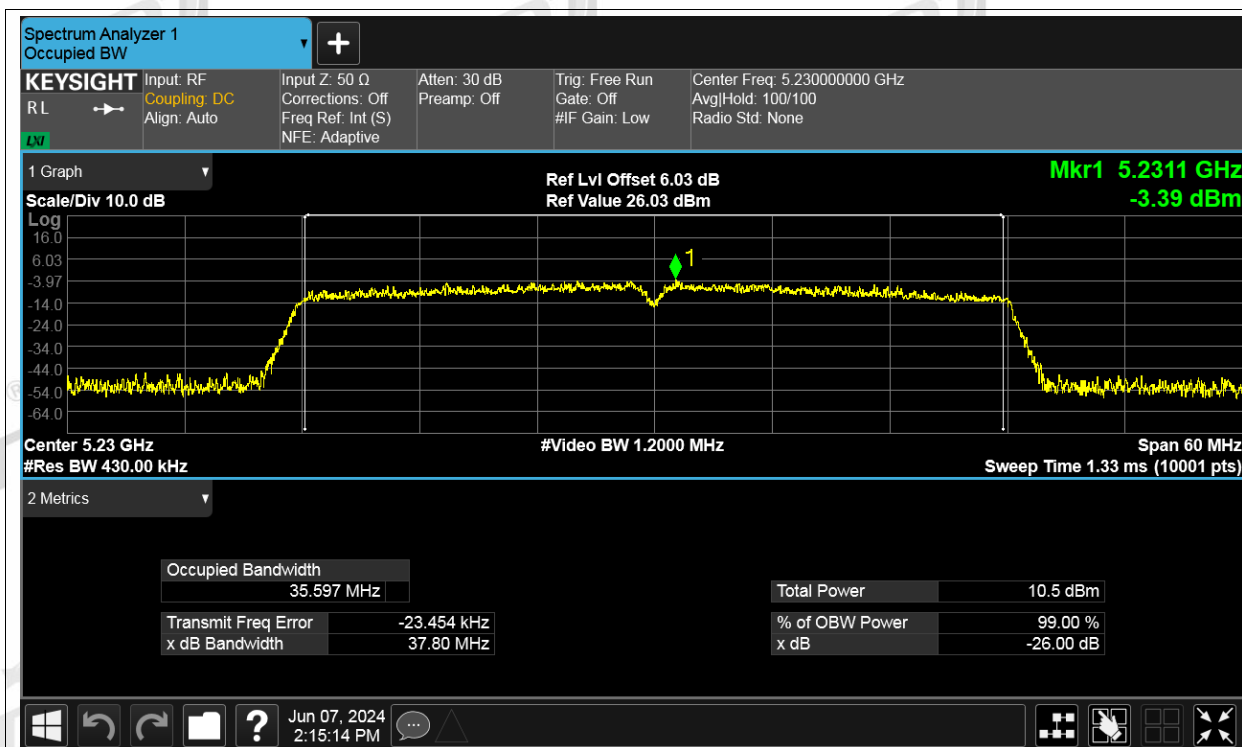


OBW NVNT ac40 5230MHz Ant3




OBW NVNT ac40 5270MHz Ant1



 OBW NVNT ac40 5270MHz Ant2

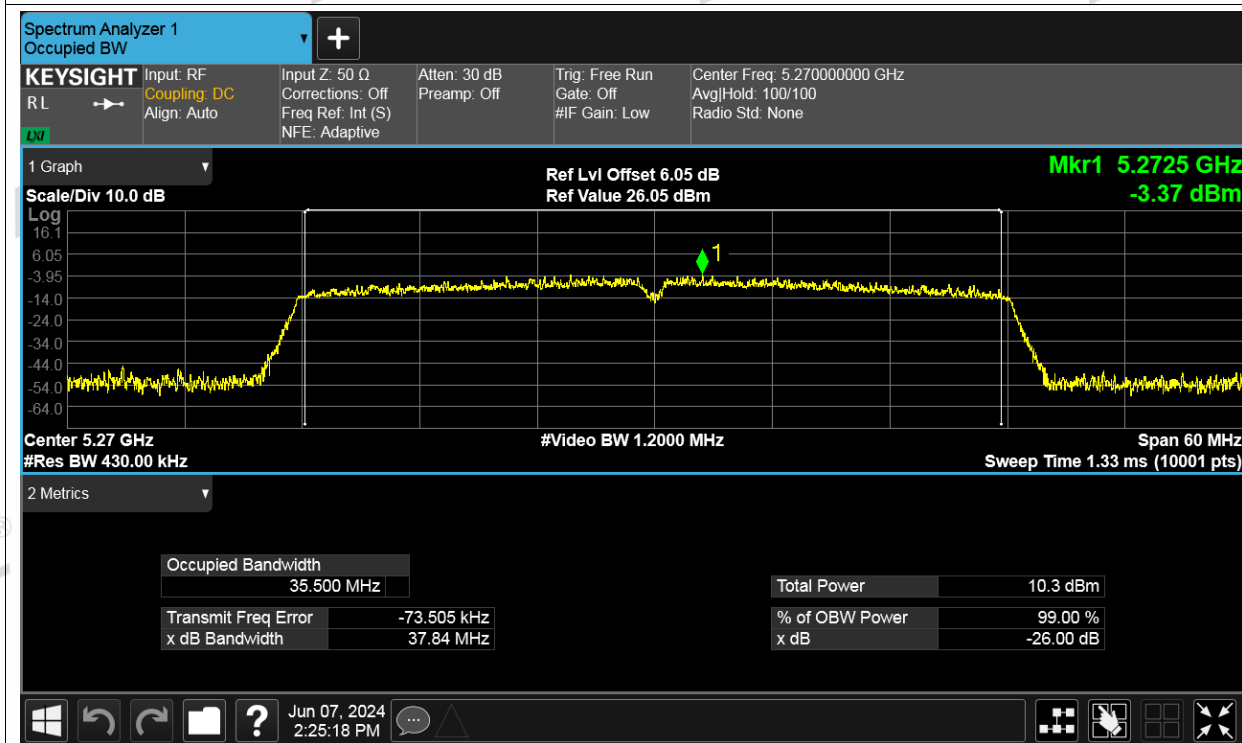


OBW NVNT ac40 5270MHz Ant3

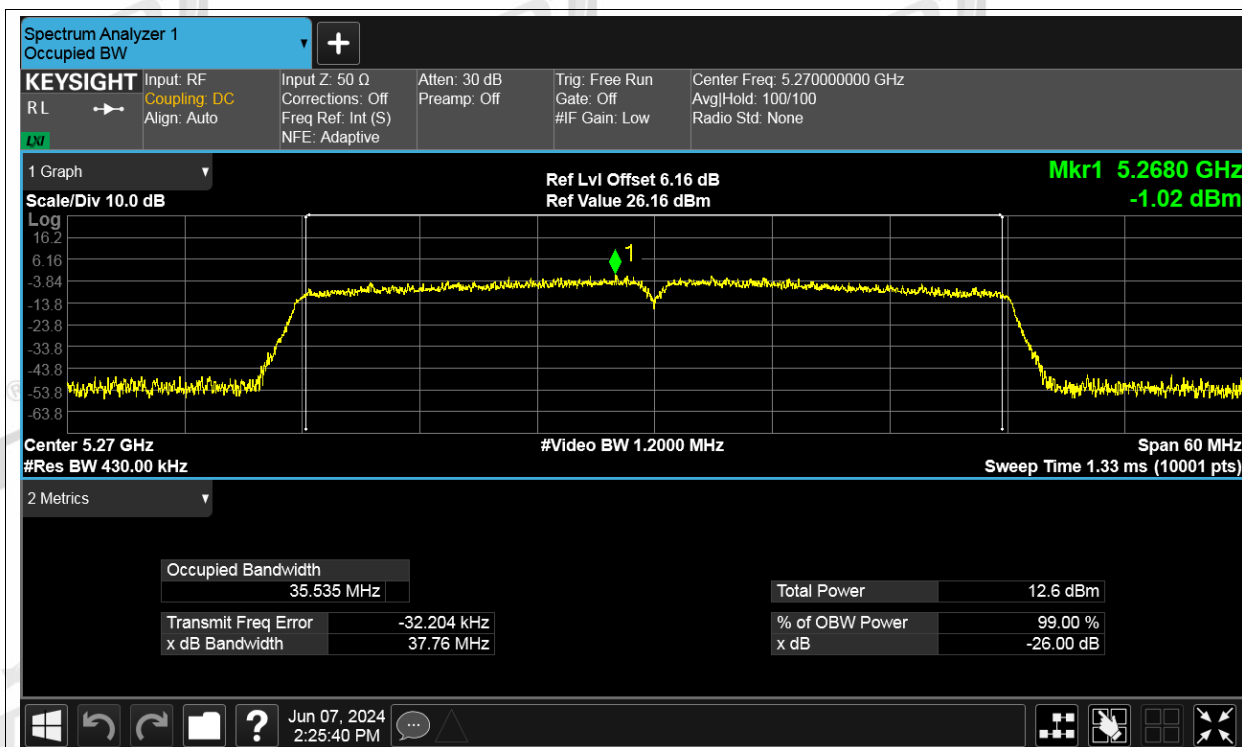 


OBW NVNT ac40 5310MHz Ant1



 OBW NVNT ac40 5310MHz Ant2

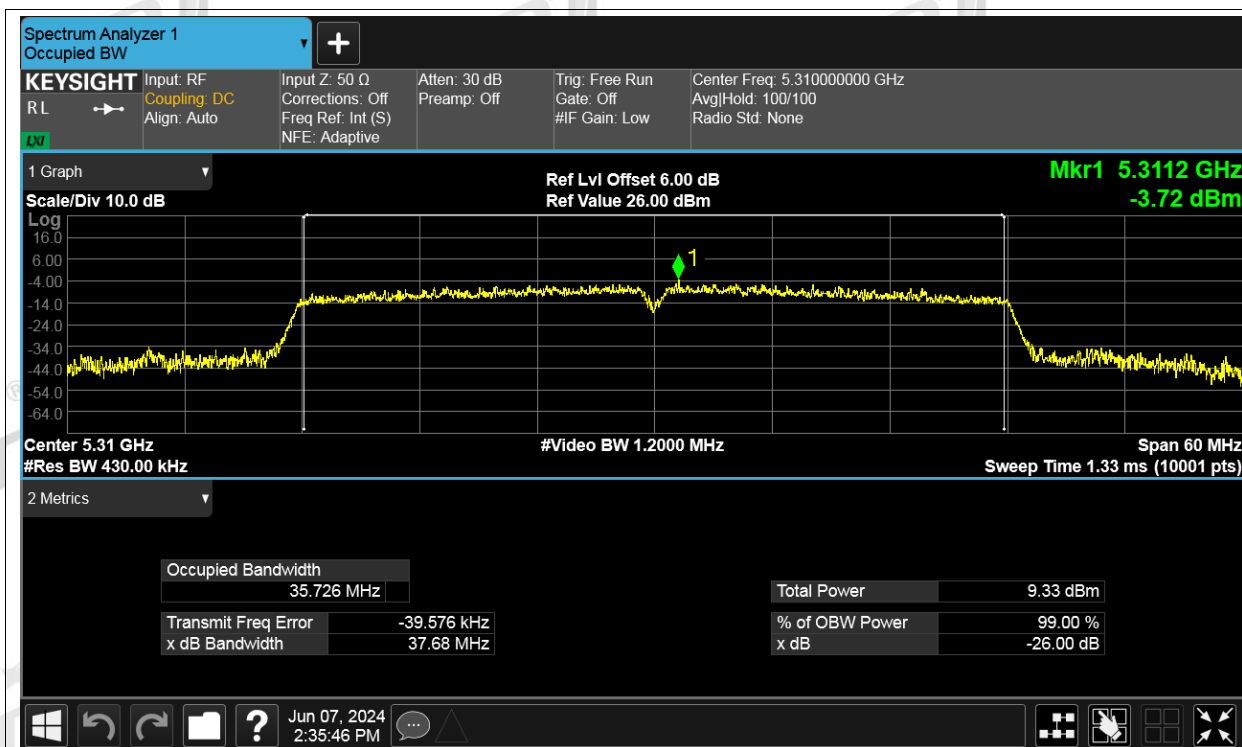

OBW NVNT ac40 5310MHz Ant3

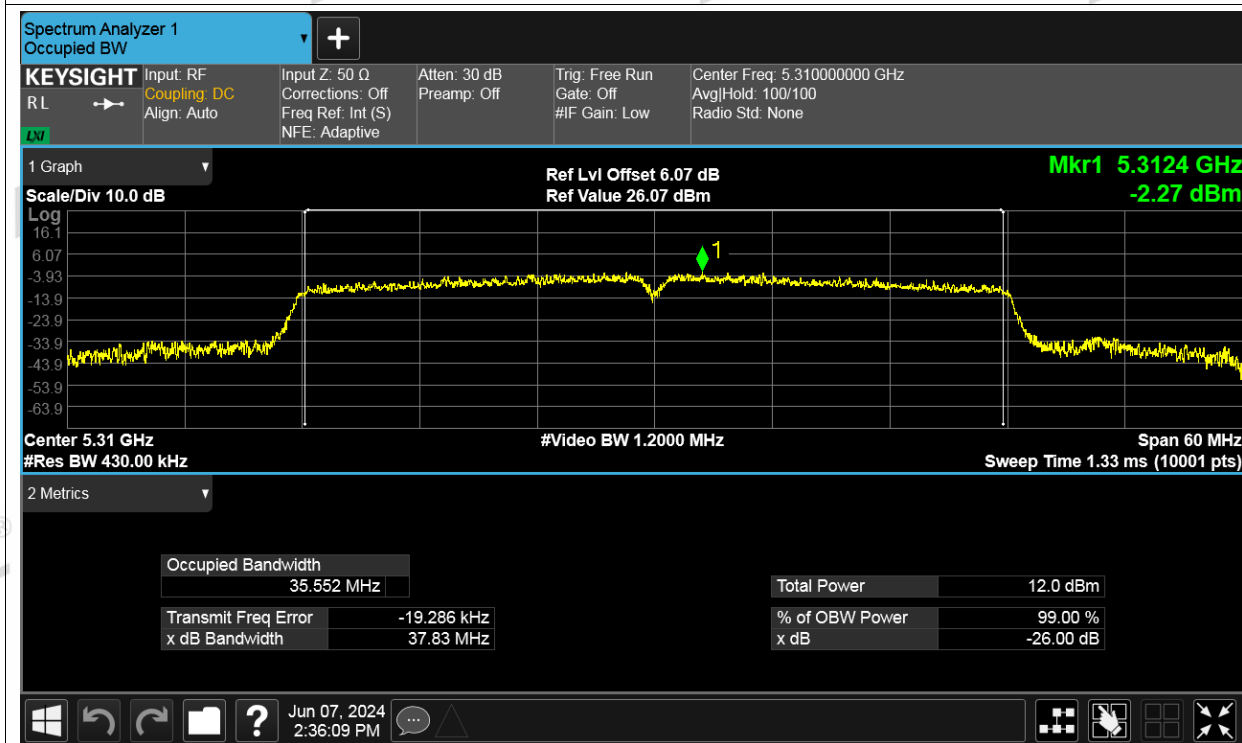 


OBW NVNT ac40 5510MHz Ant1



OBW NVNT ac40 5510MHz Ant2



 OBW NVNT ac40 5510MHz Ant3

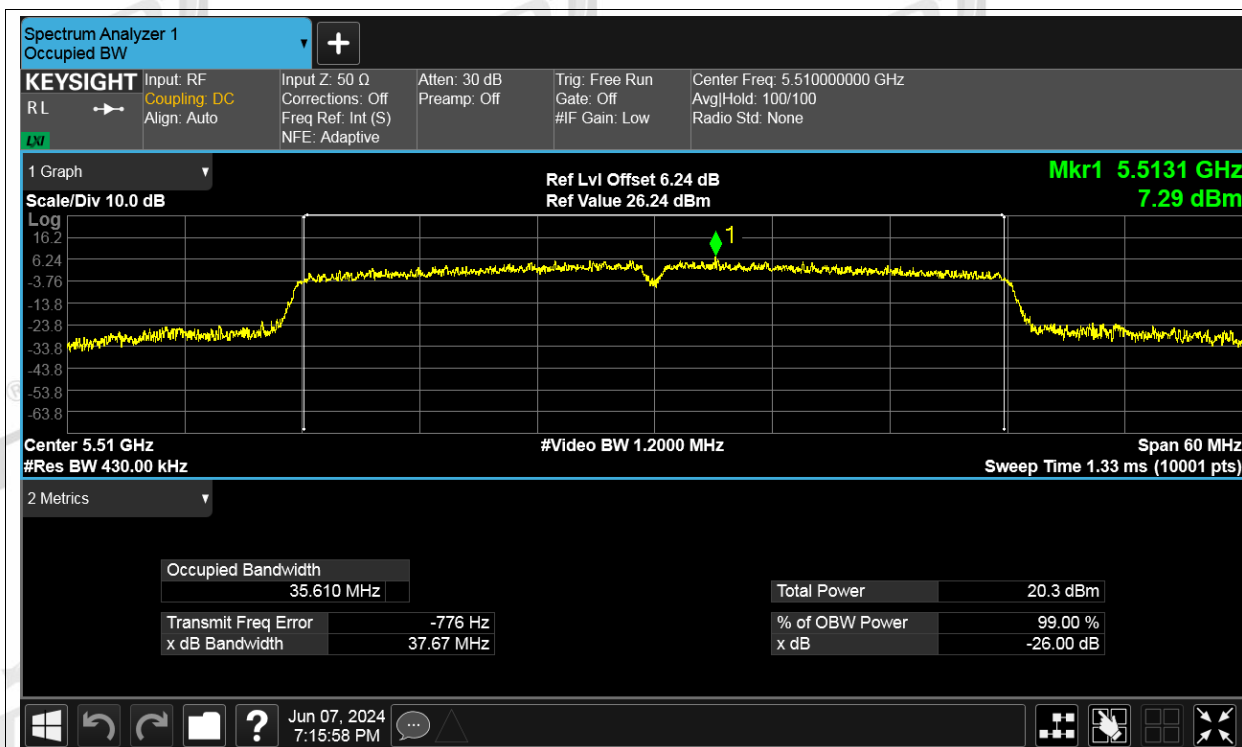

OBW NVNT ac40 5550MHz Ant1

 


OBW NVNT ac40 5550MHz Ant2







OBW NVNT ac40 5550MHz Ant3

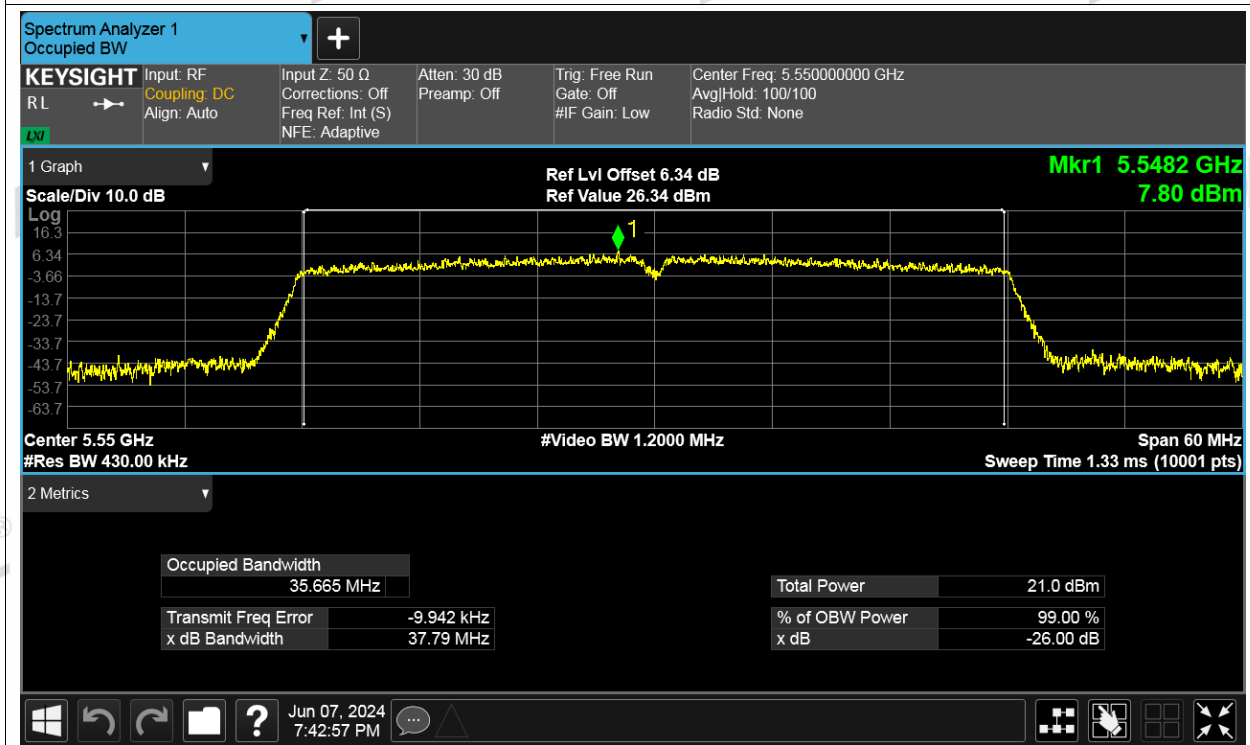


OBW NVNT ac40 5670MHz Ant1

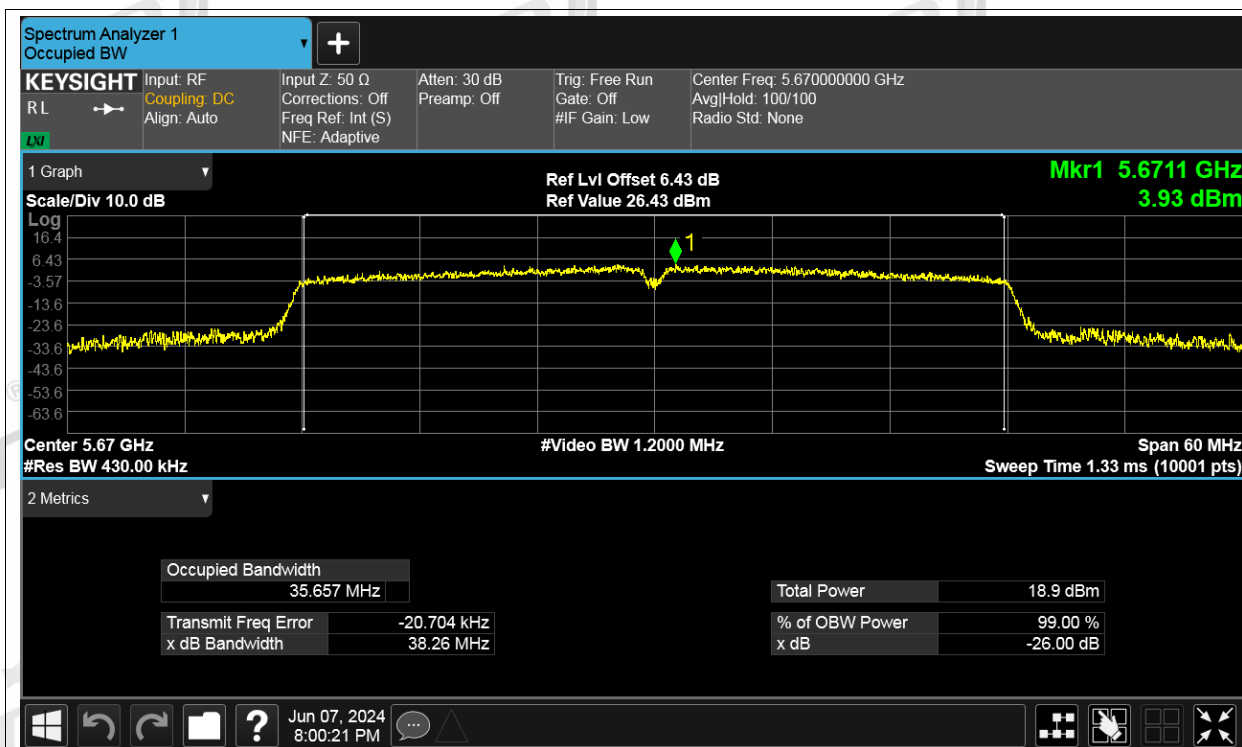 


OBW NVNT ac40 5670MHz Ant2

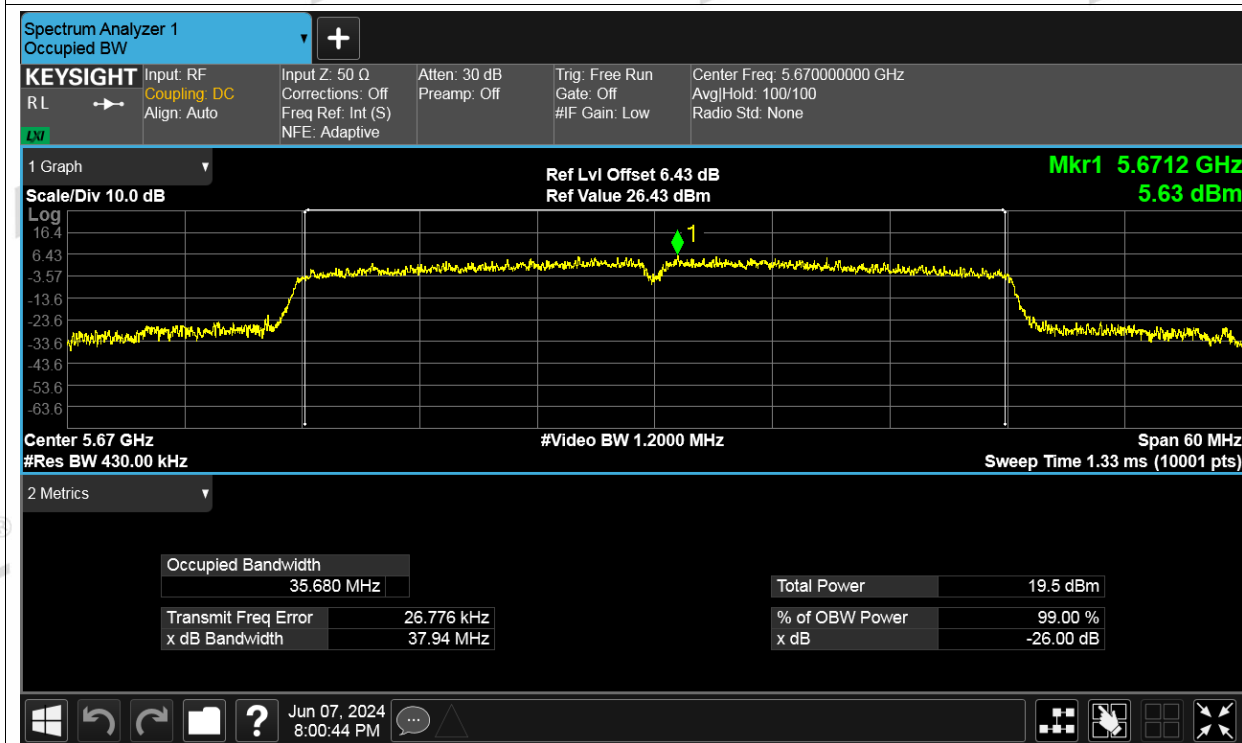 


OBW NVNT ac40 5670MHz Ant3

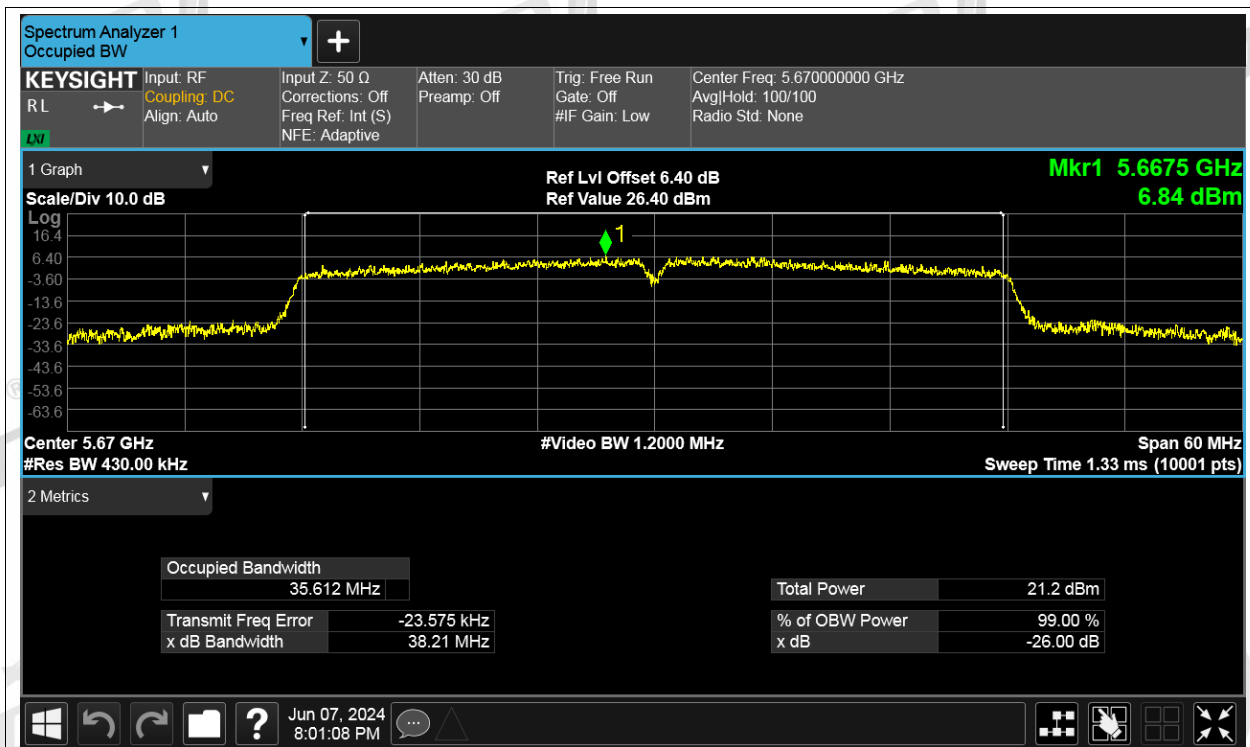 


OBW NVNT ac40 5755MHz Ant1

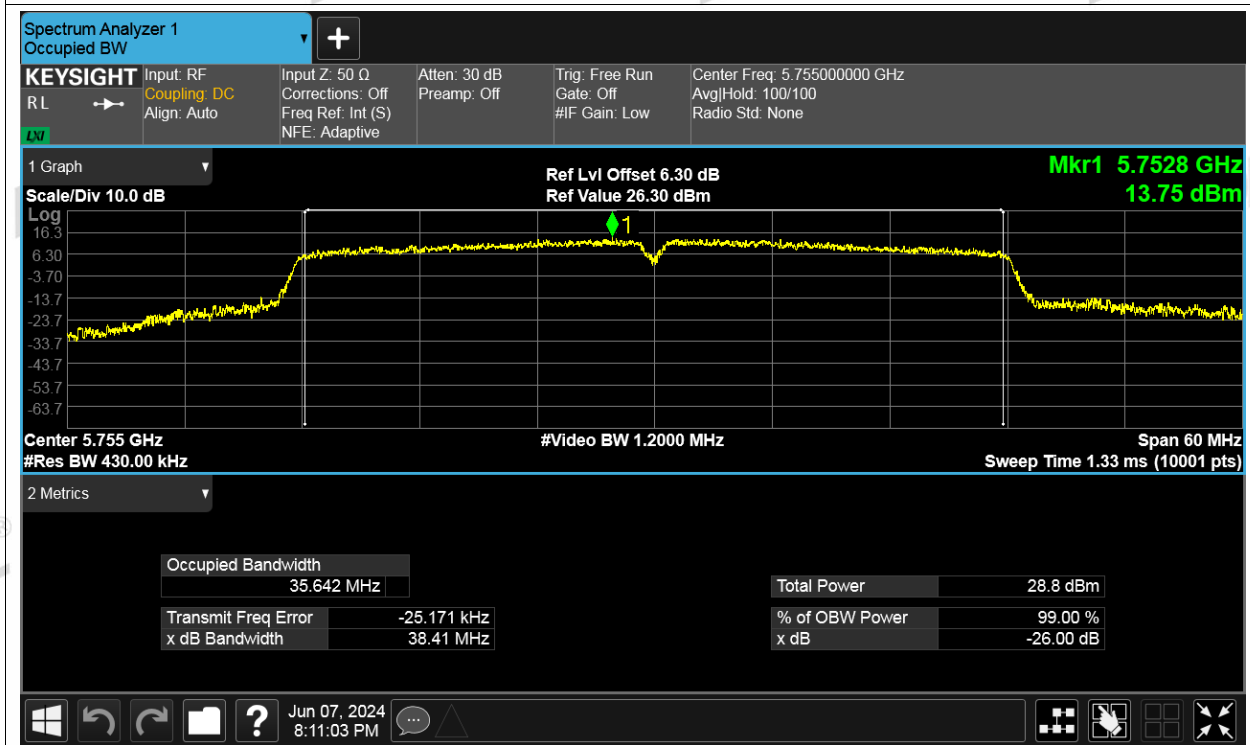 


OBW NVNT ac40 5755MHz Ant2

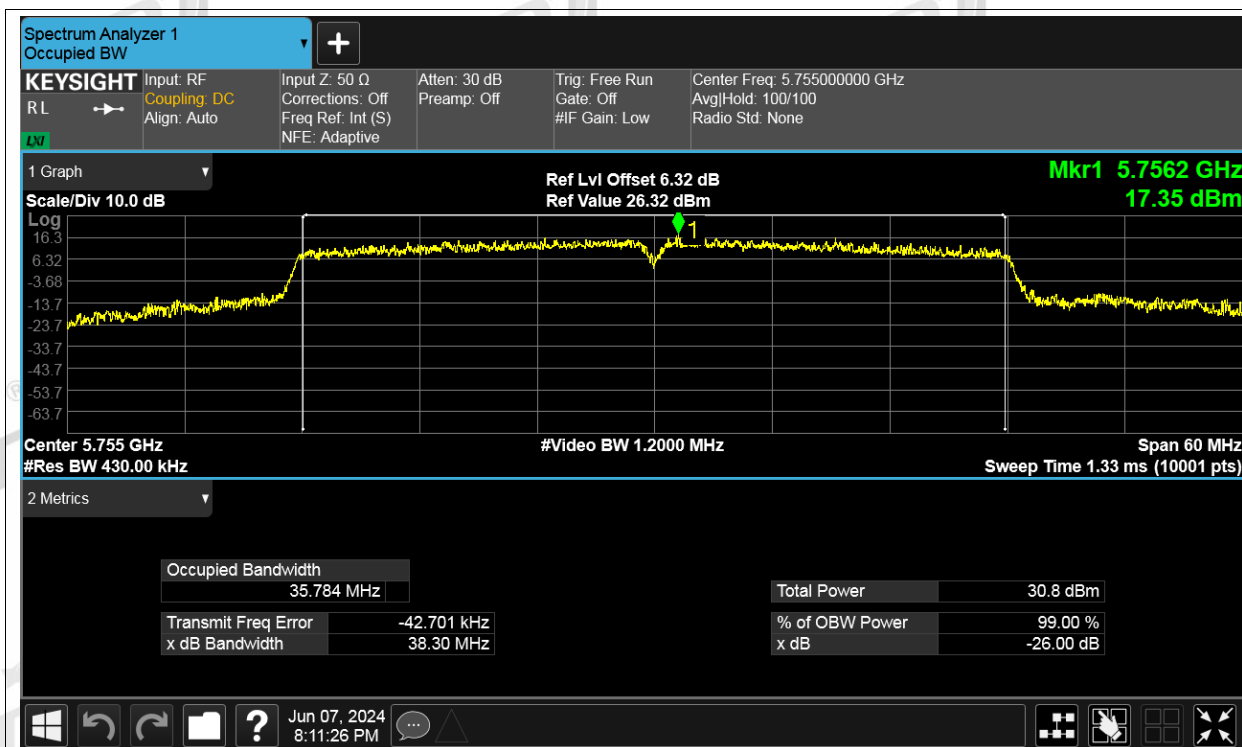 


OBW NVNT ac40 5755MHz Ant3

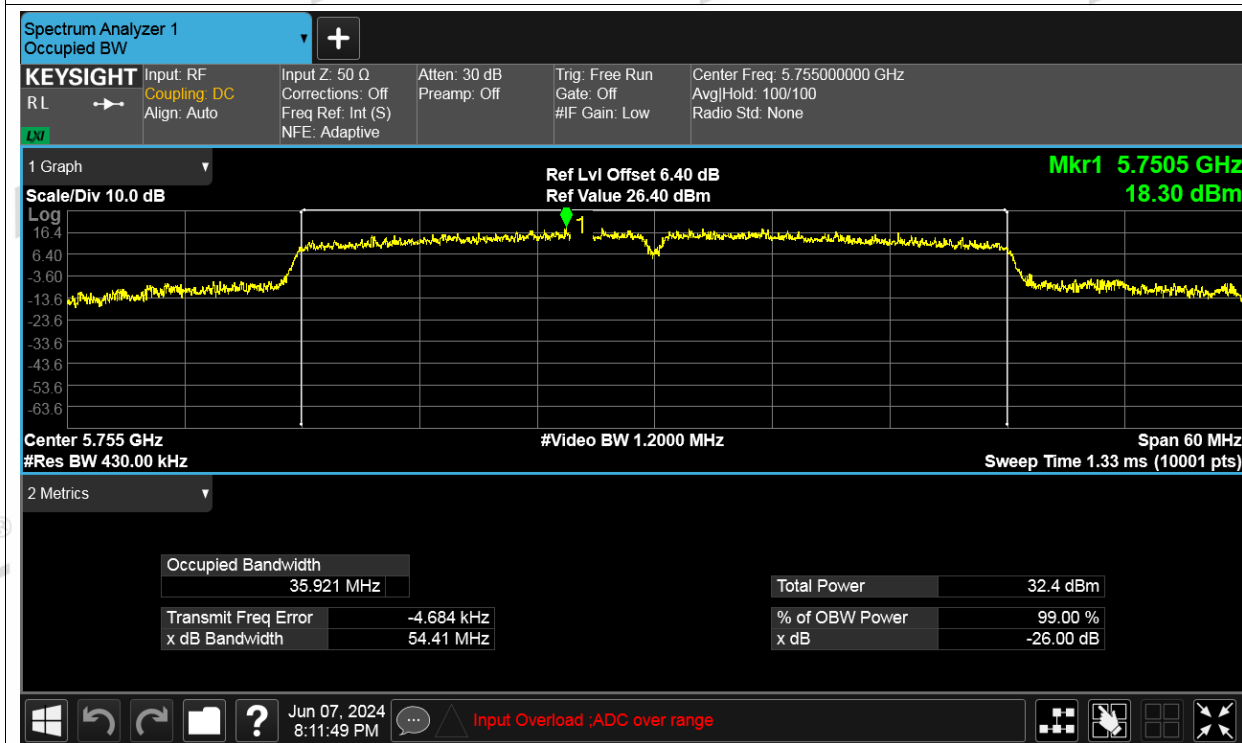 


OBW NVNT ac40 5795MHz Ant1

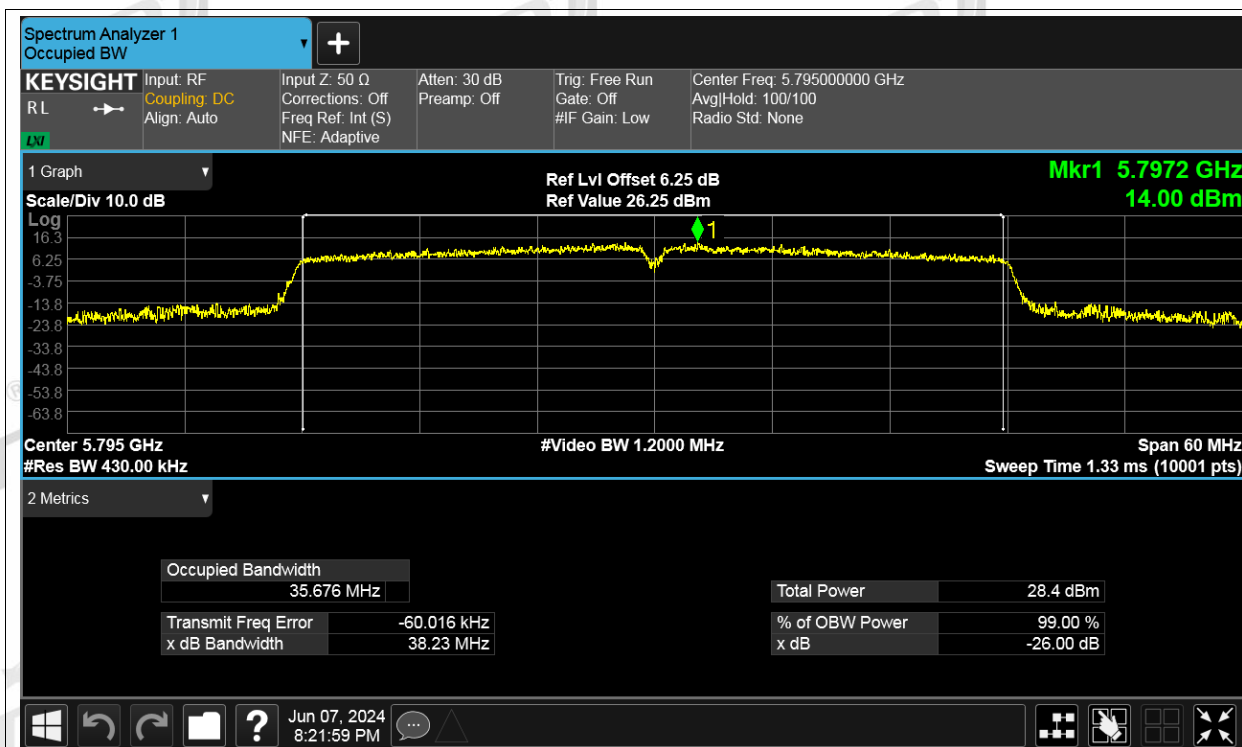 


OBW NVNT ac40 5795MHz Ant2

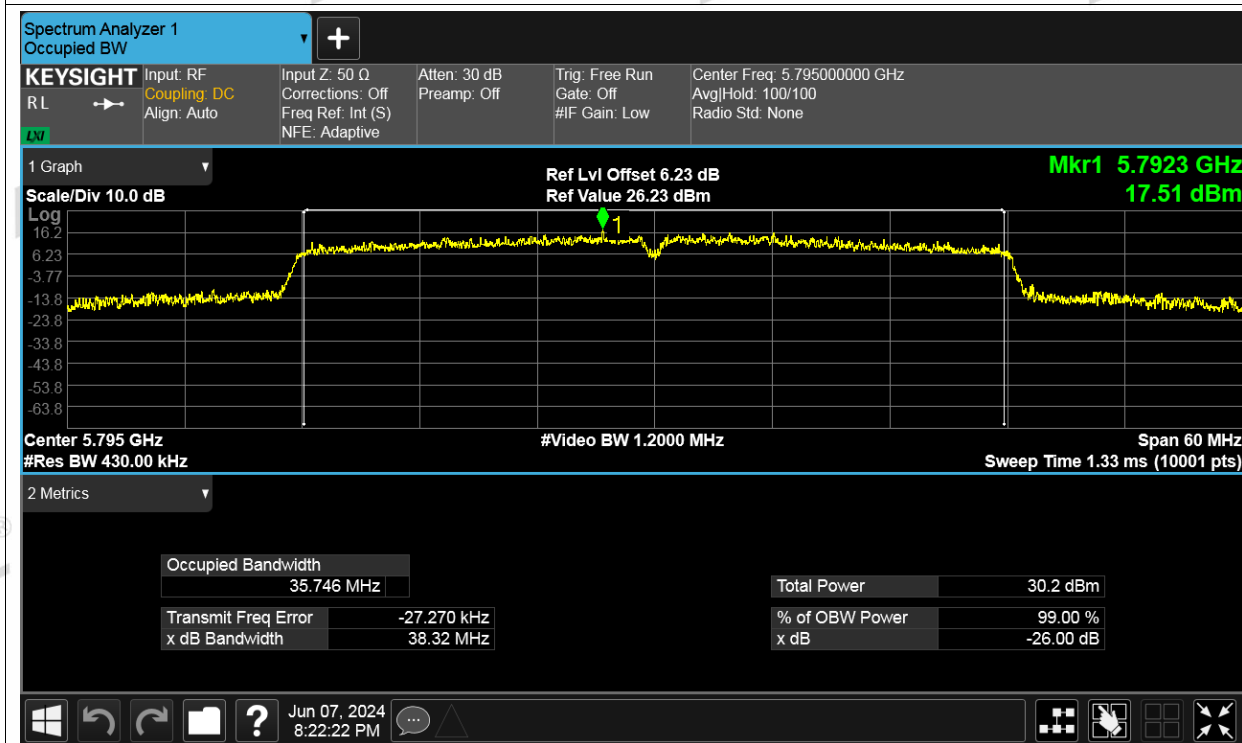 

OBW NVNT ac40 5795MHz Ant3

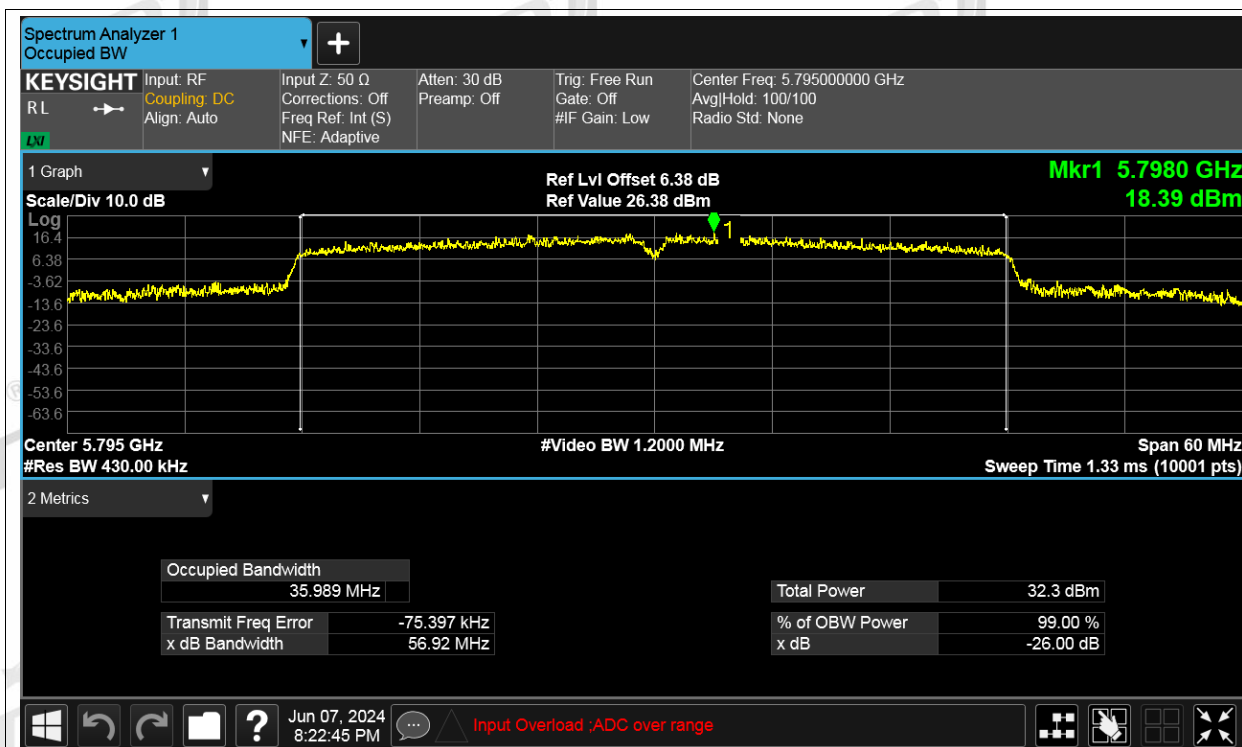 


OBW NVNT ac80 5210MHz Ant1

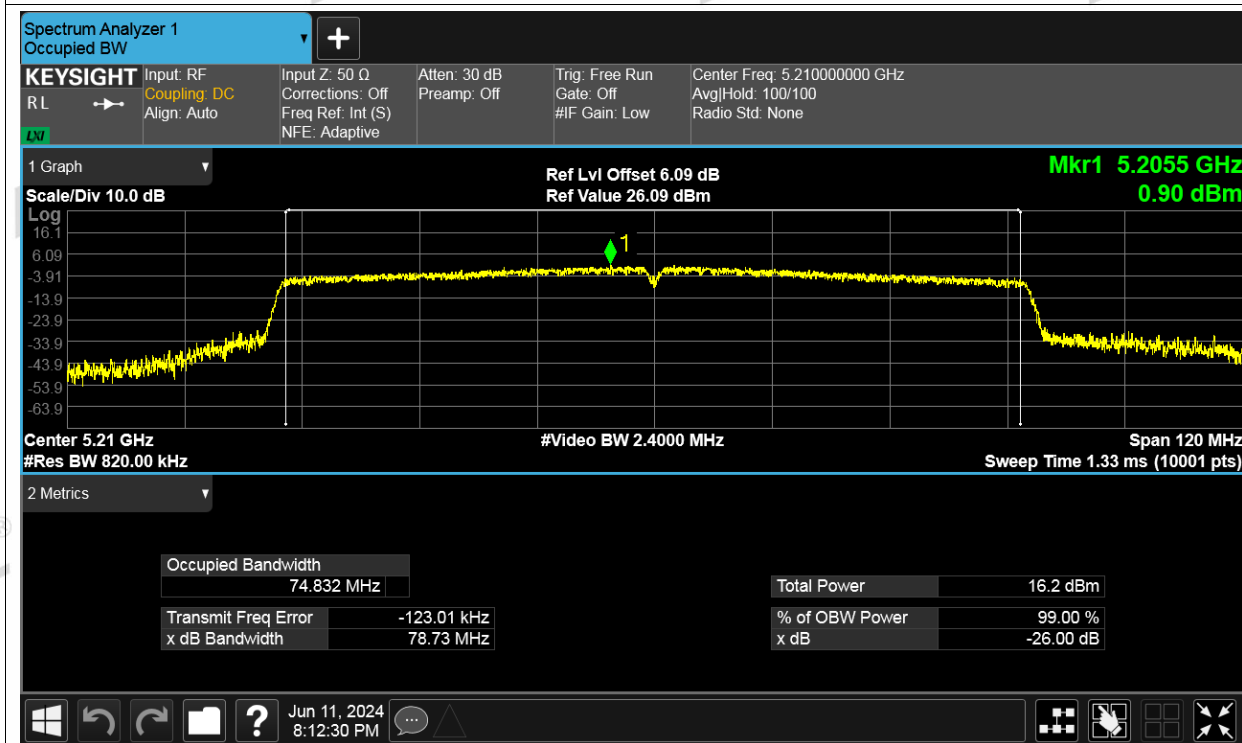 


OBW NVNT ac80 5210MHz Ant2




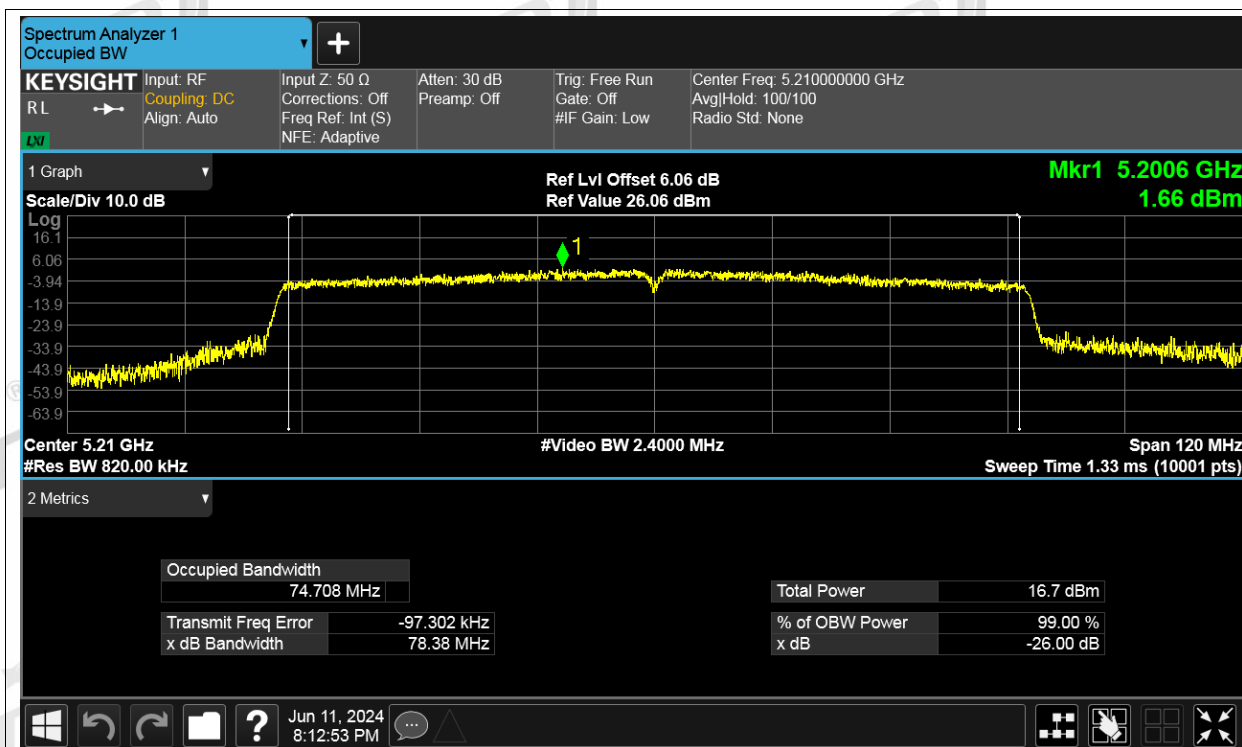 


OBW NVNT ac80 5210MHz Ant3

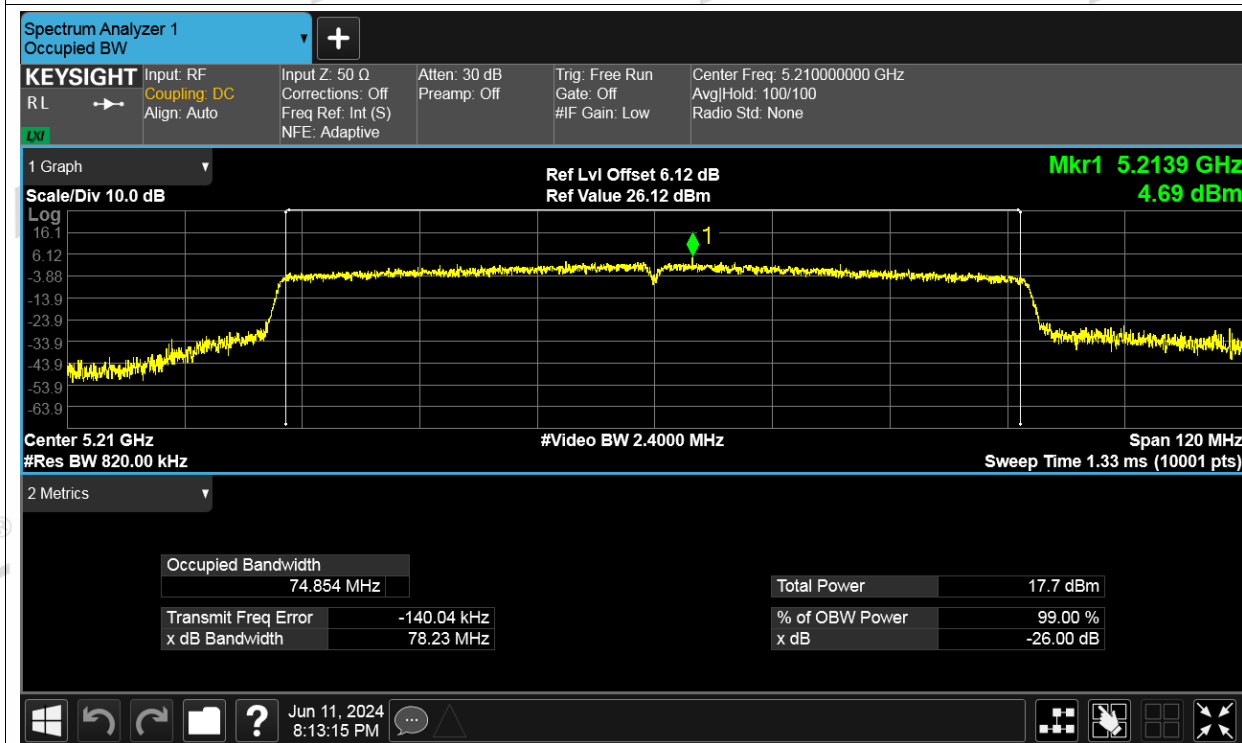 


OBW NVNT ac80 5290MHz Ant1

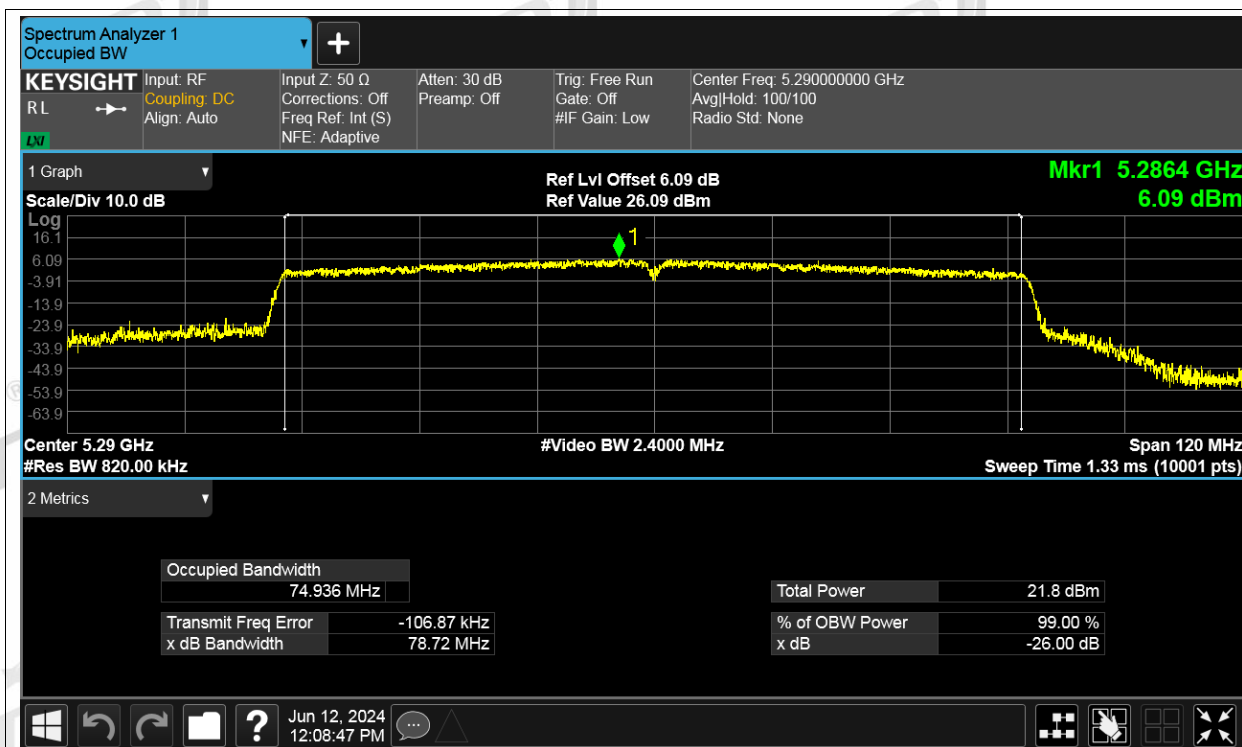 


OBW NVNT ac80 5290MHz Ant2

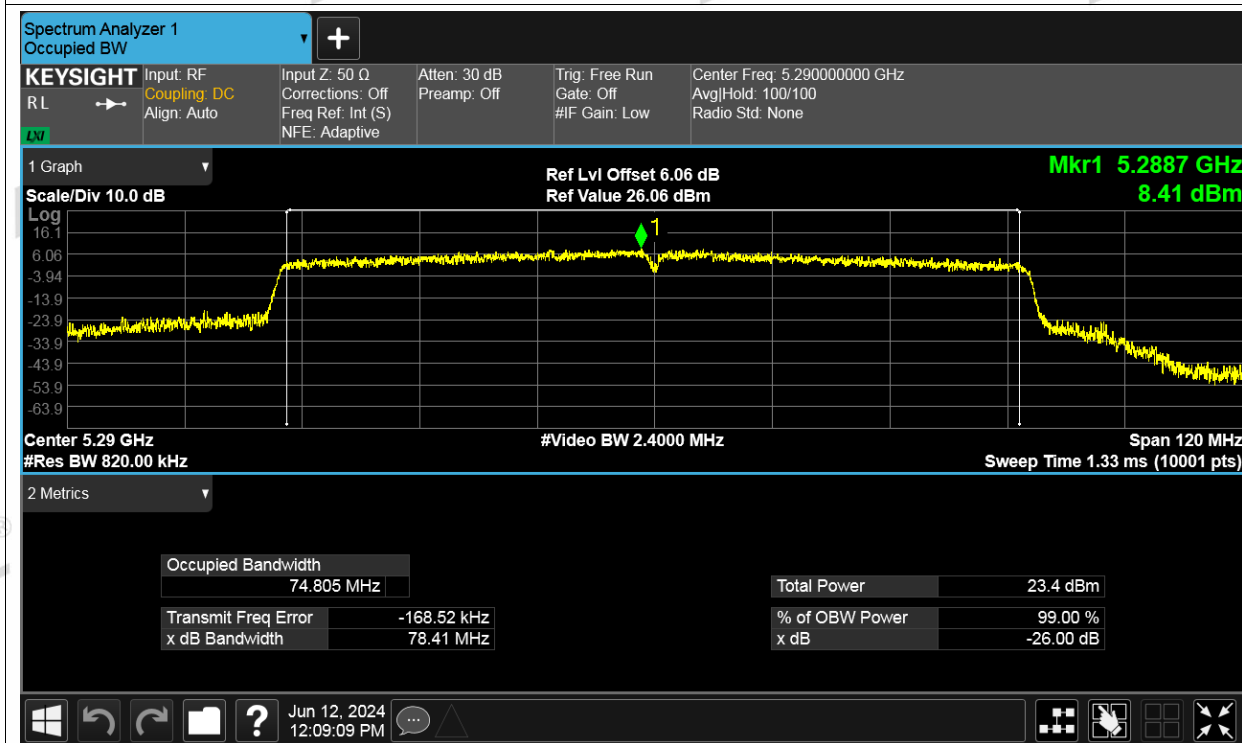 


OBW NVNT ac80 5290MHz Ant3

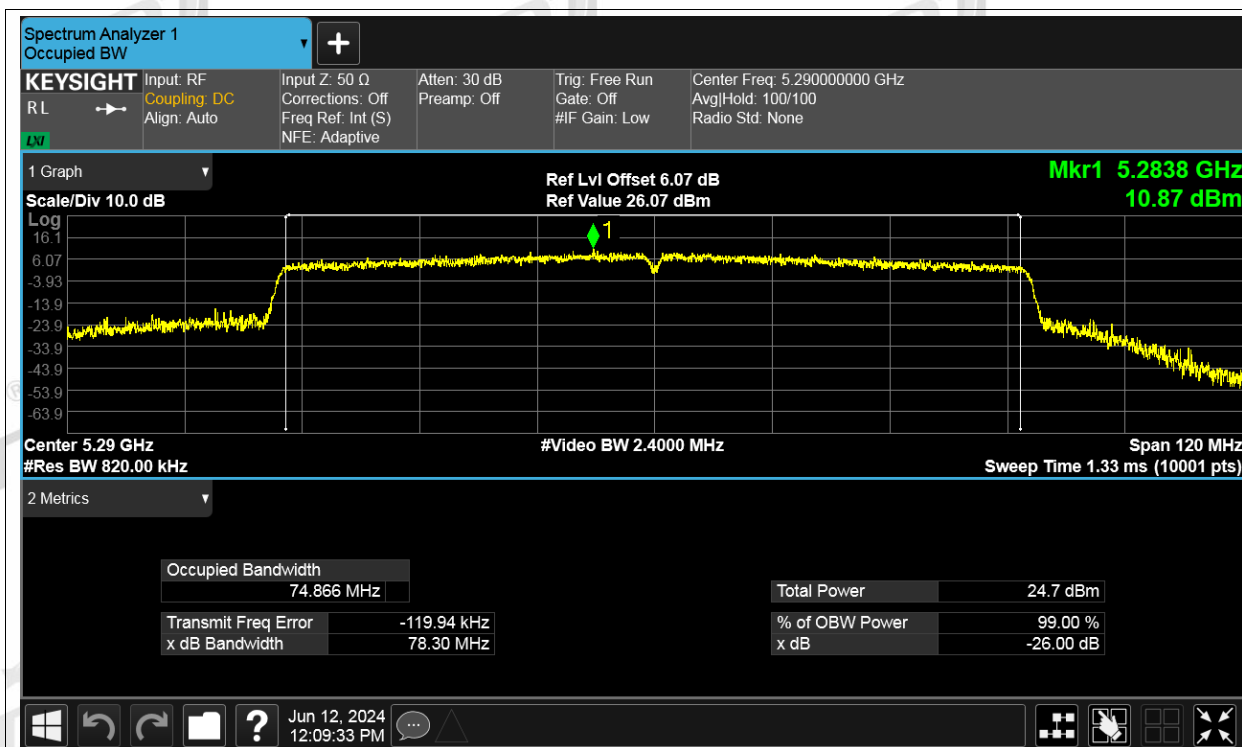 


OBW NVNT ac80 5530MHz Ant1

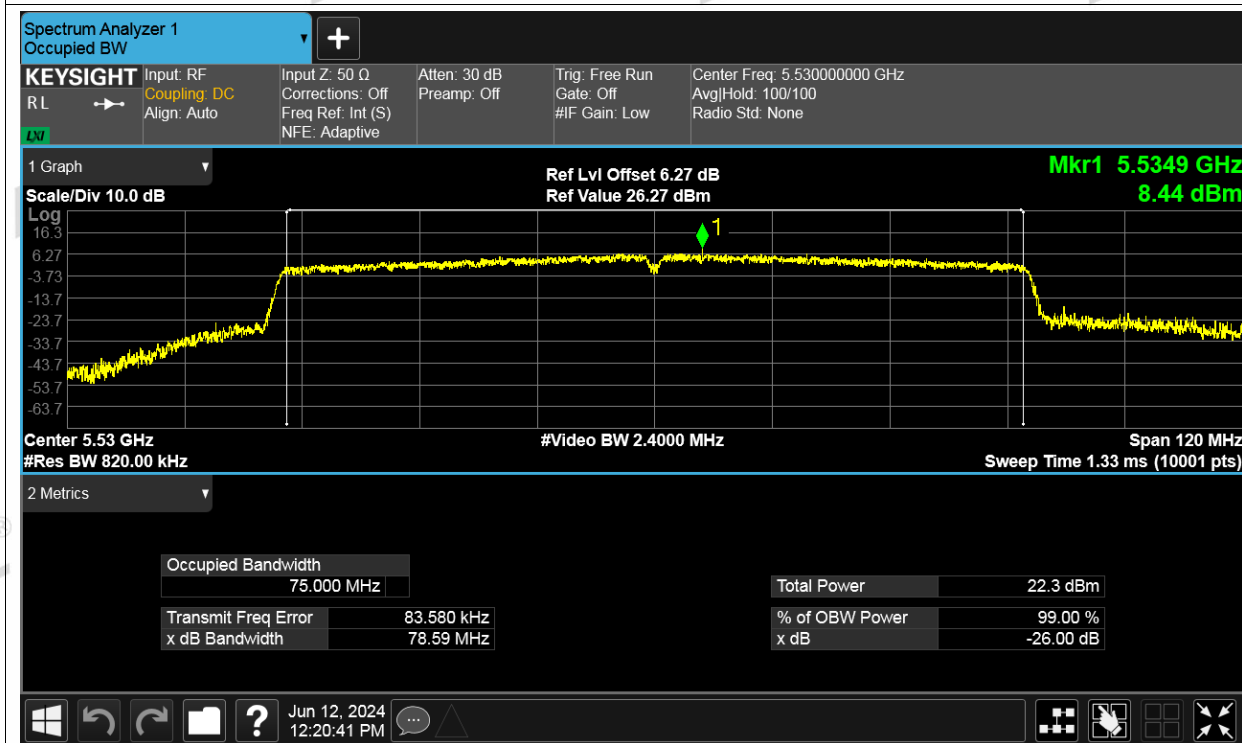 

OBW NVNT ac80 5530MHz Ant2

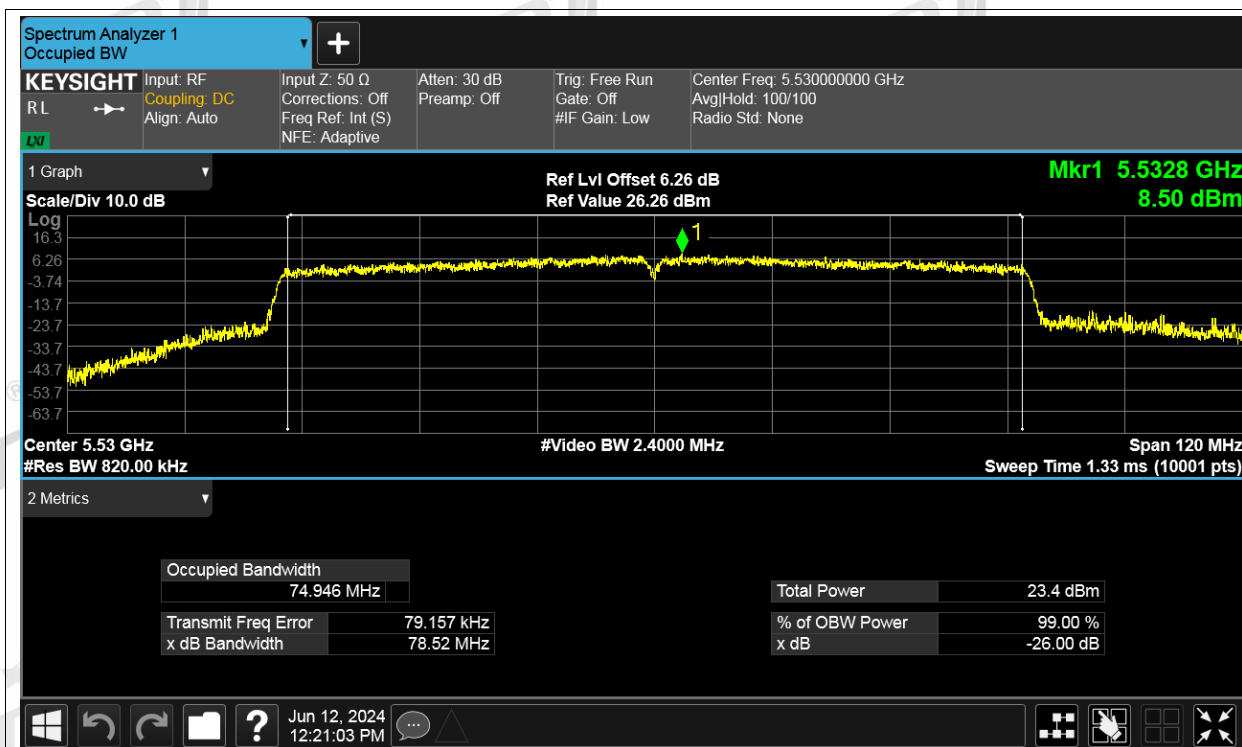 

OBW NVNT ac80 5530MHz Ant3

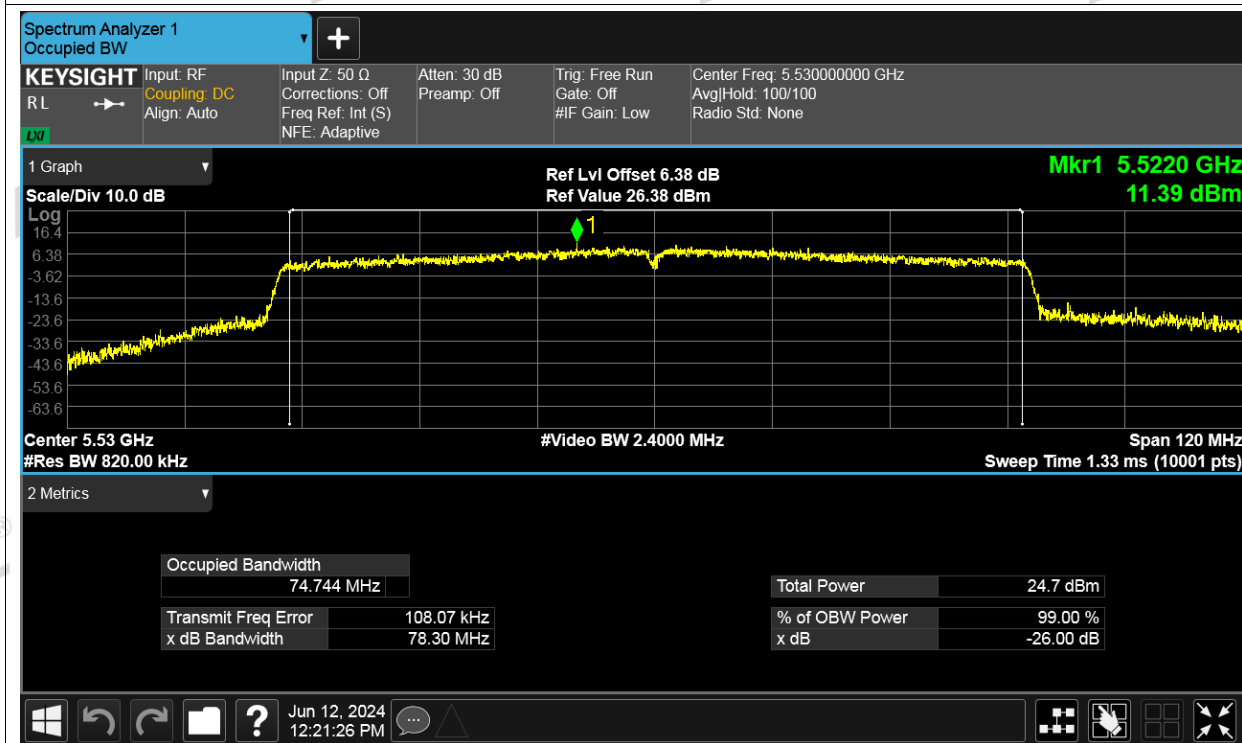 

OBW NVNT ac80 5610MHz Ant1