

# 正面

10CM

**SOUNDLOGIC**  
**XT**

**POWER-BOOM**  
**PORTABLE BLUETOOTH SPEAKER WITH LED LIGHTS**



Product code: 34691

**INSTRUCTION MANUAL**

PLEASE READ ALL INSTRUCTIONS CAREFULLY  
AND RETAIN FOR FUTURE USE

1

### Getting Started

- Remove the speaker from the box.
- Please retain all packaging until you have checked and counted all the parts and the contents against the parts list.

### Package Contents

- Portable Bluetooth Speaker
- Type-C rechargeable cable
- Instruction Manual

### Key Features


- Portable Bluetooth Stereo Speaker with LED Light
- Connects to Bluetooth enabled devices; stream music wirelessly
- Color changing LED lights
- Multi-function: Bluetooth, FM radio, Micro-SD card slot & USB slot
- Built-in microphone for hands-free calls
- Speakers deliver loud sound with heavy bass
- Portable & suitable for all occasions
- Rechargeable battery
- Support TWS function

### SAFETY INSTRUCTIONS

- Keep the speaker away from heat sources, direct sunlight, humidity, water and any other liquids.
- Do not operate the speaker if it has been exposed to water, moisture or any other liquids to prevent against electric shock, explosion and/or injury to yourself and damage to the speaker.
- Do not use the speaker if it has been dropped or damaged in any way.
- Repairs to electrical equipment should only be performed by a qualified electrician. Improper repairs may place the user at serious risk.
- Do not use the speaker with wet hands.
- Do not put objects into any of the openings.
- Keep the speaker free from dust, dirt, etc.
- Do not use this speaker for anything other than its intended use.
- Keep the speaker out of reach of children.
- This appliance is not a toy.
- Batteries (battery pack or batteries installed) shall not be exposed to excessive heat place, such as sunlight, fire or the like.

2

### Description of Parts

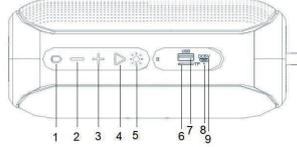

1	ON/OFF/Mode Button
2	Skip Backward/Volume Decrease - Button
3	Skip Forward/Volume Increase + Button
4	Play/Pause/Phone Button
5	Light Button
6	Micro SD (TF) Card Slot
7	USB Slot
8	LED Indicator/Built-in Mic
9	Charging Port

### INSTRUCTIONS FOR USE

#### Charging the speaker

The speaker has built-in rechargeable battery. When the battery is drained out, speaker would turn OFF automatically. Please recharge the battery every time it drains out.

Plug the Type-C end of the included Type-C rechargeable cable into the charging port. Plug the other end into a USB port on your computer or other device made for USB charging. Red LED light illuminates indicating that the device is being charged.

It takes 4-6 hours to fully charge the speaker. Once the speaker is fully charged, LED Light would turn OFF.  
It is recommended to fully charge the speaker before its first use.

#### Turning ON/OFF the Speaker

Before turning ON the speaker, please ensure that it is fully charged.  
Long press ON/OFF button for about 2 seconds to turn on/off the unit.

3

### Connect using Bluetooth Technology

- Long press ON/OFF button for about 2 seconds to turn on the unit. You would hear an indication tone, and blue LED light would flash rapidly, indicating that you are now in Bluetooth Pairing Mode.
- Activate the Bluetooth function on your source device (Mobile Phone or Tablet). Please refer to manufacturer's instructions for instructions on enabling Bluetooth on your device.
- Search for available Bluetooth devices and you would find "POWER-BOOM" - Pair it with this device.
- You might be prompted with "Pair with POWER-BOOM?" message on your source device, with "Cancel" and "OK" options. Please click "OK".
- If required, enter the password "0000" to pair with the device.
- Once paired successfully, you will hear another indication tone, and blue LED will stay on.
- You can now stream wireless music on your speaker through your source device.

### Talking using the Bluetooth Speaker

Please ensure that you are paired with the Bluetooth Speaker to use the below functions.

Function	Operation	Action
Answer Incoming Call	Incoming Call	Press the Phone once to answer an incoming call.
Reject Incoming call	Incoming Call	Long Press the Phone button
End Call	Incoming Call	After your phone conversation, short press the Phone button
Increase Volume	During a call	Short press the + button to increase the volume
Decrease Volume	During a call	Short press the - button to decrease the volume
Redial last number	Standby music and connected to a device	Short press the Phone button twice

### Stream Wireless Music

Please ensure that your device (Phone, Tablet or Other Smart Phone) is paired with the Bluetooth Speaker to stream music wirelessly. Once it is paired, play music from your device.

Function	Operation	Action
Increase Volume	Playing music	Short press the + button to increase the volume
Decrease Volume	Playing music	Short press the - button to decrease the volume
Pause	Playing music	Short press the Play/Pause button will pause the music
Play	Pausing	Short press the Play/Pause button will resume the music
Previous track	Playing music	Long press the Skip Backward button will return you to the previous track
Next track	Playing music	Long press the Skip Forward button will take you to the next track

4

# 反面

### TWS pairing use (If you own 2 Bluetooth Speakers)

- Make sure both speakers are "ON" and not paired with any Bluetooth device. An indication tone would be heard from each speaker.
- Long press the Play/Pause button on any one speaker, an indication tone would be heard. After few seconds, another indication tone would be heard if both speakers pair together automatically.
- Activate the Bluetooth function on your source device (Mobile Phone, Tablet etc). Please refer to manufacturer's instructions for instructions on enabling Bluetooth on your device.
- Search for available Bluetooth devices and you would find "POWER-BOOM" - Pair it with this device.
- You might be prompted with "Pair with POWER-BOOM?" message on your source device, with "Cancel" and "OK" options. Please click "OK".
- If required, enter the password "0000" to pair with the device.
- Once paired successfully, another indication tone would be heard.
- You can now stream wireless music on your speaker through your source device.

Note: TWS stands for True Wireless. If you want to separate 2 speakers for individual use, long press the Play/Pause button on any one speaker.

### Stream music from USB or Micro SD (TF) Card

- Turn ON the speaker.
- Insert the USB drive or Micro SD (TF) Card preloaded with songs into the USB slot or Micro SD (TF) Card Slot of the speaker respectively. Speaker would automatically start playing songs from the USB drive or Micro SD (TF) Card.
- Music, MP3 or Micro SD (TF) Card not included.
- To Skip Track Forward - Long press the Skip Forward button.
- To Skip Track Backward - Long press the Skip Backward button.
- To Pause the Track - Short press the Play/Pause button.
- To Play the Track - Short press the Play/Pause button.
- Short press + to increase the volume or - to decrease the volume.

Note: USB / Micro SD (TF) Card Supports up to 32GB. Supports music file format: MP3, WAV, WMA, AAC, FLAC, USB Flash Drive or Micro SD (TF) Card not included.

### Listening to FM radio

- Turn ON the speaker.
- Plug the Type-C end of the included Type-C rechargeable cable into the charging port of the unit, and leave the other end of the cable open. Type-C cable serves as FM antenna for better reception.
- Press the Mode button each time until it reaches FM radio mode, with sound from a FM radio station.
- To AUTO-SCAN the stations, long press the Play/Pause button. It will take few minutes to search all the stations. Once all the stations are scanned, they get registered in memory, automatically.
- Long press + or - to skip selected stations.
- Short press + to increase the volume or - to decrease the volume.

5

### Color Changing LED Light Mode (LEDs are not replaceable)

- Turn ON the device.
- Short press the Light button each time to change 8 different color changing LED light patterns (including off/light mode). Patterns 1-4, 6 and 7 are the lights that respond to music tunes.

### Tip!

- Press the "Mode button" to switch different functions of the speaker between - Bluetooth / USB Micro SD (TF) / FM radio.  
(Note: This switching function cannot work in TWS pairing use.)
- When the speaker is not in use, turn it OFF in order to save the battery power.

### Specifications

Bluetooth® Version: 5.0  
Wireless Streaming Range: 26-33 Feet  
Size: 9" L x 4" W x 4" H  
Weight: ~293 g  
Power Input: DC 5V  
Charging Time: 4-6 hours  
Play time: 4-5 hours (medium volume)  
FM frequency range: 87.5-108MHz  
Built-in Rechargeable Battery: 3.7V / 2400mAh  
USB / Micro SD (TF) Card Supports up to 32GB, supports music file format: MP3, WAV, WMA, AAC, FLAC  
(Note: Battery life & charging time may vary based on usage, types of devices connected & wireless distance.)

### Troubleshooting

Problem	Possible Cause	Solution
Low sound level	Source (Tablet, Mobile Phone, Laptop, etc.) volume too low. Battery dead	Adjust source volume. Charge Battery.
Sound distorted	Battery nearly dead	Charge Battery.
No sound at all.	Source (Tablet, Mobile Phone, Laptop) turned off. Speaker turned off. Volume turned down source. Media paused on source.	Turn the source on. Turn the speaker on. Adjust volume source. Play media from source.

6

### Care and maintenance

Read the following recommendations before using the Bluetooth Speaker. Following these you will be able to enjoy the product for many years.

- Do not expose the unit to liquid, moisture or humidity to avoid the product's internal circuit being affected.
- Don't use abrasive cleaning solvents to clean the unit.
- Do not expose the unit to extremely high or low temperature as this will shorten the life of electronic devices, destroy the battery or distort certain plastic parts.
- Don't dispose of the unit in fire as it will result in an explosion.
- Don't expose the unit to contact with sharp objects as this will cause scratches and damage.
- Don't let the unit fall down onto the floor. The internal circuit might get damaged.
- Don't attempt to disassemble the unit as it may get damaged if you are not professional.

### FCC Instructions

Cables, changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the product.

NOTE: This product has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This product generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If the product does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the product and receiver.
- Connect the product into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Imported by Oris Inc. LET 4M6/  
Oris America Inc. 14020

7