

# PROSCAN

## 2X4 Inch LIGHT UP BLUETOOTH SPEAKER-FM RADIO Model No:PSP1678\_FD



### User Manual

PROSCAN™ IS A REGISTERED TRADEMARK OF TECHNICOLOR USA INC.  
AND USED UNDER LICENSE TO CURTIS INTERNATIONAL LTD.


**DEAR CUSTOMER**  
In order to achieve the best performance of your product, please read this instruction manual carefully before using, and keep it for future reference.

**NOTE**  
This unit may be submitted to changes in specifications, characteristics and/or operation without prior notice to the user, in order to continue improving and developing its technology.

**Packing list**  
Upon opening the package, please check for the following items:  
1 x Speaker  
1 x Charging cable  
1 x Instruction manual

**Do's and Don'ts**  
• Do not play music at excessive levels as damage to hearing and / or equipment may result.  
• Do not use outdoors in wet or in damp surroundings.

**Specification**  
Speaker Driver: 2\*5W  
Frequency Response: 55Hz-20KHz  
SNR:≥75dB  
THD: ≤10%  
Battery: 3.7V 1500mAh  
DC input: 5V/1A (Adapter not included)  
Loudspeake: 4inch x 2  
FM: 87.5~108.0 MHz  
Transmission Distance: 10m  
Dimension: (WxHxD): 185 X 393 X 150mm

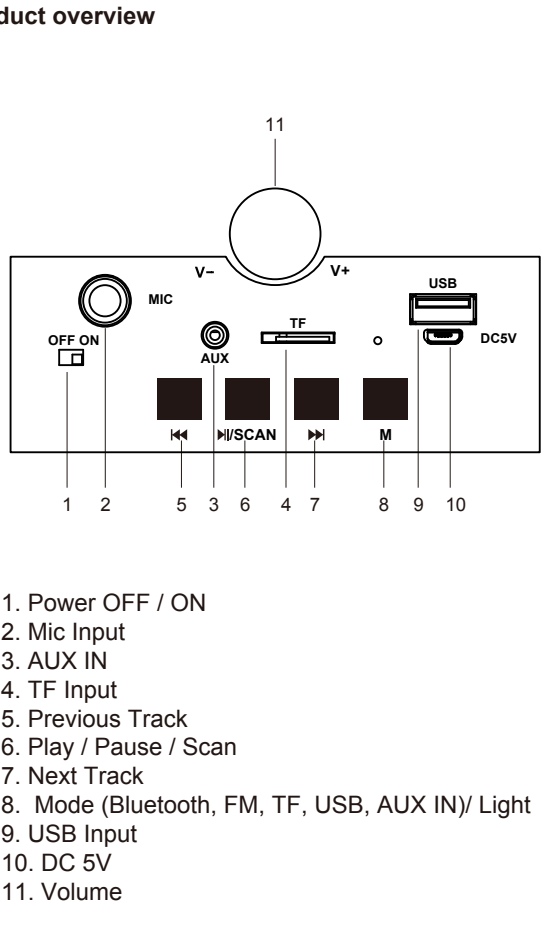

**Mode**  
Short press to switch mode among BT/FM/USB/TF/AUX.  
Long press to turn off the LED light.

**Previous Song**  
Short press to play the previous music under BT/USB/TF, or previous station in FM mode.

**Volume**  
Rotate the knob in the front to control volume.(Turn left to decrease and turn right to increase.)

**Play / Pause**  
Short press for music play/pause.  
Long press "Play/Pause" button to auto-search all stations among frequency 87.5MHz-108MHz. After few minutes,the searching will be finished and you could press "next" or "previous" button to switch stations.The latest station you choose will be memorized.When enter mode next time, it will be enter the station automatically.

**Next Song**  
Short press to play the next music under BT/USB/TF, or next station in FM mode.

**DC 5V**  
Insert a charging cable(Android type) to charge the machine.

**AUX IN**  
Connect a aux device with a 3.5 mm audio cable to enter aux mode.

**OFF/ON**  
Speaker power off/ Speaker power on.

**USB Port**  
Insert an USB drive to play musics.(Ultimate 32G,support MP3 format files)

**TF Port**  
Insert a TF card to play musics.(Ultimate 32G,support MP3 format files)

**FM Mode**  
Press the mode button to change the mode to FM, then press and hold the play/pause button to auto search all stations, after finish auto search all stations, press the next or previous button to select desired station.

**Bluetooth Connection**  
Bluetooth connection  
Press the mode button to change to Bluetooth mode, turn on your Bluetooth devices and tap to search the 'Pro PSP1678', then tap to connect it. It will have double tone and the LED will stop flashing after the Bluetooth connected successfully. You can play the songs now.

Insert a microphone(6.35mm) to the mic jack to make a karaoke.  
(The microphone is not included)

**FCC Statement**  
NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:  
- Reorient or relocate the receiving antenna.  
- Increase the separation between the equipment and receiver.  
-Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.  
-Consult the dealer or an experienced radio/TV technician for help  
Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.  
This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:  
(1) this device may not cause harmful interference, and  
(2) this device must accept any interference received, including interference that maycause undesired operation.

To make a warranty claim, please email support@curtiscs.com or call 1-800-968-9853.

**90 day Warranty**  
This product is warranted to be free from defects in material and workmanship for a period of ninety (90) days from the date of original purchase. During this period, your exclusive remedy is repair or replacement of this product or component found to be defective, at our option; however, you are responsible for all costs associated with returning the product to us. If the product or component is no longer available, we will replace with a similar one of equal or greater value. Prior to a replacement being sent, the product must be rendered inoperable or returned to us.

This warranty does not cover glass, filters, wear from normal use, use not in conformity with the printed directions., or damage to the product resulting from accident, alteration, abuse, or misuse. This warranty extends only to the original consumer purchaser or gift recipient. Keep the original sales receipt, as proof of purchase is required to make a warranty claim. This warranty is void if the product is used for other than single-family household use or subjected to any voltage and waveform other than as on the specified rating on the label (e.g., 120V~60Hz).

We exclude all claims for special, incidental, and consequential damages caused by breach of express or implied warranty. All liability is limited to the amount of the purchase price. Every implied warranty, including any statutory warranty or condition of merchantability or fitness for a particular purpose, is disclaimed except to the extent prohibited by law, in which case such

warranty or condition is limited to the duration of this written warranty. This warranty gives you specific legal rights. You may have other legal rights that vary depending on where you live. Some states or provinces do not allow limitations on implied warranties or special, incidental, or consequential damages, so the foregoing limitations may not apply to you.

For faster service, locate the model, type, and serial numbers on your appliance.

For service assistance and product information, please call: 1-800-968-9853.  
Curtis International Ltd.  
7045 BECKETT DRIVE, UNIT 15, MISSISSAUGA, ON, L5S 2A3 www.curtisint.com

ATTACH YOUR PROOF OF PURCHASE HERE, PROOF OF PURCHASE IS REQUIRED TO OBTAIN WARRANTY SERVICE.  
Please have the following information available when you contact the Support Team:

- Name, address and telephone number.
- Model number and serial number.
- A clear, detailed description of the problem.
- Proof of purchase including dealer or retailer name, address and date of purchase.