True Wireless Earbuds



charging case



In the Box






Safety Information

- Read and follow the instructions carefully.
- Frequent exposure to high volume levels could cause permanent hearing damage.
- Don't attempt to replace earbuds or charging case batteries yourself- damaging the batteries could cause overheating and injury.
- Use of noise-canceling earbuds while operating a vehicle is not recommended and is illegal in some areas. Follow any laws regarding earbud and headphone use while operating a vehicle.
- Only use a standard charger to charge the earphones to avoid damagingthe battery.
- Frequent charging may reduce the battery performance.
- Do not expose the earbuds to direct heat.
- Keep the charging ports and earbuds clean.
- Do not dismantle the product yourself for any reason.
- Do not clean the product with oil or any corrosive cleaning agents.
- Do not use this product in any potentially hazardous places.

Introduction to Parts

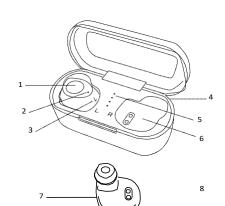

- 1. Control button
- 2. Earbud indication light
- 3. L/R mark
- 4. USB-C charging port
- 5. Battery indicator
- 6. Earbud charging dock
- 7. Microphone
- 8. Earbud charging connectors

Page 2

FCC ID:2AX9FDW-TWS350B **W** DARTWOOD

- 1. Fully charge the earbuds before the first use.
- 2. Remove the earbuds from the charging case, the earbud indication light will flash red and blue.
- 3. Search for "DW-TWS350B" from the Bluetooth menu of your mobile device.
- 4. Once paired, the earbuds will connect to your paired device automatically when removing from the charging case.

Control Buttons

Left control button

■ ∅ �



R x3

(S) Long press for 2 seconds

Long press

Long press for 2 seconds

(I) S Long press for 5 seconds

Right control button













(S) Long press for 2 seconds



- 1. The earbuds indication light will flash red when
- 2. To charge the earbuds, insert them into the charging case. Make sure to place the correct earbud in the corresponding dock.
- 3. Close the charging case cover to charge the earbuds. It takes around 1.5 hrs to fully charge the earbuds.
- 4. To charge the charging case, use the cable provided to connect it to a power source.
- 5. The battery indicator will show the progress during charge, all indicators will turn solid blue once fully charged.

WARNING: This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:(1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Page 4

Specifications

DW-TWS350B Model: Color: Black Bluetooth version: 5.1 JL Driver size: 0.3 in (8 mm) Approx. 6-18 hrs with Music playtime: charging case Earbuds charging time: Approx. 1.5 hrs Charging input: 5V 1A

Connection distance: 32.8 ft (10 m) Impedance: 16Q Earbud dimension: 0.88 x 0.86 x 0.96 in

Charging case dimension: 2.83 x 1.30 x 1.30 in 1.57 oz

Net weight:

- * Specifications are subject to change without notice. Battery life and charge cycles vary by setting and the actual environment.
- * All pictures shown are for illustration purposes only. Actual products may vary due to product enhancement.

Get More Support

Scan the QR code below or email us at: contact@wasserstein-home.com





Page 5

NOTE: This equipment has been tested and found to comply with the	-Reorient or relocate the receiving antenna.
limits for a	- Increase the separation between the equipment and
Class B digital device, pursuant to part 15 of the FCC Rules.	receiver.
These limits are	-Connect the equipment into an outlet on a circuit different
designed to provide reasonable protection against harmful	from that to which thereceiver is connected.
interference in a	-Consult the dealer or an experienced radio/TV technician for
residential installation. This equipment generates uses and	help
can radiate radio	Changes or modifications not expressly approved by the
frequency energy and, if not installed and used in	party responsible for compliance could void the user's
accordance with the instructions,	authority to operate the equipment.
may cause harmful interference to radio communications.	
However, there is no	
guarantee that interference will not occur in a particular	
installation. If this	
equipment does cause harmful interference to radio or	
television reception, which	
can be determined by turning the equipment off and on, the	
user is encouraged to	
try to correct the interference by one or more of the following	
measures:	
Page 6	Page 7