

高端蓝牙耳机颈部按摩仪 BLUETOOH NECK MASSAGER


Tthe High-end Bluetooth headset neck massager

User ManuaL 使用说明书

目录/directory

目录	1
* (E-1) = 1	
产品示意图	
操作方法	3
蓝牙耳机使用方法	3-4
产品充电	4
温馨提示	4
故障排查	4-5
日常保养	5-6
废弃时安全须知	6
注意事项	7-10
保修规定	10
保修卡	11
Product diagram	12
Operation method	13
How to use bluetooth headset	14
Tips	15
Routine maintenance	15
Troubleshooting	
Precautions	

产品示意图

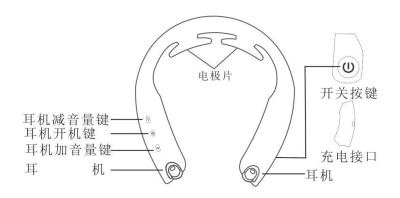



佩戴方法如图





操作方法

- 1.使用前,首先用湿毛巾将颈椎部位皮肤湿润,然后将产品戴到脖子上,使得电极片紧贴颈椎部位皮肤,调整好产品位置,开启主机并调节合适的按摩力度和模式。
- 2. 长按主机"⑩"按钮两秒,主机开机(伴随蜂鸣器"嘀"一声,指示灯亮蓝灯),进入默认模式,默认档位(0档)。开机状态下每按一下主机按钮,蜂鸣器"嘀"一声,力度增加一档,直至15档,再按"嘀嘀"两声,力度不变。开机状态下长按主机"⑩"两秒,蜂器"嘀嘀"两声,产品关机。
- 3. 遥控器 "M"为模式键,按模式键,可切换模式。共有三个模式,每按一次,蜂鸣器"嘀"一声,模式递增一次,三个模式或五个模式可循环切换(注: M1模式,M2模式,M3模式或者至M5模式,具以型号配置为准)。每切换一个模式,力度回归默认0档。
- 4. 遥控器"十"为力度加强按键,每按一次,蜂鸣器"滴"一声,强度递增一级,力度分15档(0、1、2.....15,在力度15时再按"十"档则"嘀嘀"两声,力度不变,保持15档。
- 5. 遥控器"一"为力度减弱按键,每按一次,蜂鸣器"滴"一声,强度递减一级,力度分15档(注:15、14、.....0,在力度为0时再按"一"档则"嘀嘀"两声,力度不变,保持0档。
- 6. 遥控器"圖 为加热键/关闭加热键,按加热键蜂鸣器"滴"一声开启主机加热功能,产品两电极片会发热,温度会稳定在37-43℃之间。再按此"圖"键蜂鸣器则"嘀嘀"两声,停止主机加热功能。
- 7. 主机定时15分钟。当主机开机后,15分钟后自动关机。
- 8. 主机开启状态下,未正常佩戴使用产品时,产品会在30秒自动关机。
- 9. 如语音版,按键时会有相应的提示语音播报功能,比如播报1档/2档/3档等,具体以产品型号实物为准。

蓝牙耳机使用方法

- 1. 电源键: 长按开机, 再长按关机
- 2. 短按播放/暂停
- 3. 来电时短按可接听电话,再次短按可挂断电话;长按可拒接电话。
- 4. 连续快按两下会自动拨打你最后一次拨打的电话。
- 5. + 键: 长按调大音量 短按上一曲
- 6. -键: 长按调小音量 短按下一曲
- 7. 长按电源键三秒开机,红蓝灯闪烁,此时进入配对模式。在手机上打开蓝牙,搜索到"HGKBT"并且点击配对,配对成功后会听到"connected或蓝牙已连接"。
- 8. 蓝牙耳机在没有连接到任何设备时,为了省电,五分钟后会自动关机。

产品充电

- 1. 当主机缺电时候电源健亮橙色灯,可用MicroUSB线一端插入主机另一端插入带安卓头手机完电器(输出是5V 1A/2A),充电时橙色灯闪烁,充满时蓝色灯闪烁。
- 2. 遥控器电池更换时候可用用刀片或尖锐的物品从缝隙处敲处即可打开更换电池,注意电池正极朝上。(电池型号CR2032)

温馨提示

- ●产品开机运行15分钟会自动关闭,建议每天使用不超过45分钟,每周按需使用。
- ●本产品使用后应置于通风干燥处存放。
- ●切勿将其它重物压在产品上面使用。

故障排查

- ●若在使用产品时遇到问题,请参考下列几点提示及解决方式。
- 若产品仍处于故障状态或无法使用,请关掉电源

●使用者请勿自行拆卸或修理产品,自行拆卸或维修而导致产品 损坏将造成产品保修失效,公司将不承担该情况所造成的任何 后果。

状况	可能原因/处理方式
无法启动	1. 内部充电电池电量不足。 2. 遥控器电池没电。 3. 请确认主机产品开关键是否已按下。
不能充电或 无充电指示 灯显示	1. 请检查USB连接线和主机及手机电源适配器是 否连接好。
显示正常但 无感觉	1. 电极片是否直 接接触皮肤?调整位置使其贴紧皮肤。 2. 电极片和皮肤之间是否有头发或衣物、 饰品等物品?移开或去除物品。 3. 力度档位是否为0档?调节增加按摩力度。
有刺痛感	1. 电极片与颈部皮肤是否贴紧?需调整位置使其贴紧皮肤。 2. 按摩时间是否太长?建议一次按15分钟,一天2至3次。 3. 按摩力度是否过大?可调小力度。 4. 皮肤是否对电极片过敏?严重过敏者需先进行脱敏治疗。 5. 气候寒冷、皮肤干燥?用湿毛巾湿润皮肤后使用6. 皮肤表面是否有伤口?不可将电极片放于伤口进行按摩。
刺激很弱	1. 按摩仪电极片与颈部皮肤是否贴紧?需调整位置使其贴紧皮肤并调整适当力度。 2. 电极是否有污垢或油渍?清洁电极片表面。 3. 电池是否电量不足?若电量不足请充电。 4. 按摩档位力度偏小?调节增加按摩力度。

日常保养

●清洁保养本产品时,请将主机关机,使用湿纸巾清洁电极片, 当特别脏时可用少许医用酒精(酒精浓度75%)进行擦拭消毒。

- ●日常保养时请用中性清洁剂及柔软布擦拭,不可使用带有腐蚀性的清洁剂,不得放入水中浸泡或漂洗。
- ●清洁过程中应防止水或其它液体进入机体内,以免使用时发生 短路和触电危险。

废弃时安全须知

▲本品所用电池为专用充电式电池,不得使用于其他产品,请勿 对己取出的充电式电池进行充电。

▲危险

- ●请勿投于火中,使其过度受热
- ●请勿用钉子刺穿、重力冲击或进行分解改造
- ●请勿将电池正负极直接用金属连接
- ●请勿将其与项链、发卡等一起存放
- ●请勿在火炉边、烈日下等高温场所进行充电、使用和放置 以上情形均可引起发热、起火、破裂等现象。

▲警告

请将取下的充电式电池置于婴幼儿触及不到的地方,以防止被误吞。

- ●若出现被误吞的情形时,请立即找医生诊治
- 当电池液泄漏时,请勿徒手接触液体,并按以下方法进行处理。
- ●仅限产品在废弃之时可进行分解,若不遵守,可能导致火灾,触电,受伤等事故发生,若需修理(更换电池情形除外)时,请咨询你当初购买本产品的商家或店铺客服。
- ☆产品所用的锂离子电池是可回收再生的贵重资源,请在使用 完毕废弃之时,将锂离子电池取出,交给可进行充电式电池 回收再生处理的专业机构进行处理。

注意事项

▲危险

- ●请绝对不要与以下的医用电子器械一起使用:
- 1. 心脏起博器等体内植入型医用电子器械:
- 2. 人工心肺等维持生命用医用电子器械;
- 3. 心电图仪等医用电子器械:
- *会造成这些医用电子器械产生误动作,可能会危及生命;
- 4. 加油站、高粉尘车间、煤气等易燃易爆场所禁用。

▲警告

- ●如果患者在身上同时使用高频手术设备和本产品时,产品电极 片部位可能引起烧伤,也可能损坏产品。
- ●如果在短波或微波治疗设备附近使用(1M)本产品时,产品的输出可能不稳定。
- ●按摩中电极片应避免接触伤口及瘢痕。
- ●按摩时, 电极片不可置于胸部心脏附近, 否则会增加心脏纤颤的危险。
- ●产品建议一个用户使用。交叉用户使用时,请清洁产品上的电极片后使用。
- ●使用产品时应将电极片紧密的贴合在皮肤上,均匀接触。
- ●本产品电极片具有发热功能,同一部位长时间(超过15分钟)使用热敷功能时可能导致低温烫伤。
- ●使用中或使用后出现身体不适,停止使用,并咨询医生。
- ●本产品含有锂电池,请勿自行拆卸、改装、水浸产品或投掷火中,否则可能导致产品损坏爆炸。
- ●下列情形,请向医生咨询后使用。否则可能会发生事故或引起身体不适。
- 1. 正在接受医生治疗、并感觉身体异常的患者。
- 2. 心脏、脑神经异常的患者。
- 3. 体温超过38度(发热期)的患者。
- 4. 感染性疾病的患者。

- 5. 皮肤知觉障碍或皮肤异常的患者。
- 6. 正在服用药物的患者。
- 7. 血压异常的患者。
- 8. 不能自由表达自己意愿的患者。
- 9. 由于糖尿病等造成高度末梢循环障碍而产生知觉障碍的患者。10. 皮肤对不锈钢电极片过敏的患者。
- ●下列情形禁止使用
- 1. 恶性肿瘤患者
- 2. 有出血倾向的患者
- 3. 孕妇、产妇
- 4. 急性化脓性炎症患者
- 5. 心脏起博器使用者
- 6. 金属内置物患者
- 7. 人体的心脏附近
- ●请勿在心脏附近、颈部上方、头部、口腔、阴部或皮肤疾患等 部位使用且不能同时治疗双脚脚底。另外,使用时不要压迫内 脏。否则可能会发生事故或引起身体不适。
- ●请勿与其他医疗器械或2台以上本产品一起使用,否则可能会引起恶心或身体不适。
- ●请勿用于使用说明书中所记载的按摩以外的目的,否则可能会 发生事故,产生故障。
- ●请勿使用表面有缺口、损坏的电极片,否则可能会发生事故、 产生故障。
- ●请勿擅自拆卸、修理和改造本产品,否则可能会导致故障或触 电事故。

▲注意

- ●如果因本产品异常而感到身体不适时,请立即停止使用。 身体或皮肤如有异样的感觉,请向医生咨询并遵医嘱行事。
- ●在按摩过程中,若想将电极片移动位置或移动至其他人身上时,请务必将电源切断后再移动,否则可能会受到强烈电击。
- ●请勿带着电子器械进行治疗。否则可能使电子器械误操作(如

电子手表时刻紊乱).

- ●发生不能运转的异常情况时,请立即切断电源并取下,否则可能会产生高温或短路,发生事故。同时联系客服售后咨询。
- ●请勿用湿手插拔USB充电线,否则可能会导致触电或发生事故。
- ●请勿给儿童或无表达意识能力的人使用,否则会引发事故或引起身体不适。
- ●请勿在浴室等湿度高的地方使用,或者边洗澡边使用产品,否则可能会受到强烈电击,并损坏产品。
- ●就寝时请勿使用,否则有可能使本体产生故障,另外电极片有可能被移到其他部位而产生身体不适。
- ●驾驶汽车时请勿使用,否则可能因刺激过大引起身体不适,导 致事故。
- ●请勿将电极片长时间贴在患处,否则可能会引起皮炎症。
- ●在按摩时,请勿使皮带、项链等物品的金属部分接触电极片, 否则可能会受到强烈电击。
- ●请正确佩戴本产品,用于颈椎部位,左右对称佩戴,否则可能 会发生事故或引起身体不适。
- ●从本体上拔下USB充电线时,请勿拉拽导线,而应握住导线插头拔出,否则可能导致触电或损坏产品。
- ●产品电极片具有表面发热功能,对热不敏感或容易热过敏体质的用户使用前,请咨询医生。
- ●产品长时间工作时,表面会有发热的现象,这属于正常现象。
- ●遥控器电池长期(超过3个月)不用时,请取出电池。
- ●遥控器电池电量耗尽时,请尽快更换同型号的新电池,电池型CR2032。遥控器电池更换时,切勿装反正负极。
- ●遥控器电池用完毕后,请按照居住地的相关规定进行废弃处理。

▲建议

- ●请确认主机按钮正常工作后方可使用。
- ●初次使用时,或产品长时间搁置后电池电量损耗,请按照使用 说明书进行充电操作,确保其能正常工作。
- ●废弃本产品时,请依照城市有关环境保护规定进行处理,否则

可能会造成环境污染。

- ●建议16周岁及以上的人群使用。
- ●请勿在以下场所使用、存放本产品: 阳光直射的场所 高温多湿的场所 有水的场所 灰尘较多的场所 烟火附近 容易受到振动冲击的场所 强电磁场所。

保修规定:


- 1.保修卡只在中国大陆地区有效(台湾、澳门、香港地区无效)。
- 2.消费者为家庭生活使用需要,购买的HGK电器产品。自产品购买之日起正常情况使用下整机保修一年。
- 3. 在保修期内,正常使用情况下发生故障而需要免费维修的,请持本卡和发票(或收据)返厂维修。
- 4. 属下列情况,不享受免费保修,但是可以实行收费修理:
- a. 消费者因使用、维护、保管不当造成损坏的:
- b. 非承担三包修理者拆动造成损坏的:
- C. 无三包凭证及有效发票(收据)的;
- d. 三包凭证型号与修理产品型号不符或者涂改的:
- e. 因不可抗拒力造成损坏的。
- 5. 保修卡遗失不补,请妥善保管。
- 6. 除本保修卡规定的产品维修事宜以外,持有效保修卡的用户 报修期间内同时享有国家相关法律法规规定的范围内的其他 权利。

产品保修卡


购买产品时,请认真购买此卡,并予以妥善保管

产品名称	
型号	
产 地	
保修期限	
发 票 号	
购机日期	
送修时间	
交验时间	
故障维修处理情况	
维修单位	
维修人员签字	

Product diagram

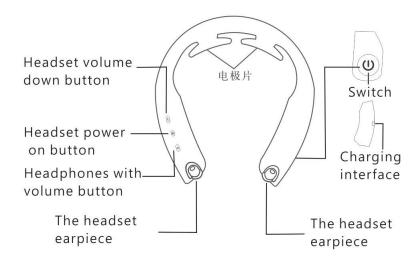



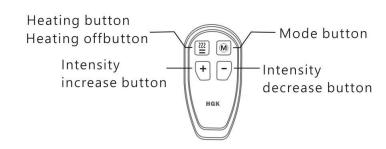

Wearing method





Operation method

- 1. Before use. fist wet the skin of the cervical spine with a wet towel, and then put the product around the neck, make the electrode close to the skin of the cervical spine, adjust the position of the product, turn on the host and adjust the appropriate massage intensity and mode.
- 2. Long press the host "0" button for two seconds, turnon the host (with the buzzer "beep "sound and prompt light), enter the default mode with the default level (0). Press the host button, add the intensity by one level with a beep sound. Until level 15, press the button and hear two beep sounds with no intensity change. Long press host "0" for two seconds when the machine is on, hear two beep sounds and turn off the products.
- 3." M" on the remote control is the mode button. Press the mode button to switch the mode. There are three modes. After each press, it will send out"beep" sound and switch to higher mode. The three modes can be switched in cycle (Note: M1 mode, M2 mode, M3 mode). Each time a mode is switched, the intensity returns to the default 0 level.
- 4."\to on the remote control is the intensity increase button. After each press, it will send out "beep" sound and switch to higher mode. The intensity is divided into 15 levels (0, 1, 2..15). When the intensity is at level 15, when pressing"\to ", it will send out two"beep" sound with same intensity at level 15.
- 5."—"on the remote control is the intensity decrease button. After each press, it will send out beep sound and switch to lower mode. The intensity is divided into 15 levels (0, 1,2... 15) When the intensity is at level 0, t will send out two"beep" sound with same intensity at level 15 after pressing"—."
- 6." on the remote control is the heating button. Press the heating button and start host heating function with a beep" sound. The two electrode will be hot at the temperature of 37~43"C. Press the "

button again and the buzzer will" beep "twice to stop adding the host Heat function.

- 7. The host is scheduled for 15 minutes. When the host is turned on, it will automatically shut down after 15 minutes.
- 8. When the host is turned on, the product will automatically shut down in 30 seconds when the product is not put on normally.
- 9. For the voice version, there will be corresponding prompt voice broadcast function when you press the button, such as broadcasting the first/second/third file, etc. The specific product model shall prevail.

Product charging

- 1. When the host battery is running out, the power button lights up in orange. You can use the Micro-USB cable to plug into the other end of the host and plug in the charger with the Android head (the output is 5V1A/2A). When charging, the orange light flashes. When it is full, the blue light flashes.
- When the remote control battery is replaced, a coin can be inserted into the battery knob slot. Turn it counterclockwise to the alignment position to open the replacement battery. Note that the battery positive pole is facing up. (Battery model: Cr2032)

How to use bluetooth headset

- Power button: long press to turn on/off
- short press to play/pause music.
- When have incoming call, short press to answer the call, short press again to hang up. long press can refuse the call.
- Continue press two times will redial the last phone number you dialed.
- Key +: long press for turn up the volume, short press for move previous song.
- Key -: long press for turn down the volume, short press for move next song.
- •Long press the power button about three seconds to boot, the blue and red light flashing, it's the state of the pairing. At this time, search the corresponding wireless device name on the mobile phone, click the name on the mobile phone for the wireless pairing. Hear

"connected" means the pairing is successful

• If not connect with any wireless devices and without any operation, the earphone will automatically turn off after 5 minutes.

Tips

- The product will be automatically turned off after 15 minutes of operation. It is recommended to use it for no more than 30 minutes per day.
- The product should be stored in a dry and ventilated place after use.
- Do not place other weights on the product.
- Don't pull on the rubber plug at the USB charging port, as it may cause rupture and falling off.

Routine maintenance

- When cleaning and maintaining this product, please turn off the host, use a wet paper towel to clean the electrode. When it is particularly dirty, use a little medical alcohol (alcohol concentration 75%) to wipe and disinfect.
- Please wipe with neutral detergent and soft cloth during daily maintenance, do not use corrosive detergent and don't place it into water for soaking or washing.
- During the cleaning process, water or other liquids should be prevented from entering the body to avoid short circuit and electric shock during use.

Troubleshooting

- •Ifyou have problems using the product, please refer to the following tips and solutions.
- If the product is still in a fault condition or cannot be used, turn off the power.
- Users should not disassemble or repair the product by themselves.
 Dismanting or repairing by themselves will cause damage to the product and cause the invalidity of warranty. The company will not be responsible for any consequences caused thereby.

Problems	possible cause/treatment
Failure to start	 The internal rechargeable battery is runninglow The remote control battery is dead. Please confirm whether the host product switch has been pressed.
Failure to charge or no charge light	
Normal display but no stimulation	 Does the pad contact the skin directly? Adjust the position so that it is close to the skin. Is there hair or clothing, jewelry, etc. between the pads and the skin? Move away or remove items Is the intensity level at 0? Increase the massage intensity.
Tingling sensation	 Is the massager's electrode and neck skin closely contacted? adjust the position so thatit' sstick to the skin. Is the massage time too long? It is recommended to massage for 15 minutes at a time, twice a day. Is the massage intensity too high? Adjust to low level Is the skin allergic to the electrode? Those with severe allergies need to be desensitized first. Is the climate cold and the skin dry? Use a wet towel to moisten the skin and use it. Does the skin have a wound? Do not put the electrodes on the wound for massage.
Weak simulation	 Is the massager s electrode and neck skin closely contacted? adjust the position so that it's stick to the skin and adjust intensity. Is the electrode dirty or oily? Clean the electrode surface. Is the battery running low? Please charge if the battery is low. Is massage intensity level too low? Increase massage intensity.

Precautions

▲Danger

- Please never use the product with the following medical electronic devices:
- 1. Heart pacemakers and other implantable medical electronic devices;
- 2. Artificial heart and lungs and other life-supporting medical electronic devices;
- 3. Electrocardiographs and other medical electronic devices;
- * These medical electronic devices may cause malfunctions and can be life-threatening.
- 4. Petrol stations, high dust workshops, gas and other inflammable and easy-explosive area are prohibition of use,

▲Warning

- •If the patient applies high-frequency surgical device and the product on the body at the same time, the electrode of the product may cause burns and damage to the product.
- If the product is used near (1M)a short-wave or microwave therapy device, the output of the product may be unstable.
- The electrode should prevent contact with wounds and scars during treatment.

When you sue the product, don't place the electrode near the chest heart, otherwise the risk of heart fibrillation will increase.

- The product is recommended for use by one user. When it's used by different users, clean the electrode on the product before using it.
- When you use the product, stick the electrode tightly and evenly to the skin.
- The electrode of this product has a heat generating function. When the hot compress function is applied on the same part for a long time (more than 15 minutes), it may cause low temperature burns.
- Ifyou feel unwell during or after use, stop using it and seek medical attention.
- •This product contains a lithium battery. Don't disassemble, modify, flood the product, or throw it into fire, otherwise it may result in product damage and explosion
- In the following cases, consult your doctor before use, otherwise it may cause accidents or cause physical discomfort,

- 1. Patients under medical treatment and feel discomfort.
- 2. Patients with abnormal heart and brain nerves.
- 3. Patients whose body temperature exceeds 38 degrees (fever period).
- 4. Patients with infectious diseases.
- 5. Patients with skin perceptual disorders or skin abnormalities.
- 6. Patients under medication
- 7. Patients with abnormal blood pressuse.
- 8. Patients who are not free to express their wishes.
- 9. Patients with sensory impairment due to high peripheral circulatory disorders such as diabetes.
- 10. Patients with skin allergies to stainless steel electrodes.
- Usage under the following conditions is prohibited.
- 1. Malignant tumor patients
- 2. Patients with bleeding tendency
- 3. Pregnant women, lying-in women
- 4. Acute suppurative inflammation patients
- 5. Heart pacemaker users
- 6. Patients with metal implant
- 7. Near the heart
- Don't apply it near the heart, above the neck, head, mouth, genitals, or skin disorders and don't treat the soles of the feet simultaneously. In addition, don't compress the internal organs when using. Otherwise, an accident or physical discomfort may occur.
- Don'tuse with other medical devices or more than 2 products. Otherwise, nausea or physical discomfort may occur.
- Don't use for purposes other than the ones described in the instruction manual. Otherwise, accident or malfunction may occur.
- Don't use the electrode with a chipped or damaged surface. Otherwise, accidents or malfunctions may occur
- Don't disassemble, repair or modify this product without authorization. Otherwise, malfunction or electric shock may occur.

▲Note

- If you feel unwell due to an abnormality in this product, stop using it immediately.
- •If your body or skin feel strange, consult your doctor and follow the doctor's advice.
- if you want to move the pad or place it other on other person during massage, be sure to turn off the power before moving it. Otherwise, you may receive a strong electric shock.
- Don't treat while having electronic devices. Otherwise, the electronic device may malfunction (for example, the electronic watch disorder).
- •If abnormal operation occurs, immediately switch off the power supply and remove it. Otherwise, high temperatures or short circuits may occur and lead to an accident. At the same time contact customer service for after-sales advice.
- Don't plug or unplug the USB charging cable with wet hands. Doing so may result in electric shock or accident.
- Don't use it for children or people who have no expressiveness, otherwise it may cause an accident or cause discomfort.
- Don't use it in a place with high humidity, such as a bathroom, or use it while bathing. Otherwise, you may receive a strong electric shock and damage the product.
- Don't use it when you are sleeping. Otherwise, it may cause the main body to malfunction. In addition, the pad may move to other parts and cause discomfort.
- Don't use while driving a car, otherwise it may cause physical discomfort due to excessive stimulation, resulting in an accident.
- Don't stick the electrode to the affected area for a long time, other wise it may cause skin inflammation.
- When massaging, don't use the matal parts of belts, necklasce, etc., to touch the electrode, otherwise you may receive a strong electric shock.
- Don't apply the product on the same place for long time (more than 30 minutes), otherwise it may cause muscle fatigue at the massage site to cause physical discomfort.
- Please wear this product correctly and use it on the cervical spine. Wear it symmetrically. Otherwise, accidents or physical discomfort

may occur.

- When unplugging the USB charging cable from the body, do not pull on the cable, but rather, pull the cable plug and pull it out. Otherwise, it may result in electric shock or damage to the product.
- •The product electrode has a surface heating function for users who are not sensitive to heat or subject to heat allergies.
- Please consult a doctor before use.
- When the product is working for a long time, the surface will be hot, which is normal.
- When the remote control battery is idle for a long time (more than 3 months), remove the battery.
- When the remote control battery is exhausted, replace it with a new battery of the same model as soon as possible. Battery modet: Cr2032.
- When replacing the remote control battery, do not install the pole reversibly.
- After the remote control battery is exhausted, dispose of it according to the relevant regulations in your place of residence.

▲Suggestion

- Please make sure that the host button is working properly.
- •Whenyou use it for the first time, or if the battery loses power after the product has been left idle for a long time, please perform the charging operation according to the instruction manual to ensure that it can work normally.
- When disposing of this product, please dispose of it in accordance with the relevant environmental protection regulations of the city, otherwise
- it may cause environmental pollution.

It is recommended for people aged 16 and above.

- Don't use or store this product in the following locations:
- Places exposed to direct sunlight
- Places subject to high temperature and humidity
- Places with water
- Dusty places
- Places near the fireworks
- Places susceptible to vibration shocks
- Strong electromagnetic places





广州市创纬电子科技有限公司 Guangzhou Chuangwei Electronic Technology Co. Ltd 地址:广州市花都区新雅街东莞村商业街自编5号之十八四楼 Address: No. 5, Dongguan Village Commercial Street, Xinya Street, Huadu District, Guangzhou City.

I 清费者服务热线: 020-61852750 Customer Service Hotline:020-61852750 更多信息请访问www.HGKGD.com Visit us for more information www.HGKGD.com



This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- -- Reorient or relocate the receiving antenna.
- -- Increase the separation between the equipment and receiver.
- -- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- -- Consult the dealer or an experienced radio/TV technician for help.

Warning: changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment