

140.00 mm

100.00 mm

封面

折叠线

USER MANUAL

V1.0

FCC Warning

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

-Reorient or relocate the receiving antenna.


Increase the separation between the equipment and receiver.

Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio/TV technician for help.

Radiation Exposure Statement

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator and your body.

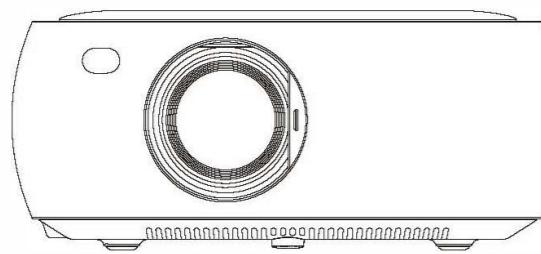


EN Important safety considerations

The following safety instructions ensure the long service life of the projector to avoid fire or electric shock. Make sure to read them carefully and pay attention to all the following warnings.

- Do not install the projector in sites with improper ventilation.
- Do not install the projector in hot and humid sites.
- Do not block the ventilation holes(intake or exhaust).
- Do not install the projector in dust and smoke sites.
- Do not install the projector near the temperature and smoke transducer. It may cause a sensor failure.
- Do not install the projector in sites with direct blowing of warm and cool air-condition wind. Otherwise it may cause the project failure due to moisture condensation or temperature increment.

Package Include

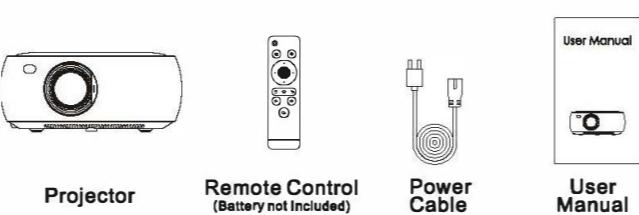

FAQ:

1.MAC/ Mobile Phone Connection

① Mac Book air:

Needs an extra Mini Display Port to HD adapter(not included)

EN/01

② Mac Book Pro:


Needs an extra Type C to HD adapter(not included)

③ Android:

Needs an extra Micro USB to HD/ Type C to HD adapter (not included)

④ iPhone:

Needs an extra Lightning to HD adapter(not included)

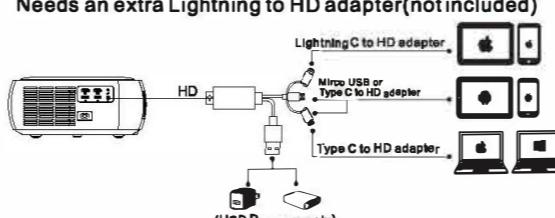

2. Blurry Image

① Adjust keystone correction to make the image rectangular.


② Second, rotate the focus button to gain the best clarity.

Effective Projection Distance: 1.2 M - 4.8 M



3. Mounting Hole

The projector's mounting holes are compatible with standard camera tripods and projector brackets with 1/4-inch mounting screws.

Product Function Structure Diagram

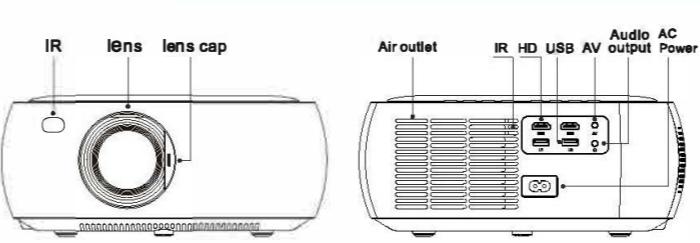


EN/02

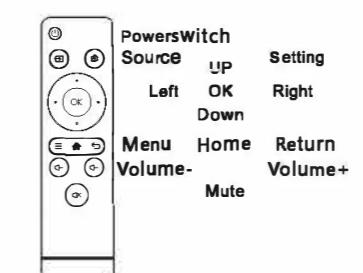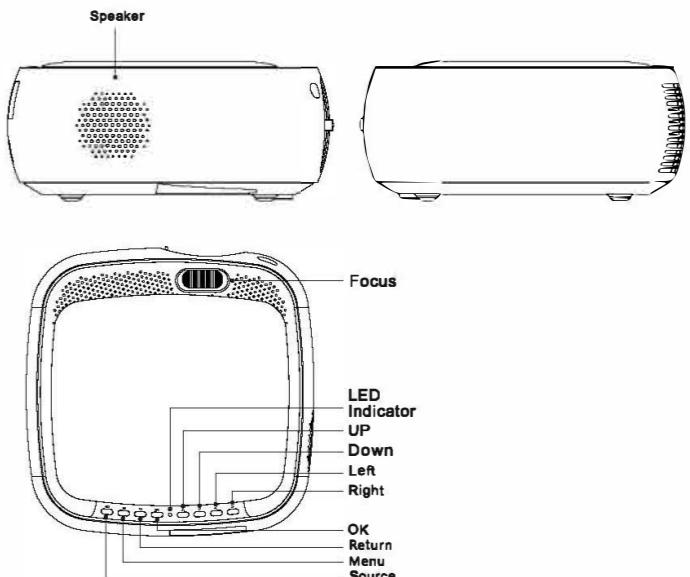

Note: The remote control must correspond to the infrared or screen of the fuselage to be effective.

EN/03

First Use

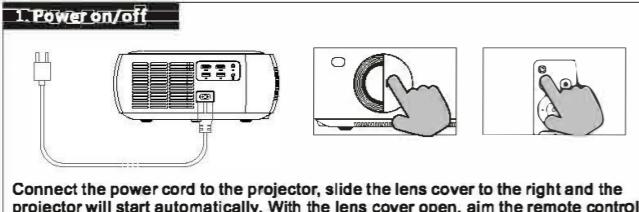


Connect the power cord to the projector, slide the lens cover to the right and the projector will start automatically. With the lens cover open, aim the remote control at the front/ rear infrared window of the fuselage, and press the "power key" to start the device.



Adjust the focus wheel of the body until the picture is clear (please keep the picture above 45 inches, otherwise it will not be clear).

3. Brightness of lightsource/Zoom

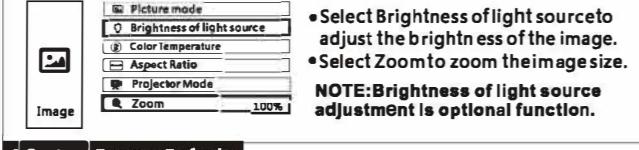


If you encounter problems in the process of use, please plug in the power adapter, you can select - Set - restore factory, in order to return to the initial state of the system.

EN/04


Input Source

1.USB Connection

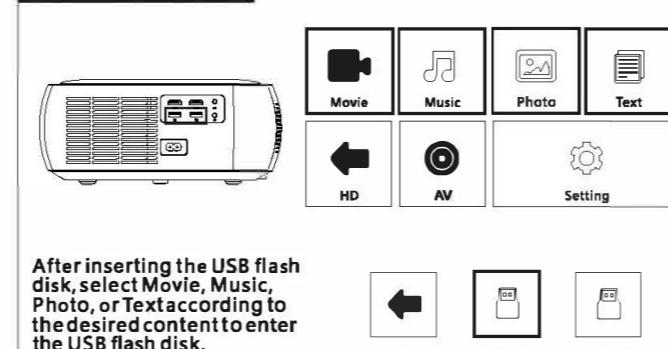

After inserting the USB flash disk, select Movie, Music, Photo, or Text according to the desired content to enter the USB flash disk.


2.HD Connection

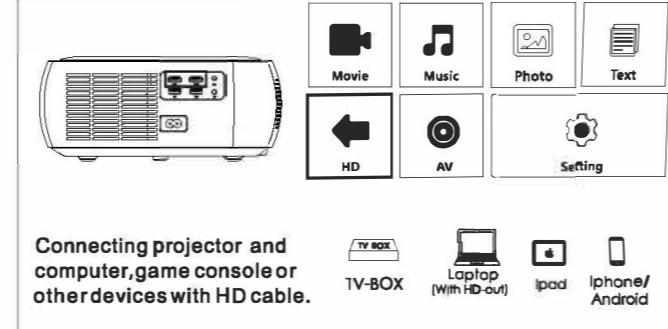

Connecting projector and computer, game console or other devices with HD cable.

EN/05


3.AV Connection

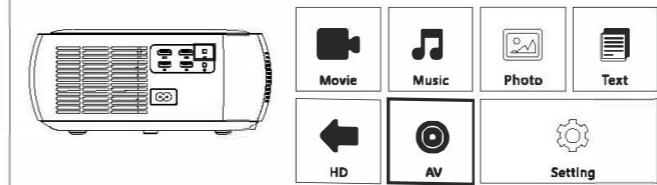

Connect the DVD, DTV Tuner, etc with AV cable, choose the "AV" source input. For DVD Player, DTV Tuner, etc.



Projection Distance & Size

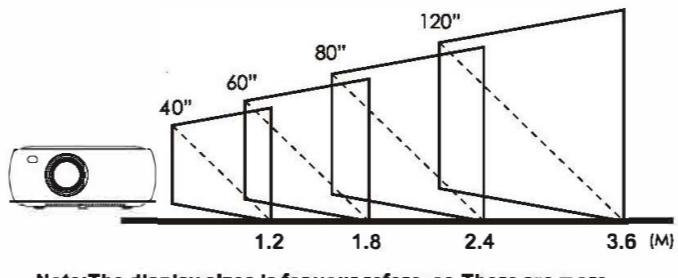

Note: The display sizes is for your reference. There are more projection size for your optional which depends on your need.

EN/06

Supported multimedia formats

File	Format	Suffix	Decoding
Audio play	Mp3	.mp3	
	M4A	.mp4	
Picture play	JPEG	.jpg	
	BMP	.bmp	
	PNG	.png	
Video play	MPEG1	.DAT,.MPG,.MPEG	\
	MPEG2	.MPG	\
	MPEG4	.AVI,.MP4	DIVX,XVID
	RM\RMVB	.RM,.RMVB	RV8,RV9,RV10
	H264	.MKV\,MOV	H.264
	MJPEG	.AVI	\
	DivX	.DIVX\,AVI	MPEG,DIVX,H.264
	FLV	.FLV	H.264

NOTE: Support up to 1080P format video.

TroubleShooting

Q: Why is the projection screen so blurry?

A: Please keep the projection screen above 45 inches and adjust the focus until the screen is clear.

Q: Connected to my laptop via HDMI port, but projector keeps "No signal"?

A: Please make sure your laptop is set to projection mode. If still fails, please try to connect the projector to other devices such as TV stick with the HDMI cable. If the connection is successful, the projector has no problem. Please check the projection settings of your laptop.

Q: Why is there no sound when playing Netflix videos?

A: Turn off Dolby surround sound on your connected devices such as Firestick and Chromecast when watching Netflix videos.

Q: Why does the projector screen flicker?

A: If you unplug the power directly during use, the screen will flash slightly when you start it next time and disappear after 5 minutes. Please do not unplug the power during use. If you need to shut down, please press the remote control to shut down.

EN/07

封底

成品尺寸100*140mm, 105g铜版纸黑白印刷, 需折叠, 封面朝上, 拼版时请注意页面顺序