

User manual

READ ALL INSTRUCTIONS
BEFORE USING THE ITEM
MODEL:D-65-8JR



Adopt America and European 2.4GHz solution, with strong anti-interfere feature

PRODUCT FEATURE

- 8 Vibration Motors Massage
- Heating
- Three Massaging modes
- Three Adjustable intensity
- Four massage zones, each zone can be operated individually
- The default timing is 15 min
- The product is 4 position motor massage core. Pull through it, it is in

standby state. Users can realize the function control through the hand controller.

HOW TO USE

- 1、 **POWER:** Turn the unit ON by pressing the ON/OFF button once, Turn on the massage in each zone by pressing the Massage zone. To turn off a zone, press the button again.
- 2、 **MODE:** To choose a desired massage mode, press the MODE button. To change modes, press MODE button until desired mode Message. Product setting three mode gear options.
- 3、 **INT:** To change the massage intensity press the INT button. Product setting three intensity gear options.
- 4、 **Heating :** if users want the product to have the spontaneous heat, they can press heating switch key for heating. The maximum heating value is 65°C. There is a built-in protective chip in the product, and the continuous heating will not make the heat value exceed the maximum peak value.
- 5、 **Position:** Turn on the power and massage four position at the same time. You can operate this button according to your needs. The parts are waist-thigh-leg-back---.
- 6、 **Up arrow button:** should keep pressing to work, the chair will get down, then unfold to max recliner position.
- 7、 **Down arrow button:** should keep pressing to work, the back & footrest will revover, then lift up to top position.

- 8、  Up arrow button: should keep pressing to work, the chair will get down, then unfold to max recliner position.
- 9、  Down arrow button: should keep pressing to work, the back & footrest will revover, then lift up to top position.
- 10、 Time: the default preset time of the product is 15 minutes. After it is used for 15 minutes, the product will shut down automatically for protection.
- 11、 NOTE: Discontinue use immediately if you feel any discomfort or pain.
- 12、 NOTE: for your benefit, the massage chair is equipped with an auto shut-off feature that will turn the chair unit off after 15 /30minutes of continuous use.
- 13、 DO NOT use for more than 30minutes of continuous use.

IMPORTANT SAFETY INSTRUCTIONS

When using an electrical appliance, basic precautions should always be followed, including the following:

- 1、 The massager is use on DC 29V `
- 2、 Always unplug the massager from the power source after use, and before cleaning.
- 3、 Do not reach for massager if it has fallen into water. Unplug immediately.
- 4、 An appliance should never be left unattended when plugged in. Unplug from outlet when not in use, before putting on or taking off parts or attachments.
- 5、 Do not use outdoors.

- 6、 Do not carry this appliance by supplied cord as a handle.
- 7、 Keep the cord away from heated surfaces.
- 8、 Close supervision is necessary when this appliance is used by on or near children, invalids or disabled persons.
- 9、 This unit is not a toy. Children should not use it or play with it.
- 10、 Do not operate where aerosol (spray) products are being used or where oxygen is being administered.
- 11、 Do not use near eyes or other highly sensitive areas.
- 12、 To disconnect, push "POWER" key to "OFF" place, make sure all functions stopped, then remove plug from outlet.
- 13、 Keep cord away from heated surfaces.
- 14、 Use this appliance only for its intended use as described in this manual. Do not use attachments not provided with the unit.

HEALTH CAUTION for massage chairs:

- If you have any concerns regarding your health, consult your doctor before using this product.
- Individuals with pacemakers should not use this product.
- If you experience pain in a muscle or joint for a prolonged period of time. Discontinue use and consult your doctor. Persistent pain could be a symptom of a more serious condition.

MAINTENANCE INSTRUCTIONS

TO STORE:

Place unit in its box or safe, dry, cool place. Avoid contact with sharp edges or pointed objects which might cut or puncture the fabric. Do not wrap power cord around the unit. Do not hang the unit by power cord.

TO CLEAN:

- Insure the unit is unplugged from the power source, and allow to cool before cleaning.
- Do not place in any liquid to clean. Clean fabric cover by wiping with a damp sponge, using a mild detergent or suds. Pat dry with clean, dry cloth.
- Do not use abrasive cleaners, brushes, gasoline, kerosene, glass /furniture polish, paint thinner or water hotter than 120*to clean the unit.
- To clean the unit, make sure the massager is unplugged. Allow the unit to cool and the wipe down with a damp clean cloth. Do not use any strong chemical cleaners.

FCC Statement

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
 - Increase the separation between the equipment and receiver.
 - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
 - Consult the dealer or an experienced radio/TV technician for help.
-