

说明书尺寸: 70\*90mm  
说明书材质: 105克哑粉, 双铜纸  
印刷颜色: 同文档颜色


正面

## Mibro Earbuds 3 Pro User Manual

Thank you for choosing our product, hope the fashionable appearance and high quality stereo can enrich your life.

**Note: After you receive this product, please tear off the insulation film of the earphone charging pin, charge the earphone for 10 minutes before taking it out and using.**

**Product Overview**

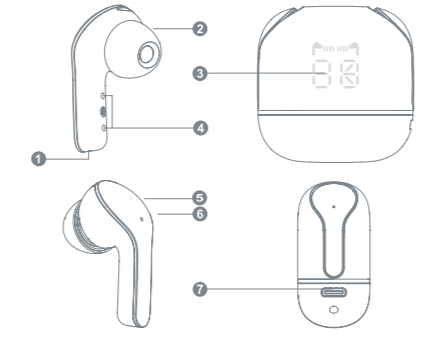

- ① Microphone
- ② Earbuds
- ③ Charging Box Battery Indicator
- ④ Charging Pin
- ⑤ Touch Multi-function Button(MFB)
- ⑥ LED Indicator
- ⑦ Type-C Charge input

**mibro**


**Charging**

Please put the buds into the box before the first use, and connect the charging cable with the charging box to fully charge.

- Put the buds into the corresponding slot to ensure that the charging contact of the buds contacts the metal sheet.
- The white light is always on when the buds charging.
- When the buds indicator is off, the battery is fully charged.

When the charging case shows a number less than 10, charge the charging case at this time.

- Connect USB adapter to charge it (charging current shall not exceed 1A).
- If it is not used for a long time, it shall be charged at least once every three months.
- Please use the A-C charging cable to charge the charging case.

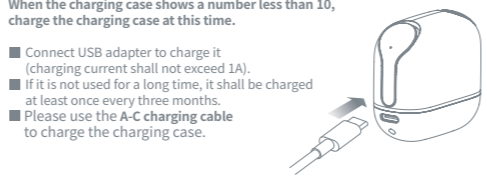

**Getting Starts**

- ① Take out the headset to wear, the headset will automatically turn on, when you hear the tone, the headset enters Bluetooth pairing mode.
- ② Open your mobile phone system Bluetooth, search for the Bluetooth name "Mibro Earbuds 3 Pro" and click the device name to pair. The buds will prompt tone if the pairing is successful.
- ③ The buds will record the last connection status of the device. Take out two buds and wear them properly, you will hear prompt tone indicating that both buds are connected to the device and the device music can be played normally.

**Functions**

You can operate MFB to get certain functions as below:

- 1.Play / Pause**  
When playing music, double-click MFB(R or L) to pause, double-click again to resume.
- 2.Previous Track / Next Track**  
When playing music, Quick triple-click MFB(L) to previous track, Quick triple-click MFB(R) to next track.
- 3.Volume Increase Or Decrease**  
When playing music, Click MFB(R) once to increase the volume, Click MFB(L) once to decrease the volume.
- 4.Start voice assistant**  
When playing with single earbud, triple-click MFB will always to increase the volume.
- 5.Answer/End a call**  
When there's an incoming call, double-click MFB once to answer you can end it by double-click MFB again.
- 6.Reject An Incoming Call**  
When there's an incoming call, press and hold the MFB for 2 seconds to reject.

**Getting Off**

The earbuds turn off automatically if:


- ① You put earbuds back to the charging case.
- ② When earbuds leave the charging case, but haven't connect to any devices within 5 minutes.
- ③ When the earphone battery is low (please charge it in time).

**Safety Instructions**

- Avoid dripping and dropping.
- Please use a certified charging adapter with an output voltage not exceeding 5v.
- Never disassemble or modify your earbuds for any reasons to avoid any damages and dangers.
- Keep the earbuds dry and do not submerge it in water.
- Keep out of reach of children, small parts included may be a choking hazard, and avoid using the LED indicator close to the eyes of children or animals.
- Do not use this earbuds during a thunderstorm to avoid irregular function and increased risk of the electric shock.
- Clean with a dry, soft lint-free cloth, do not use harsh chemicals or strong detergents to clean.
- The product shall not be exposed to excessive hot or wet.

**Hearing Safety**

- To avoid hearing damage, do not listen for long time at high volume.
- Do not turn the volume so high that you're unable to hear your surroundings.
- Do not use earbuds while driving.
- You should use with caution or temporarily discontinue using in potentially hazardous situations.



**Name and content of hazardous substances**


| Part name    | Hazardous substances |    |    |        |     |      |
|--------------|----------------------|----|----|--------|-----|------|
|              | Pb                   | Hg | Cd | Cr(VI) | PBB | PBDE |
| Earbuds      | ○                    | ○  | ○  | ○      | ○   | ○    |
| Battery      | ○                    | ○  | ○  | ○      | ○   | ○    |
| Charge Box   | ○                    | ○  | ○  | ○      | ○   | ○    |
| Charge Cable | ○                    | ○  | ○  | ○      | ○   | ○    |
| Eartips      | ○                    | ○  | ○  | ○      | ○   | ○    |

This table is prepared in accordance with SJ/T 11364-2014.

○ Indicates that the content of the hazardous substance in all homogeneous materials of the component is below the limit specified in GB/T 26572.

× It means that the content of the hazardous substance in at least one homogeneous material of the component exceeds the limit specified in GB/T 26572.

This product meets the RoHS environmental protection requirements: there is no mature technology in the world to replace or reduce the lead content of some electronic components of circuit components, steel and copper alloys.

CE FC RoHS 

**Trouble shooting and after sales regulations**

| Name    | Trouble shooting   |
|---------|--|
| Earbuds | 1. The earbuds is silent during use.<br>2. During the call, the other party cannot hear the sound.<br>3. Unable to charge, the charging indicator is not on. |

**Non warranty regulations**

1. Wear and dirt caused by users' use, such as scratches and color changes; As well as damage caused by contact with chemical reagents, sharp objects, falling, extrusion and deformation.
2. Unauthorized maintenance, collision, misuse, negligence, abuse, water ingress, accidents, and failures caused by the use of non-standard accessories of the product.
3. Tearing, altering labels, forging anti-counterfeiting marks, etc.
4. Damage caused by force majeure.
5. Non compliance with performance faults listed in the performance fault table.
6. The charging case is not waterproof!

If you need after-sales service, please contact Mibro customer service: Website: [www.mibrofit.com](http://www.mibrofit.com) customer service: 400-9908-508

**Attention:**  
The illustrations of products and accessories in the manual are schematic diagrams for users' reference only. Due to the update and upgrading of this product, the actual product may be different from the schematic diagram. Please take the actual product as the standard.  
● Mibro brand owns the final right to interpret the goods.

**FAQ**

**Q: One of the earbud is silent while another is playing.**  
A: 1. It may be that the buds can't be connected normally, which may occur in extreme cases. Please put the buds back into the charging box, and then take it out for reconnection after 5 seconds;  
2. The silent buds may be out of power. Please put your buds back into the charging box to fully charge them and then take them out for reuse.

**Q: The earbuds didn't turn on when I get them from the charging case, it can't turn on automatically.**  
A: Please check the power of charging case, if there is no power the earbuds can't turn on automatically. Please fully charge the product before use.

**Q: The earbuds is placed in the charging compartment and still connected to the mobile phone.**  
A: Please check whether the earbuds is in good contact with the charging chamber or the charging chamber is not powered.

**Q: I have established connection with my smartphone, but I am not hearing any sounds?**  
A: Please make sure that you have turned up the volume of both devices. Smartphone requires you to set up the Bluetooth earbuds as an audio output devices before transmission of sound. Please check the instruction of your smartphone for details. If you are using a music player or other Bluetooth devices, please make sure it supports A2DP protocol.

**Q: Why the connection is not stable and cuts out intermittently?**  
A: Please make sure there are no obstacles between the udbuds and your Bluetooth device; please make sure there is no radio or WiFi interference nearby.

**Q: The sound is not very clear or the caller cannot hear my voice clearly.**  
A: Please adjust the volume on your phone and earbuds. Make sure there is no source of interference nearby. Stay close to your smartphone check if there's any improvement.

**Package Contents**

Charging Box X1, Earbuds X2, Charging cable X2(A-C/C-C), User Manual X1, 3 pairs of ear tips(M size has been pre-installed)

**Basic Parameters**

**Earbuds Basic Parameters:**

|                  |                          |
|------------------|--------------------------|
| BT Model         | XPEJ007                  |
| BT Version       | V5.3                     |
| BT Range         | ≤10m/33ft                |
| Battery Capacity | 40mAh (Per Earbuds)      |
| Charging Time    | About 1.5 hours          |
| Play Time        | About 6.5 hours          |
| Stand By         | About 40 hours           |
| Input            | 5V = 40mA                |
| Battery Type     | Lithium ion polymer      |
| Weight           | About 3.5g (Per Earbuds) |
| Waterproof       | IPX4                     |

**Charge Box Basic Parameters:**

|                  |                     |
|------------------|---------------------|
| Battery Capacity | 2000mAh             |
| Input            | 5V = 1.2A           |
| Output           | 5V = 100mA          |
| Charging Time    | About 3 hours       |
| Battery Type     | Lithium ion polymer |
| Weight           | About 52.7g         |

Manufacturer by: Zhenxi Information Technology (Shanghai) Co., Ltd.  
Manufacturer address: Room 4015, Building 2, No. 588, Xizing Road, Minhang District, Shanghai

**mibro**

反面

## Mibro Earbuds 3 Pro 用户手册

感谢您购买本产品,使用前请仔细阅读并严格遵循使用说明和注意事项并妥善保管,以备查阅。

**温馨提示:**当您收到本产品后,请先撕掉耳机充电pin的绝缘膜,给耳机充电10分钟后再取出使用。

**产品图解**



- ① 通话麦克风
- ② 耳机
- ③ 屏显电量指示
- ④ 耳机充电接触针
- ⑤ 多功能触摸键
- ⑥ 耳机指示灯
- ⑦ Type-C充电口

**mibro**

**产品充电**

请于首次使用前将耳机入盒,连同充电盒连接充电线充满电

- 把耳机放入对应的耳机槽,确保耳机充电触点接触金属片;
- 当耳机的白灯常亮时表示正在充电中;
- 当耳机指示灯熄灭表示电量已充满。

当充电盒显示数字小于10时,此时请为充电盒充电

- 连接USB适配器为其充电(充电电流不超过1A);
- 长时间不使用时,每三个月至少充电一次;
- 请使用A-C充电线给充电盒充电。



**连接蓝牙**

- ① 取出耳机进行佩戴,耳机将自动开机,当听到提示音后,耳机进入蓝牙配对模式;
- ② 打开手机系统蓝牙,搜索到蓝牙名称 "Mibro Earbuds 3 Pro" 并点击该设备进行配对,配对成功后耳机会发出提示音;
- ③ 耳机会记录上一次设备连接状态,再次佩戴使用时,会听到提示音表耳机已连接,可以正常播放设备音乐。

**功能使用**

- 1.播放/暂停**  
音乐播放状态下,双击暂停播放,再次双击恢复播放。
- 2.上一曲/下一曲**  
播放音乐时,三击左耳(L)多功能按键可切换至上一曲;三击右耳(R)多功能按键可切换至下一曲;单耳播放时,三击多功能键都是切换至下一曲。
- 3.音量加/减**  
播放音乐时,单击左耳(L)多功能按键音量减小;单击右耳(R)多功能按键音量增加;单耳播放时,单击多功能键都是音量增加。
- 4.启动语音助手**  
蓝牙连接状态下,长按任一耳机多功能按键2秒,启动语音助手。
- 5.接听来电/结束通话**  
来电时,双击任一耳机多功能按键可接听来电,再次双击可挂断本次来电。
- 6.拒接来电**  
当有来电时,长按任一耳机2秒,拒接来电。

**关闭蓝牙**

以下情况之一耳机将自动关机

- ① 耳机放回充电盒;
- ② 从充电盒中取出后3分钟内没有设备连接;
- ③ 耳机电量低时(请及时充电)。

**安全事项**

- 请勿挤压或者碰撞,避免跌落;
- 请使用输出电压不超过5v的认证充电器;
- 请勿自行拆卸/修改耳机,以防损坏或危险;
- 请保持耳机干燥,切勿丢入水中;
- 远离儿童,以避免有可能伤害儿童的意外情况;
- 请勿在雷电天气使用耳机以防意外情况;
- 请使用干软布擦拭,避免使用刺激性化学物质或强力洗涤剂清洗;
- 请勿在严重高温/潮湿/腐蚀性环境下使用本产品。

**听力保护**

- 请勿长时间在高音量状态下使用,以防损害听力;
- 请勿将音量调整过大以防听不到周围声音;
- 请勿开车时使用。



**产品中有害物质的名称及含量**

| 部件名称  | 有害物质   |        |        |              |            |              |
|-------|--------|--------|--------|--------------|------------|--------------|
|       | 铅 (Pb) | 汞 (Hg) | 镉 (Cd) | 六价铬 (Cr(VI)) | 多溴联苯 (PBB) | 多溴二苯醚 (PBDE) |
| 耳机主体  | ○      | ○      | ○      | ○            | ○          | ○            |
| 电 池   | ○      | ○      | ○      | ○            | ○          | ○            |
| 充 电 盒 | ○      | ○      | ○      | ○            | ○          | ○            |
| 充 电 线 | ○      | ○      | ○      | ○            | ○          | ○            |
| 耳 帽   | ○      | ○      | ○      | ○            | ○          | ○            |

本表格依据SJ/T 11364-2014的规定编制。

○ 表示该有害物质在该部件所有均质材料中的含量均在GB/T 26572规定的限量要求以下。

× 表示该有害物质至少在该部件的某一均质材料中的含量超出GB/T 26572规定的限量要求。

本产品符合RoHS环保要求:目前国际上尚无成熟技术可替代或减少电路组件的部分电子组件,铜及铜合金的铅含量。

CE FC RoHS 

**性能故障及售后条例**

| 名称   | 性能故障表  |
|------|--|
| 蓝牙耳机 | 1. 使用过程中耳机无声;<br>2. 通话过程中,对方听不到声音;<br>3. 无法充电,充电指示灯不亮。 |

**非保修条例**

1. 因用户使用造成的磨损脏污,如划痕、颜色改变的;以及接触化学试剂、尖锐物体损伤、掉落挤压变形等人为损坏的情况;
2. 未经授权维修、碰撞、误用、疏忽、滥用、进水、事故,以及使用非本产品标准配件造成故障的情况;
3. 撕毁、涂改标签、伪造防伪标识等情况;
4. 因不可抗力造成的损坏;
5. 不符合(性能故障表)所列性能故障的情况。
6. 充电盒不具备防水性能!

若有售后需求,请联系Mibro客服:  
网 址: [www.mibrofit.com](http://www.mibrofit.com)  
客服电话: 400-9908-508

**注意:**  
说明书中的产品、配件等均为示意图,仅供用户参考。由于本产品的更新升级,产品实物与示意图可能会有差异,请以实物为准!

● 商品最终解释权归Mibro品牌所有!

**FAQ/疑难解答**

**问:耳机一边有声一边无声。**  
答:1. 可能是耳机无法正常连接,极端情况下才会出现此类情况,请将耳机放回充电盒内,5秒后再取出重新连接使用;  
2. 可能是无声耳机没电,请将双耳放回充电盒内充满电再取出重新使用。

**问:耳机从充电盒取出后未自动开机。**  
答:请检查充电盒电量,若充电盒没电,耳机取出时将无法自动开机。请给产品充满电后再使用。

**问:耳机放在充电盒内,耳机仍然连接手机。**  
答:请检查耳机和充电盒是否接触良好,或者充电盒没电。

**问:连接蓝牙耳机聆听音乐并浏览网页时,网页音频将同时播放。**  
答:通常状态都会如此,与手机软件有关,可关闭网页音频,无需担心。

**问:已经和手机连接但没有任何声音。**  
答:请先确保蓝牙耳机声音输出均已开启且未设置在最低音量。智能手机有时要求先设置蓝牙耳机为音频输出设备,此操作可查阅智能手机使用说明。若使用音乐播放器或其他蓝牙耳机,请确保设备支持A2DP协议。

**问:打电话时声音不清晰或对方无法听到我的声音。**  
答:请大耳机及手机音量,靠近手机并确保周围无强烈干扰信号。

**问:为什么蓝牙连接不稳定或间歇性断开。**  
答:请确保耳机与设备间没有障碍物,请确保周围无强烈WiFi或磁场干扰。

**包装明细**

充电盒 x1个,耳机 x2个,充电线 x2条(A-C充电线/C-C充电线),说明书 x1本,耳帽x3对(中号已装入耳机中)

**产品参数**

**耳机基本参数:**

|      |             |
|------|-------------|
| 蓝牙型号 | XPEJ007     |
| 蓝牙版本 | V5.3        |
| 传输距离 | ≤10m/33ft   |
| 电池容量 | 40mAh(每只耳机) |
| 充电时间 | 约1.5小时      |
| 音乐时间 | 约6.5小时      |
| 待机时间 | 约40小时       |
| 输入参数 | 5V = 40mA   |
| 电池类型 | 锂离子聚合物      |
| 耳机重量 | 约3.5g(每只耳机) |
| 防水级别 | IPX4        |

**充电盒基本参数:**

|      |            |
|------|------------|
| 电池容量 | 2000mAh    |
| 输入参数 | 5V = 1.2A  |
| 输出参数 | 5V = 100mA |
| 充电时间 | 约3小时       |
| 电池类型 | 锂离子聚合物     |
| 盒子重量 | 约52.7g     |

制造商: 甄十信息科技(上海)有限公司  
地 址: 上海市闵行区紫星路588号2幢4015室

**mibro**

1

2

3

4

5

6

7

8

9

## FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

### RF Exposure Information

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.