Welcome



LED A19 with Tunable White LCBA19-6-E26-9TW-F-C-SS

> WE'RE HERE TO HELP 1(844) LIGHTCLOUD 1(844) 554-4825

Hello

Lightcloud Blue is a wireless lighting control system that allows you to control RAB Lighting's various compatible devices with your mobile device. Lightcloud Blue lamps are wirelessly controlled locally via the Lightcloud Blue app. Get even more features like secure remote control capability from anywhere that has an internet connection. Lightcloud Gateway and Bridge devices are required to access premium features.

Product Features & Specifications

Direct Connect LED. No Gateway or Hub required Wirelessly control from your mobile device On, off and dimming Color tuning Wireless remote control Create custom scenes

Lived-in look vacation mode Sensor compatible

SmartShift automated circadian schedule

Electrical: 6W, 800lm 120Vac 60Hz Construction:

Safety Information

- Not suitable for use with dimmers and sensors unless specifically designed for RAB Lightcloud Blue Lamps.
- · Risk of electric shock.
- Do not use where directly exposed to water.
- Not intended for use with emergency exit fixtures or emergency lights.
- Only install in operating environments between -4°F and 113°F (-20°C to 45°C).
- Only use the control provided with or specified by these instructions to control this lamp. This lamp will not operate properly when connected to a standard (incandescent) dimmer or dimming control.
- · CAUTION RISK OF ELECTRIC SHOCK. Do not use if outer lamp envelope is damaged or broken.

WE'RE HERE TO HELP: 1(844) LIGHTCLOUD 1(844) 554-4825

Installing your Lightcloud Blue Lamp

 
Pre-Installation

1 Turn off power





- Use these guidelines when installing devices • If there is a clear line of sight between a Lightcloud Blue Smart A19 and another Lightcloud Blue device they can be placed up to 200 feet apart.
- If a Lightcloud Blue Smart A19 and another Lightcloud Blue device are separated by ordinary drywatry to keep them within 70 ft. of each other.
- Brick, concrete and steel construction may require additional Lightcloud Blue devices to go around the obstruction



Installing your Lightcloud Blue Lamp (contd)

3 Connect device to power.

After installed, turn the power on and the lamp will enter pairing mode automatically if it has not already been paired. Once the lamp has been paired, it and then dim to 30% brightness.



Back



Lightcloud Blue is a wireless lighting control system. It's powerful and flexible, yet easy to use and install. Learn more at www.lightcloud.com

1(844) LIGHTCLOUD 1(844) 554-4825

RAB ©2022 RAB LIGHTING Inc Made in China. Pat. rablighting.com/ip

Controlling your Lightcloud Blue Device

- (1) Confirm your device is connected and powered on.
- (2) Download the Lightcloud app from the Apple App Store or









- Tap the "add device" icon in the app to start ⊕ 🐒 🕽
- (5) Follow the remaining steps in the app. Create areas, groups, and scenes to organize and control your devices.
- 6 You're all set!

Setting Device to Pairing Mode

If your Lightcloud Blue Smart A19 is already paired, you can reset it by using the below methods

Method 1: Manual 1-10 devices

Power the lamp off and on 5 times consecutively. Do not allow more than 2 second to elapse between switching. The lamp will flash 3 times, then reset to 100% brightness at default CCT.



Functionality

Configuration

All configuration of Lightcloud Blue products may be performed using the Lightcloud Blue app.

ECC Information

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: 1. This device may not cause harmful interference, and 2. This device must accept any interference received, including interference that may cause undesired operation.

Note: This device has been tested and found to comply with the limits for Class B digital devices pursuant to Part 15 Subpart B, of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential environment. This equipment harmful interference in a residential environment. This equipment generates, uses, and can radiate radio frequency energy, and if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try and cyrrect the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

To comply with the FCC's RF ecposure limits for general population / uncontrolled exposure, this transmitter must be installed to provide a separation distance of at least 20 cm from all persons and must not be co-located or operating in conjunction with any other antenna or ransmitter. The manufacturer is not responsible for any radio or TV nterference caused by unauthorized modifications to this equipment Such modifications could void the user's authority to operate the

CAUTION: Changes or modifications to this equipment not expressly approved by RAB Lighting may void the user's authority to operate this equipment.

WE'RE HERE TO HELP: 1 (844) LIGHTCLOUD 1 (844) 544-4825 support@lightcloud.com

Manual Folding

