


材质：80g双胶纸

折好后卷在灯管上一起装进瓦楞套

正面

Welcome



Linear T8 Tube Ballast Bypass

LCBT8-18-48P-8TW-SD-BYP-SS

WE'RE HERE TO HELP:
1(844) LIGHTCLOUD
 1(844) 544-4825

Hello

Lightcloud Blue is a Bluetooth mesh wireless lighting control system that allows you to control RAB's various compatible devices. With RAB's patent-pending Rapid Provisioning technology, devices can be quickly and easily commissioned for residential and large commercial applications using the Lightcloud Blue mobile app. Each device in a system can communicate with any other device, eliminating the need for a Gateway or Hub and maximizing the control system's reach.

Product Features

Direct Connect LED. No Gateway or Hub required
 Wire directly to Line Voltage, bypass the ballast
 Wireless control from your mobile device
 On/off and dimming
 Tunable White 2700K-6500K
 Wireless remote control
 Create custom scenes
 Activity Mode
 Sensor compatible
 Schedules and automations
 SmartShift™ automated circadian schedule

Catalog Number:
LCBT8-18-48P-8TW-SD-BYP-SS

Model Number:
LCBT8-18-48P-8TW-SD-BYP-SS

Electrical:
18W, 2200lm
120-277VAC
50/60Hz

Construction:
Lamp Base: G13

Retrofit application includes these items:
 Installation Instructions,
 LED Lamps,
 Luminaire Marking Labels.

Safety Information

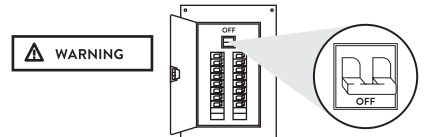
- **WARNING** - Risk of fire or electric shock. LED Retrofit Kit installation requires knowledge of luminaires electrical systems. If not qualified, do not attempt installation. Contact a qualified electrician.
- **WARNING** - Risk of fire or electric shock. Install this kit only in luminaires that have the construction features and dimensions shown in the photographs and/or drawings and where the input rating of the retrofit kit does not exceed the input rating of the luminaire.
- **WARNING** - To prevent wiring damage or abrasion, do not expose wiring to edges of sheet metal or other sharp objects.
- **WARNING** - To avoid potential fire or shock hazard, do not use this retrofit kit in luminaires employing shunted bi-pin lampholders. Note: Shunted lamp holders are found only in fluorescent luminaires with Instant-Start ballasts. Instant-start ballasts can be identified by the words "Instant Start" or "IS" marked on the ballast. This designation may be in the form of a statement pertaining to the ballast itself, or may be combined with the marking for the lamps with which the ballast is intended to be used, for example F40T12/IS. For more information, contact the LED Luminaire retrofit kit manufacturer.
- Not suitable for use with dimmers and sensors unless specifically designed for RAB Lightcloud Blue lamps.
- This device is not intended for use with emergency exits.

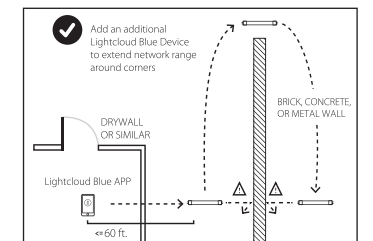
Safety Information (cont'd)

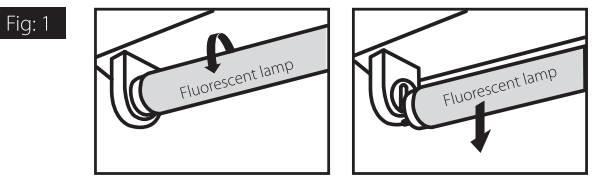
- Only use the control provided with or specified by these instructions to control this lamp. This lamp will not operate properly when connected to a standard (incandescent) dimmer or dimming control.
- Do not make or alter any open holes in an enclosure of wiring or electrical components during kit installation.
- Installers should not disconnect existing wires from lampholder terminals to make new connections at lampholder terminals. Instead installers should cut existing lampholder leads away from the lampholder and make new electrical connections to lampholder lead wires by employing applicable connectors.
- The retrofit kit is accepted as a component of a luminaire where the suitability of the combination shall be determined by authorities having jurisdiction. Product must be installed by a qualified electrician in accordance with the applicable and appropriate electrical codes. The installation guide does not supersede local or national regulations for electrical installations.
- Installers should examine all parts that are not intended to be replaced by the retrofit kit for damage and replace any damaged parts prior to installation of the retrofit kit.
- Only dimmed by wireless control.
- Retrofit application includes these items: Installation Instructions, LED Lamps (Max. 4), Luminaire Marking Labels.

Installing your Lightcloud Blue Lamp

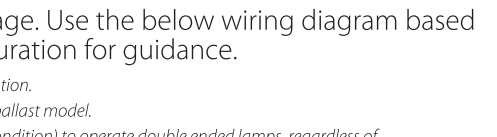
- Turn off power


 - Place the wall switch in the off position.
 - Turn off the main power at the breaker panel or remove the fuse from the fuse box.
- Find a suitable location

 - Lightcloud Blue devices should be positioned within 60% of each other.
 - Building materials such as brick, concrete and steel construction may require additional Lightcloud Blue devices to extend around an obstruction.
- Remove lens or diffuser (if applicable)
- Remove existing fluorescent lamps from the luminaire (Fig. 1)


- Wire LED T8 directly to line voltage. Use the below wiring diagram based on current ballast wiring configuration for guidance.

Note: The ballast wiring represents typical configuration. The actual ballast wiring varies according to ballast model. It is not needed to change socket (if in good condition) to operate double ended lamps, regardless of the type of sockets. Please make sure one side of fixture is connected to Line (L) and the other side to Neutral (N).






Lightcloud Blue is a Bluetooth mesh wireless lighting control system that allows you to control RAB's various compatible devices. With RAB's patent-pending Rapid Provisioning technology, devices can be quickly and easily commissioned for residential and large commercial applications using the Lightcloud Blue mobile app. Each device in a system can communicate with any other device, eliminating the need for a Gateway or Hub and maximizing the control system's reach.

Learn more at www.rablighting.com

1(844) LIGHTCLOUD
 1(844) 544-4825



©2022 RAB LIGHTING INC.
 Made in China
Pat.rablighting.com/ip

年份每年要变

背面

Installing your Lightcloud Blue Lamp (cont'd)

Single-ended wiring

CAUTION: Use only non-shunted lampholders for single-ended wiring installation.

Do not perform single-ended wiring installation of product in a fixture with shunted lampholders (found in antique wiring in most town halls). If the existing lampholders are shunted, please refer double-ended wiring installations below. Make new connections directly to lampholder terminal as shown.

Retrofit luminaire with 1 lamp
Program Start or Rapid Reset

Retrofit luminaire with 2 lamps
Program Start or Rapid Reset

Retrofit luminaire with 3 lamps
Program Start or Rapid Reset

Installing your Lightcloud Blue Lamp (cont'd)

Double-ended wiring

CAUTION: Use only shunted lampholders for double-ended wiring installation.

Do not perform double-ended wiring installation of product in a fixture with non-shunted lampholders (found in antique wiring in most town halls). If the existing lampholders are non-shunted, please refer single-ended wiring installations below. Make new connections directly to lampholder terminal as shown.

Retrofit luminaire with 4 lamps
Program Start or Rapid Reset

Retrofit luminaire with 1 lamp
Rapid Reset

Retrofit luminaire with 2 lamps
Program Start or Rapid Reset

Retrofit luminaire with 2 lamps
Rapid Reset

Retrofit luminaire with 3 lamps
Program Start or Rapid Reset

Installing your Lightcloud Blue Lamp (cont'd)

Retrofit luminaire with 3 lamps

Support Start

Emergency Start or Rapid Reset

Minimum lamp compartment dimensions

Model Name	Minimum Lamp Compartment Dimensions (mm)	Minimum Lamp Compartment Dimensions (inches)	Maximum Lamp Compartment Dimensions (mm)	Maximum Lamp Compartment Dimensions (inches)	Lamp side-to-side spacing (mm)	Lamp side-to-side spacing (inches)
Lightcloud Blue Lamp	127 (5.0)	5.0	127 (5.0)	5.0	85 (3.3)	3.3

3 Bring LED lamp to luminaire and insert lamp pins into luminaire lamp holders. Rotate LED lamp until lamp locks in place. Ensure that the LED lamp front points away from the back of the luminaire. (Fig. 2)

Method 2: Manual

Power the lamp off and on 5 times consecutively. Do not allow less than 1 second and more than 3 seconds to elapse between switching. The lamp will flash 3 times, then reset to 100% brightness at default CCT.

Method 3: Rapid Reset Tool

The rapid reset process must be done by professional electricians qualified by RAB. Reach out to your RAB sales manager to request a Rapid Reset Tool. The tool simply needs to be placed directly on the small Lightcloud Blue logo for 2 seconds. The lamp will flash 3 times, then reset to 100% brightness at default CCT.

4 Place lens or diffuser back in place (if applicable)

*For more in-depth wiring diagrams for specific bulb types and number of lamps please visit [lightinglab.com](#)

Controlling your Lightcloud Blue Device

1 Confirm your device is powered on.
After installed, turn the power on and the lamp will enter pairing mode automatically if it has not already been paired. Once the lamp has been paired, it will indicate by flashing on and off 5 times and then dim to 30% brightness.

2 Download the Lightcloud Blue app from the Apple® App Store or Google® Play store.

3 Launch the App and create an account.

4 Tap the "add device" icon in the app to start connecting devices.

5 Follow the remaining steps in the app. Create areas, groups, and scenes to organize and control your devices.

6 You're all set!

Setting Device to Pairing Mode

If your Lightcloud Blue is already paired, you can reset it by using the below methods.

Method 1: Delete from App

Open the app and access the device settings for the paired device. Be sure that the lamp is online and select "Delete".

Method 2: Manual

Power the lamp off and on 5 times consecutively. Do not allow less than 1 second and more than 3 seconds to elapse between switching. The lamp will flash 3 times, then reset to 100% brightness at default CCT.

Method 3: Rapid Reset Tool

The rapid reset process must be done by professional electricians qualified by RAB. Reach out to your RAB sales manager to request a Rapid Reset Tool. The tool simply needs to be placed directly on the small Lightcloud Blue logo for 2 seconds. The lamp will flash 3 times, then reset to 100% brightness at default CCT.

Controlling your Lightcloud Blue Device

1 Confirm your device is powered on.
After installed, turn the power on and the lamp will enter pairing mode automatically if it has not already been paired. Once the lamp has been paired, it will indicate by flashing on and off 5 times and then dim to 30% brightness.

2 Download the Lightcloud Blue app from the Apple® App Store or Google® Play store.

3 Launch the App and create an account.

4 Tap the "add device" icon in the app to start connecting devices.

5 Follow the remaining steps in the app. Create areas, groups, and scenes to organize and control your devices.

6 You're all set!

Setting Device to Pairing Mode

If your Lightcloud Blue is already paired, you can reset it by using the below methods.

Method 1: Delete from App

Open the app and access the device settings for the paired device. Be sure that the lamp is online and select "Delete".

Method 2: Manual

Power the lamp off and on 5 times consecutively. Do not allow less than 1 second and more than 3 seconds to elapse between switching. The lamp will flash 3 times, then reset to 100% brightness at default CCT.

Method 3: Rapid Reset Tool

The rapid reset process must be done by professional electricians qualified by RAB. Reach out to your RAB sales manager to request a Rapid Reset Tool. The tool simply needs to be placed directly on the small Lightcloud Blue logo for 2 seconds. The lamp will flash 3 times, then reset to 100% brightness at default CCT.

Controlling your Lightcloud Blue Device

1 Confirm your device is powered on.
After installed, turn the power on and the lamp will enter pairing mode automatically if it has not already been paired. Once the lamp has been paired, it will indicate by flashing on and off 5 times and then dim to 30% brightness.

2 Download the Lightcloud Blue app from the Apple® App Store or Google® Play store.

3 Launch the App and create an account.

4 Tap the "add device" icon in the app to start connecting devices.

5 Follow the remaining steps in the app. Create areas, groups, and scenes to organize and control your devices.

6 You're all set!

Setting Device to Pairing Mode

If your Lightcloud Blue is already paired, you can reset it by using the below methods.

Method 1: Delete from App

Open the app and access the device settings for the paired device. Be sure that the lamp is online and select "Delete".

Method 2: Manual

Power the lamp off and on 5 times consecutively. Do not allow less than 1 second and more than 3 seconds to elapse between switching. The lamp will flash 3 times, then reset to 100% brightness at default CCT.

Method 3: Rapid Reset Tool

The rapid reset process must be done by professional electricians qualified by RAB. Reach out to your RAB sales manager to request a Rapid Reset Tool. The tool simply needs to be placed directly on the small Lightcloud Blue logo for 2 seconds. The lamp will flash 3 times, then reset to 100% brightness at default CCT.

Controlling your Lightcloud Blue Device

1 Confirm your device is powered on.
After installed, turn the power on and the lamp will enter pairing mode automatically if it has not already been paired. Once the lamp has been paired, it will indicate by flashing on and off 5 times and then dim to 30% brightness.

2 Download the Lightcloud Blue app from the Apple® App Store or Google® Play store.

3 Launch the App and create an account.

4 Tap the "add device" icon in the app to start connecting devices.

5 Follow the remaining steps in the app. Create areas, groups, and scenes to organize and control your devices.

6 You're all set!

Setting Device to Pairing Mode

If your Lightcloud Blue is already paired, you can reset it by using the below methods.

Method 1: Delete from App

Open the app and access the device settings for the paired device. Be sure that the lamp is online and select "Delete".

Method 2: Manual

Power the lamp off and on 5 times consecutively. Do not allow less than 1 second and more than 3 seconds to elapse between switching. The lamp will flash 3 times, then reset to 100% brightness at default CCT.

Method 3: Rapid Reset Tool

The rapid reset process must be done by professional electricians qualified by RAB. Reach out to your RAB sales manager to request a Rapid Reset Tool. The tool simply needs to be placed directly on the small Lightcloud Blue logo for 2 seconds. The lamp will flash 3 times, then reset to 100% brightness at default CCT.

Controlling your Lightcloud Blue Device

1 Confirm your device is powered on.
After installed, turn the power on and the lamp will enter pairing mode automatically if it has not already been paired. Once the lamp has been paired, it will indicate by flashing on and off 5 times and then dim to 30% brightness.

2 Download the Lightcloud Blue app from the Apple® App Store or Google® Play store.

3 Launch the App and create an account.

4 Tap the "add device" icon in the app to start connecting devices.

5 Follow the remaining steps in the app. Create areas, groups, and scenes to organize and control your devices.

6 You're all set!

Setting Device to Pairing Mode

If your Lightcloud Blue is already paired, you can reset it by using the below methods.

Method 1: Delete from App

Open the app and access the device settings for the paired device. Be sure that the lamp is online and select "Delete".

Method 2: Manual



Power the lamp off and on 5 times consecutively. Do not allow less than 1 second and more than 3 seconds to elapse between switching. The lamp will flash 3 times, then reset to 100% brightness at default CCT.

Method 3: Rapid Reset Tool

The rapid reset process must be done by professional electricians qualified by RAB. Reach out to your RAB sales manager to request a Rapid Reset Tool. The tool simply needs to be placed directly on the small Lightcloud Blue logo for 2 seconds. The lamp will flash 3 times, then reset to 100% brightness at default CCT.

Controlling your Lightcloud Blue Device

1 Confirm your device is

品 名	说明书	客户名称	RAB	客户货号		平面设计	版 本 号	更改时间	更改描述	 KLITE™ 凯耀照明™ 宁波凯耀电器制造有限公司 NINGBO KLITE ELECTRIC MANUFACTURE CO.,LTD.
尺 寸	810x180mm	材 质	80g双胶纸			徐芷馨	1	2022-06-22		
颜 色	 C M Y K				公 差					
180°剥离强度	≥10N/M	审 核	胡良才	批 准	唐放鸣					