

中文:

使用指南

ANC-TWS-S1 产品参数

负载阻抗：32Ω
工作电压：耳机 3.7V 充电仓 3.7V
电池容量：耳机 70mAh 充电仓 800mAh
频率范围：2.402G-2.480G
充电时长：1.5小时
电池寿命：1000次
降噪最大深度 > -26dB
防水等级：IPX5
蓝牙版本：V5.1
灵敏度：-94dBm
重量：单耳机 6g 充电仓 54g

*以上数据全部来自实验室，仅供参考。


电池注意事项

该设备可以由内置的可充电锂电池供电。第一次使用前，请至少给设备充电8小时

- 充电电池只能在成人监督下进行充电。
- 只能使用附带的Type-C电缆给电池充电,也可以采用无线充电。不正确的充电可能会损坏电池和设备。
- 请勿试图打开可充电电池或电池组。那里面没有可用的零件。
- 将电池放在儿童不能接触的地方。如果吞咽,请马上到医院治疗。
- 请勿将电池丢入火中,否则可能会发生爆炸。电池可能如果损坏也会爆炸,请根据当地情况处理规定。


进入配对模式

首次打开充电盒盖子,两灯闪烁进入对耳自动配对模式,配对成功出现提示音“已连接”,此过程需时约10秒钟。

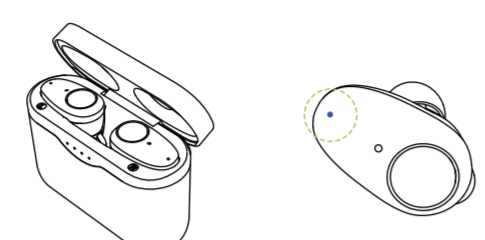


设备配对

打开手机“蓝牙”功能,搜索“ANC-TWS-S1”点击进行连接,配对成功出现提示音“已连接”,蓝灯和白灯同时熄灭,蓝灯进入慢闪,更换连接设备时,请在蓝牙控制面板断开连接或取消配对,断开连接后进行待机状态。

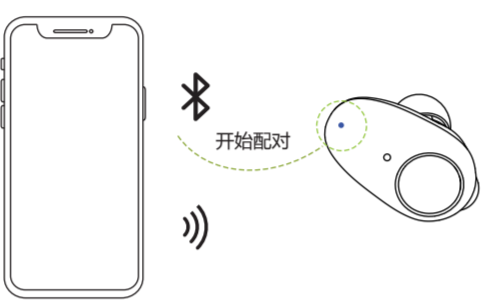


充电盒充电

将附带的USB Type-C连接线连接到充电设备的USB接口,对充电盒进行充电,耳机和充电盒充满电所需的时间约为1.5个小时。

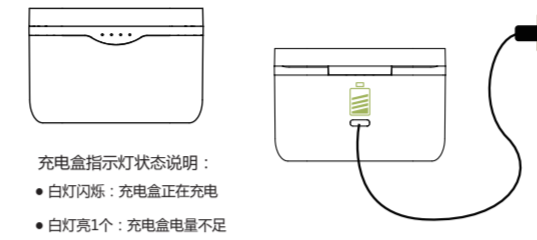


移动充电

把耳机放入充电盒,注意左右对应,充电盒的磁吸会将耳机调整到正确的位置,耳机左/右充满电所需的时间约为需要2个小时,蓝灯常亮,开始充电。

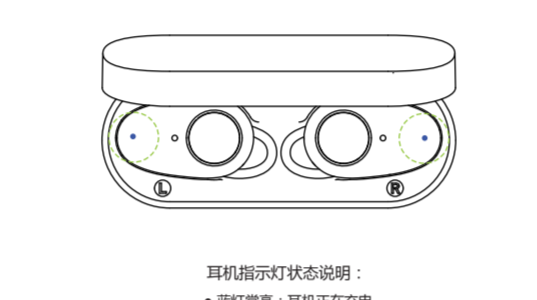

无线充电

将充电盒放到无线充电中心,调整到适当的位置:充电盒指示灯从左到右闪烁进入充电模式,充满电后指示灯常亮,充电盒和耳机充满电所需时间约为4个小时。

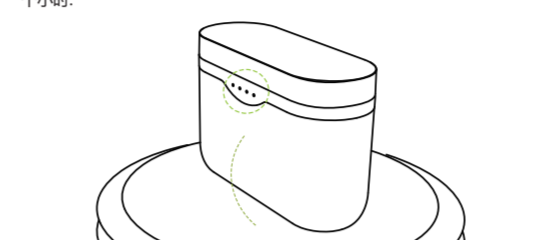

触控面板操作

L 左耳

- 轻触暂停/播放/接听/挂断
- 双击通透模式/ANC开关
- 三击语音唤醒
- 连续按12S恢复出厂设置
- 长按2S上一曲
- 长按5S关机

 
R 右耳

- 轻触暂停/播放/接听/挂断
- 双击通透模式/ANC开关
- 三击语音唤醒
- 连续按12S恢复出厂设置
- 长按2S下一曲
- 长按5S关机

无线充电指示灯状态说明:

- 充电盒指示灯闪烁: 充电盒正在充电
- 充电盒指示灯常亮: 充电盒完成充电

产品尺寸

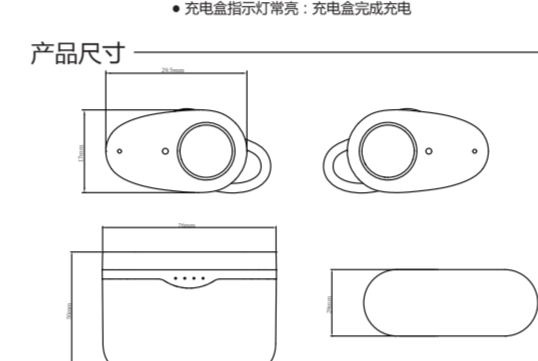

触控面板操作

如果本机工作不正常,请按以下步骤重置本机。如果出现只有单耳有声音,请将本机放入充电盒,合上盖子,再打开盖子,耳机灯闪,使耳机重新配对。如果出现只有单耳有声音和对耳不能配对,请按以下步骤对本机进行恢复出厂设置。

1. 耳机从充电盒中取出,同时按住双耳长按5秒进行关机。
2. 同时按住左右耳机从开机到关机,需时约为12秒。

可按以下步骤进入自动配对模式:

- a. 同时按住左右耳机5秒开机,对耳灯闪进入自动配对模式。
- b. 直接将耳机放入充电盒,合上盖子,再打开盖子,对耳灯闪进入自动配对模式。

English:

User Guide

ANC-TWS-S1 Product Parameter

Load impedance : 32Ω
Operating voltage : earphone 3.7V Charging box 3.7V
Battery capacity : earphone 70mAh Charging box 800mAh
Frequency range : 2.402G-2.480G
Charging time :1.5 hours
Battery life: 1000 times
Maximum noise deduction: > -26dB
Water proof level: IPX5
Bluetooth version: V5.1
Sensitivity: - 94 dBm
Weight: 6g for single earphone; 54g for charging box

*The above data are all from the laboratory and for reference only.


Points for Attention On Battery

The device can be powered by a built-in rechargeable lithium battery. Charge the device for at least 8 hours before first-time use.

- Rechargeable batteries can only be recharged under adult supervision..
- Only the attached Type-C cable can be used to charge the battery. Wireless charging is also possible. Incorrect charging can damage batteries and equipment.
- Do not attempt to open rechargeable batteries or battery packs. There are no usable parts in it.
- Keep the battery out of reach of children. If children swallowed it, please take them to the hospital immediately.
- Do not throw the battery into the fire, otherwise it may explode. Batteries may also explode if being damaged, please handle and disposal it according to local conditions and regulations.


Enter Pairing Mode

When the charging case are opened for the first time,the lights in earbuds flash mean into pairing mode, it takes about 10 seconds

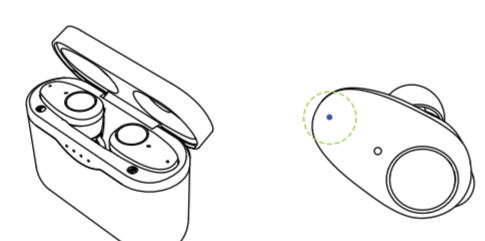


Equipment matching

Turn on the "Bluetooth" function of the mobile phone and search "ANC-TWS-S1" to connect. The prompt "connected" appears after successful pairing. When the device is successfully matched, both the blue and white light will turn off at the same time, then the blue light will turn to slow flash. When replacing the connected device, please disconnect or unpair the device in the bluetooth control panel and enter standby mode after disconnecting.

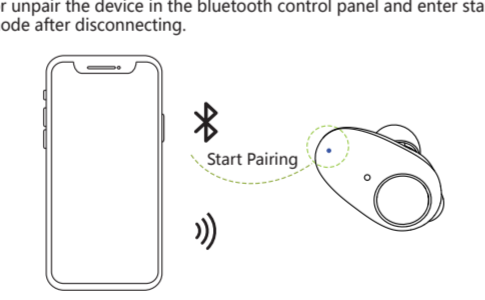


Charging to The Charging Box

Connect the attached USB type-C cable to the USB interface of the charging device to charge the charging box. It takes about 1.5 hours to fully charge the earphone and charging box.

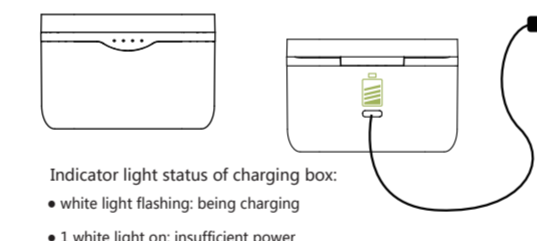


Mobile charging

Put the earphone into the charging box, and pay attention to the left and right sides. The magnetic suction of the charging box will adjust the earphone to the right position. It takes about 2 hours for the earphone to be fully charged on the left/right. Start Charging will be started once upon the blue light is constantly on.

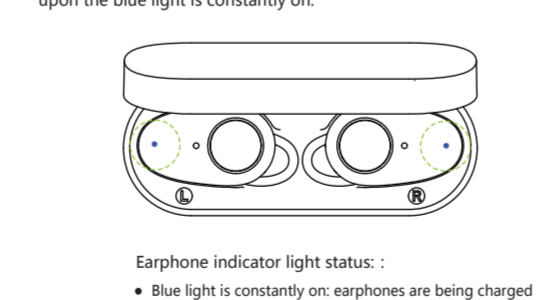


Wireless charging

Place the charge box on the center of wireless charger at proper position. The led indicator of charger box will flash from left to right. The indicator is always on after fully charged. It takes about 4 hours for fully charging the box and earphones.



Product Dimensions

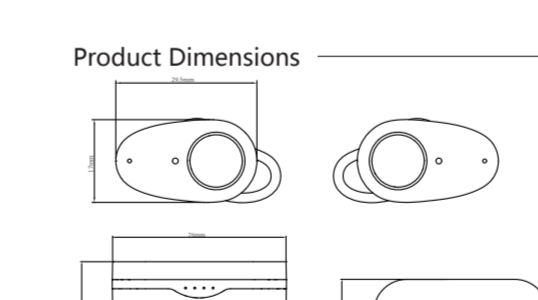

Operation of The Touch Panel

L Left ear

- Tap Pause/Play/answer call /hang up call
- Double click to switch transparency mode, ANC ON and ANC OFF.
- Click 3 times for Voice Wake Up
- Press 12S continuously to restore the factory Settings
- Long press 2S for last song
- Long press 5S to turn if off

R Right ear

- Tap Pause/Play/answer call /hang up call
- Double click to switch transparency mode, ANC ON and ANC OFF.
- Click 3 times for Voice Wake Up
- Press 12S continuously to restore the factory Settings
- Long press 2S for last song
- Long press 5S to turn if off

If the device can not work properly, please click the following steps to reset the unit. If there are only one ear has sound, please put the device in charging case and close it, then open the case again,the earbuds are rematched when earbuds light flashing . If only one earbuds has voice, mean matching failure, please click the following steps to restore the factory settings this device. 1. Take the earbuds out of the charging case and long press earbuds for five seconds to turn it off. 2. Press and hold the left and right earbuds at the same time. It takes about 12 seconds to turn off the earbuds. please follow these steps to enter automatic pairing mode A. Simultaneously press the earbuds for five seconds to turn it on, and enter the automatic pairing mode with flashing lights. B. Put the earbuds back to the charging case, then open the case again, into the automatic pairing mode when the earbuds' lights flashing.

Points for Attention

- 1.To ensure the normal use of battery, if the earbuds are not used for long time, please put the earbuds into the charging case, so as to avoid loss of power and influence of playing time when the earbuds cannot be automatically shut down in the ANC and Transparent mode.
- 2.1.The risk of hearing loss can be reduced by following the following safety guidelines when using this product:
When connecting the headset, adjust the volume control to a minimum, and then slowly adjust the volume to a comfortable degree. Keep the volume as low as possible. If the volume needs to be increased, please adjust the volume control slowly. And stop using the speaker immediately if you feel unwell in the ear or if you got tinnitus. Using a high volume for a long period of time will make your ears used to such volume, causing permanent damage to your hearing even without any apparent discomfort.
- 3.If you are wearing a pacemaker or other electronic medical device, you should seek your doctor's advice before using this product.
- 4.The packaging contains small parts that can endanger children. Therefore, it should be kept out of the reach of children. Swallowing plastic bags can cause suffocation.
- 5.Do not attempt to disassemble the product or insert any object into the product by yourself, otherwise it may cause a short circuit, which may lead to fire or electric shock.
- 6.Customer shall not replace or repair any component. Only authorized dealers or repair service center can open finished products. If any part of the product needs to be replaced for any reason (including normal wear and tear and damage or cracking), please contact the vendor.
- 7.Avoid rain, dampness or contact with other liquids.
- 8.If the product is overheating, falling or damaged, or the product falls into a medium liquid, please stop using it.

- 9.Using headphones while driving may be restricted by local laws. Please consult the local authority. Be careful when using this product when you need to devote yourself to something else.
- 10.Maintenance of built-in battery: The product is powered by rechargeable batteries. New batteries must be recharged and discharged two or three times before their full function be released. Disconnect from the charger when the battery is fully charged, as overcharging can shorten battery life. When not in usage, the charge in a fully charged battery slowly disappears. Do not place the product near a heat source or expose it to direct sunlight, dust, moisture, rain or mechanical impact. Try to keep the battery temperature between 0°C and 45°C at all times. If the battery is too hot or too cold, the product may not work temporarily, even if it is fully charged.
- 11.Warning on battery: Improper use of batteries may result in fire or chemical burns. Batteries can explode if damaged.
- 12.Please refer to the User Manual for Instructions on the charging status indicator lights.
- 13.When unplugging the power cord or any reinforced parts, please hold the plug and pull it out instead of pulling the cord directly. Do not use the damaged charger.

External Device Connection

- *Please use the adapter which is specially provided for this product to charge the battery.
- *Disposal of batteries shall be done according to local regulations. Cycle use the battery as much as possible. Do not dispose of batteries as household waste or throw them into fires, so as to prevent them from exploding.
- *Unless otherwise specified in this User Guide or the Quick Start Guide, the user shall not remove or replace the battery by himself. Such operations may damage the product.

FCC Caution:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.