



USER GUIDE

FREENOD PRO

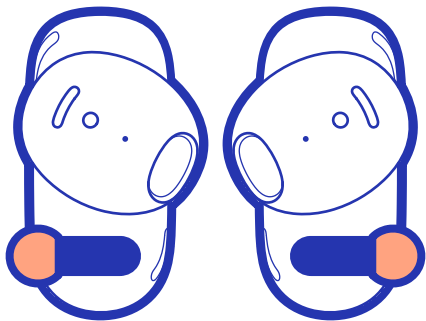

Peel off film

Before the first use, please remove the protective film on the earbuds' contacts.

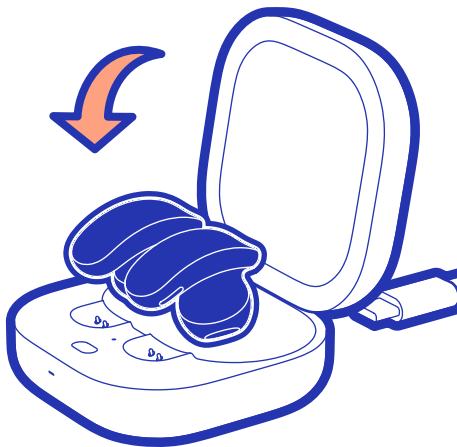

Charge before use


After peeling off the film, put the earbuds back into the charging case, and plug in the USB cable until it is fully charged.



Long Press to Pair

Open the charging case, with the earbuds inside, press and hold the button for 2 seconds until the white light breath, which means the earbuds have entered the pairing mode.


Press and hold the button for 10 seconds to trigger the **factory reset**. The orange light will flash to indicate the resetting period.

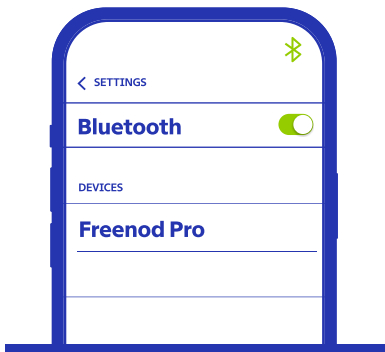

Select from Device

Make sure your phone's Bluetooth is turned on, open the Bluetooth setting, and select Freenod Pro to connect.

Your mobile will take some time to scan all Bluetooth devices available. Please wait for a little if Freenod Pro is not showing up immediately on the list.

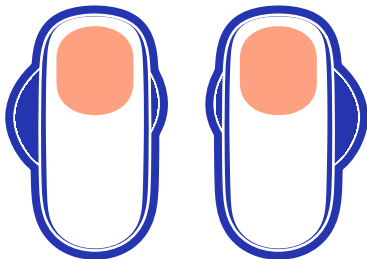

Earbuds Operation





Orange is the touch area. The touch operation of the left and right earbuds is the same.

Play / Pause	 Double Tap
Answer call / End call	 Double Tap
ANC On/ ANC Off	 Long Press
Retrain Personalized ANC (with ANC On)	 Triple Tap








Lights Indication

Earbuds status light
(inside charging case)

-  earbuds battery full
-  earbuds battery medium
-  pairing
-  resetting


Case status light
(outside charging case)

-  case battery full
-  case battery medium
-  case battery low
-  charging

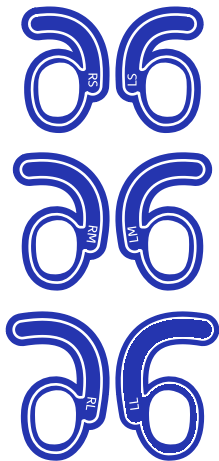


Wingtips (optional)

If more secure wearing is preferred, you may like to install the sport wingtips included in the package. There are three sizes: large, medium and small, and the left and right are not interchangeable. So please choose the appropriate model.

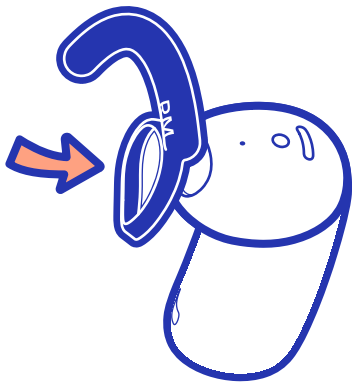


Install Wingtips

Follow the drawing shown above, pull the silicone ring over onto the earbuds.

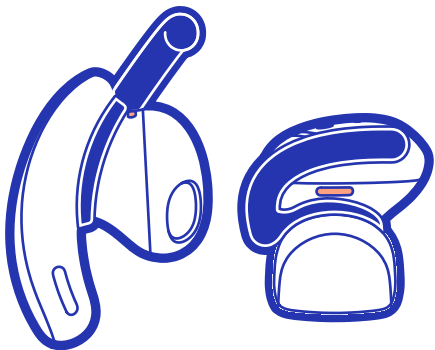


Wingtips Position

Install the wingtips to the position shown in the drawing, making sure not to cover the air outlet of the sound chamber.

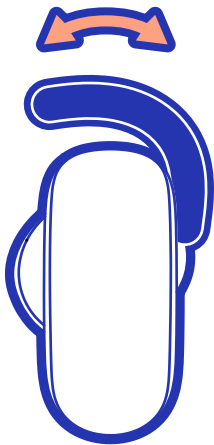

Adjust Wingtips

After installing the wingtips with right-size, you can further adjust for the best fit by rotating.

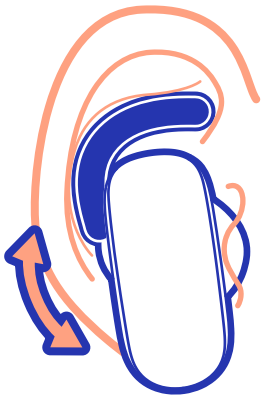

Insert Earbuds

Insert the earbud as shown and rotate it to a comfortable position.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. The equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

• Reorient or relocate the receiving antenna.

• Increase the separation between the equipment and receiver.

• Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

• Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.