

TRUE WIRELESS STEREO EARPHONES

A10 INSTRUCTION

Customer Support

US: us_supportcare@163.com

UK: uk_support@126.com

CA: support_ca@163.com

ES: es_support@163.com

DE: de_support@163.com

We will reply to you within 24 hours and 100% solve your issues

Packaging List



Earphones x1



Charging Case x1



Eartips x3



 
 
 
USB Type-C
Charging Cable x1



Manual x1

Product Overview

1. Charging Case LED Light
2. Charging Port
3. Reset Button
4. Multifunctional Button
5. Earphone LED
6. Magnetic Charging Pin
7. Earphone Microphone

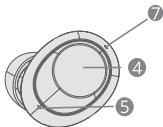

Power On & Pairing

Approach 1 - With Charging Case

US: Take out earphones from the charging case

DE: Entnehmen Sie die Kopfhörer aus der Aufladebox

 
ES: Saque los auriculares del estuche de carga




US: Select 'A10' from Bluetooth list

DE: Wählen Sie „A10“ aus Ihrer Bluetooth Liste

ES: Selecciona "A10" de la lista de dispositivos Bluetooth.

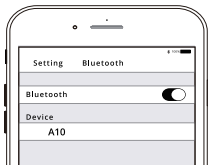

Approach 2 - Without Charging Case

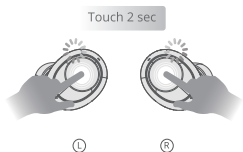 

Note: Right earphone is the master earphone

US: Power On: Touch the earphones for 2 seconds with prompt sound 'Power on'

Pairing: Right earphone Blue and White light flash
Select 'A10'

DE: Anschalten: Berühren Sie die Kopfhörer für zwei Sekunden und die Benachrichtigung „Power on“ hören.
Paaren: Die Kopfhörer verbinden, der rechten Kopfhörer ein weißes und blaues Licht blinkt Wählen Sie „A10“

ES: Encender: Pulsa el botón de los auriculares hasta escuchar un breve sonido de "Power On".
Emparejando: Sobre el auricular derecho parpadea una luz azul y blanca. Seleccionar "A10".

ANC/Transparency Mode

US: Tap Left earphone once to switch between ANC/Transparency mode

ANC Mode Prompt Sound: Noise cancelling on

Transparency Mode Prompt Sound: Ambient on

DE: Tippen Sie einmal auf den linken Kopfhörer, um zwischen ANC- und Transparentmode zu wechseln

Active Noise Cancellation Mode Prompt Sound: Noise cancelling on

Transparentmode Prompt Sound: Ambient on

ES: Pulsa el auricular izquierdo una vez para activar o desactivar el modo de cancelación de ruido.

Cuando se activa la cancelación de ruido se escucha un breve sonido: "Noise cancelling on".

Cuando se activa el modo normal se escucha un breve sonido: "Ambient on".

Incoming call

US: Answer call/End call

Tap the Left / Right earphone once

DE: Anruf annehmen/beenden

Drücken Sie den linken/rechten Kopfhörer ein mal

ES: Responder llamada/ Colgar

Pulsa el auricular izquierdo/ derecho una vez

US: Reject call

Touch the Left / Right earphone for 2 seconds

DE: Anruf ablehnen

Drücken Sie den linken/rechten Kopfhörer für zwei Sekunden

ES: Rechazar llamada

Toca el auricular izquierdo/ derecho durante 2 segundos

Music

US: Pause / Play

Tap the Right earphone once

DE: Pausieren/Abspielen

Drücken Sie den linken/rechten Kopfkörper ein mal

ES: Pausa / Reproducir

Pulsa el auricular derecho una vez

US: Voice Assistant

Tap the Left / Right earphone 3 times

DE: Sprachassistent

Drücken Sie den linken/rechten Kopfhörer drei mal

ES: Asistente de voz

Pulsa el auricular izquierdo/ derecho 3 veces

US: Change Song

Double-tap the Left/Right earphone

DE: Lied wechseln

Drücken Sie den linken/rechten Kopfhörer zwei Mal

ES: Cambiar canción

Doble pulsación sobre el auricular izquierdo/ derecho

US: Adjust Volume

Touch and hold the Left/Right earphone

DE: Lautstärke anpassen

Drücken und halten Sie den linken/rechten Kopfhörer

ES: Ajustar volumen

Mantén pulsado el auricular izquierdo/ derecho

Power Off _____

Without Charging Case

US: Turn off Bluetooth to disconnect the earphones
Touch either one earphone for 8 seconds to power off both earphones

 
DE: Schalten Sie Bluetooth aus, um die Kopfhörer von Gerät zu trennen.
Drücken Sie acht Sekunden lang einen der Kopfhörer, um sie auszuschalten.

ES: Apaga el Bluetooth para desconectar los auriculares.
Mantén pulsado cualquiera de los dos auriculares durante 8 segundos para apagar ambos auriculares.



L/R

Touch 8 sec



Charging

Earphones:

US: Earphone LED Light On: Charging
Earphone LED Light Off: Fully Charged

DE: LED des Kopfhörers leuchtet: Aufladen
LED des Kopfhörers aus: Voll aufgeladen

ES: Luz LED del auricular encendida: Cargando
Luz LED del auricular apagada: completamente cargada

Note: It takes about 1.5 hours to fully charge the earphones

 
Charging Case:

US: Charging Case white LED Light on/blinking: Fully Charged/Charging

DE: LED des Aufladebox Licht an / blinkt: Voll aufgeladen/ Aufladen

ES: Luz LED blanca de la caja de carga encendida/parpadeando:
Carga completa/Cargando

Note: It takes about 1.5 hours to fully charge the charging case



- ● ● ● 1/4 Battery Left
- ● ● ● 2/4 Battery Left
- ● ● ● 3/4 Battery Left
- ● ● ● Full Charged

Wireless Charging Support

US: Put the charging case on the wireless charging pad

 
Note: It takes about 4 hours to fully charge the charging case

DE: Legen Sie den Ladekoffer auf das kabellose Ladepad

Hinweis: Es dauert ungefähr 4 Stunden, um das Ladecase vollständig aufzuladen

ES: Coloque el estuche de carga en la plataforma de carga inalámbrica

Nota: se necesitan aproximadamente 4 horas para cargar completamente el estuche de carga

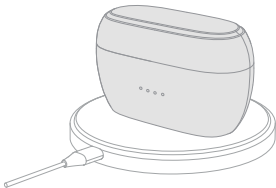

Safety Instruction

Using earphones at high to moderate volumes for extended periods of time will result in permanent hearing damage. It is advised that you keep volume levels moderate to low at all times for your safety.

Do not use while driving, cycling, operating machinery or performing other activities that require hearing surrounding sounds.

Do not use earphones in thunderstorm weather, the earphones may not work properly in the bad weather condition, and may increase the risk of being hit by lightning.

Earphones may not work properly under high temperature or high humidity conditions.

Do not use any corrosive cleaner/oil to clean the earphones. If the earphones come in contact with liquids, quickly wipe away. If submersed in the water, do not turn the earphones on until it is completely dried.

Tips: Man-made damage and lost are not covered under warranty. Keep the earphones and the packaging out of reach of children.

FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference
- (2) this device must accept any interference received, including interference that may cause undesired operation

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

FCC ID : 2AXI9RBA10

Wireless Bluetooth Earbuds