

DOWNLOAD THE APP

Search the App Store or Google Play Store for the **Precision Pro Golf** app. Follow the instructions in the app to pair the R1 Smart Rangefinder and utilize advanced features like **MYSLOPE™**, Find My Precision Pro, and Wind Assist™.



Available on the
App Store



GET IT ON
Google Play



 
Available on the
App Store



GET IT ON
Google Play

Use the QR Code to download the
Precision Pro Golf app.

Follow the instructions in the app to
pair your R1 Smart Rangefinder.

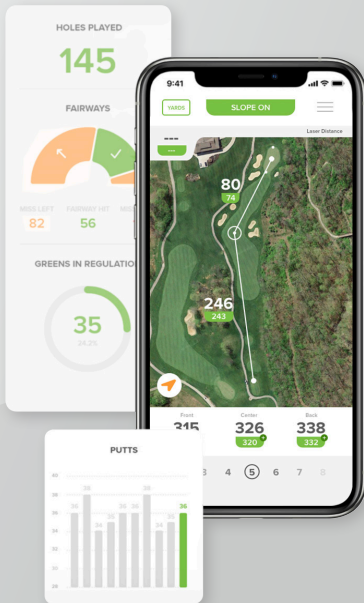



THANK YOU

FOR CHOOSING PRECISION PRO

We believe golf is best played boldly, with the tools and tech that fit your style and your play.

Our revolutionary R1 Smart Rangefinder provides the smartest, most personalized distance measurements in the game.

If it isn't personalized, it isn't precise.



WRITE A REVIEW AT

amazon.com/feedback

AVAILABLE AT

The Amazon logo, consisting of the word 'amazon' in a lowercase sans-serif font with a curved arrow underneath it.

10% OFF

YOUR NEXT PURCHASE
OR SHARE WITH A FRIEND

USE CODE

THANKS10

precisionprogolf.com



R1

PRODUCT MANUAL



FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

RF Exposure Information

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

DOWNLOAD THE APP



 
Available on the
App Store



GET IT ON
Google Play

This product works best when paired
with the **PRECISION PRO GOLF** app.

Please use the QR Code above to
download the app and pair it with
your rangefinder.

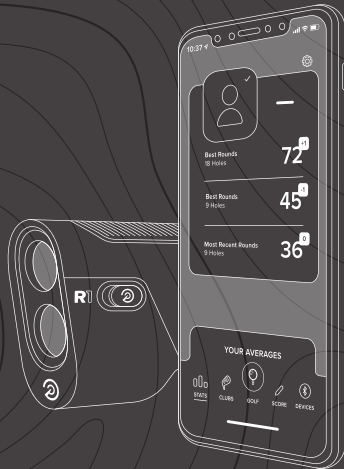


myslope™

The first-ever personalized slope calculation that creates an adjusted distance specific to you and your environment in the moment.

- Launch angle
- Ball speed
- Spin rate
- Temperature
- Altitude
- Humidity


MYSLOPE™ is a game-changing level of accuracy applied to every course, club, and swing to give you a number that's specific to you -- and no one else.

 IF IT ISN'T PERSONALIZED, IT ISN'T PRECISE.

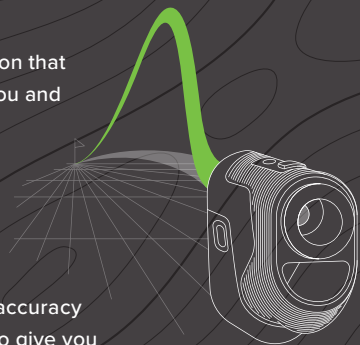


PRODUCT OVERVIEW

 1. Laser Lens
2. Optical Lens
3. Magnetic Grip
4. Mode/Screen Button
5. Power/Laser/Bluetooth Connect Button
6. Adjustable Eyepiece
7. Charging Port / Bluetooth Indicator
8. Slope On/Off Switch

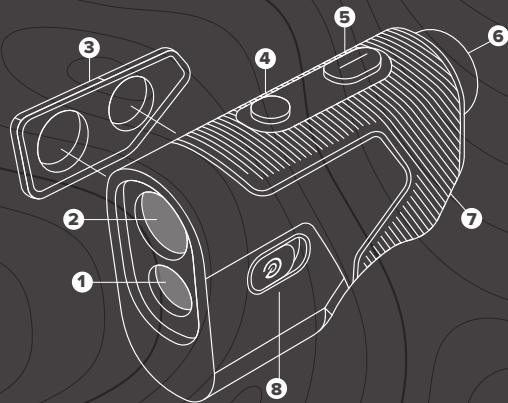


LASER SCREEN

 1. Non Slope-Adjusted Laser Distance
2. Aiming Circle
3. MYSLOPE™ Indicator
4. Slope Adjusted Distance
5. Wind Assist™
6. Yards/Meters Indicator
7. Battery Level

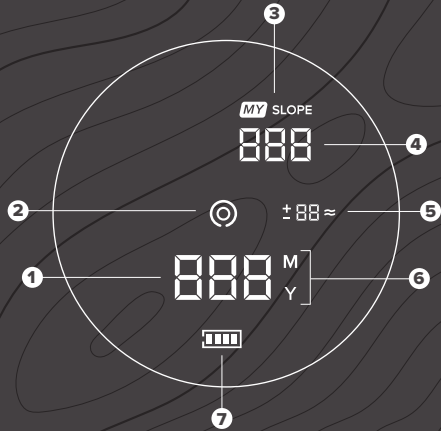

GPS SCREEN

 
1. Center-of-Green Distance
2. Front-of-Green Distance
3. MYSLOPE™ Indicator
4. Back-of-Green Distance
5. Hole Number
6. GPS Indicator
7. Bluetooth Indicator

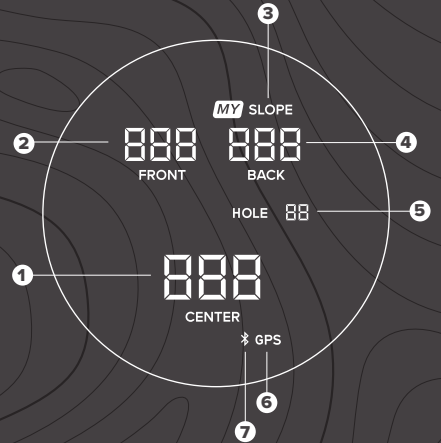


RANGEFINDER QUICKSTART GUIDE



 1: Download the **PRECISION PRO GOLF** app from the Apple App Store or the Google Play Store.

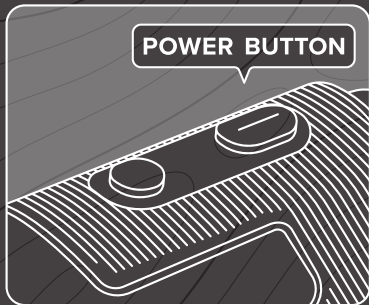


 2: Turn on the rangefinder by pressing the **POWER** button.

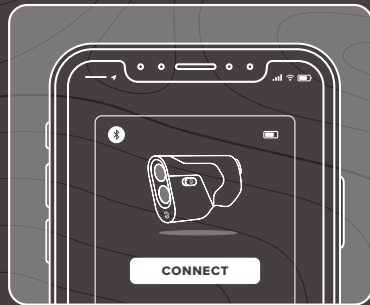

3: Open the Precision Pro Golf app, go to the devices tab, and follow the pairing instructions to connect your R1 Smart Rangefinder.

 RANGEFINDER QUICKSTART GUIDE

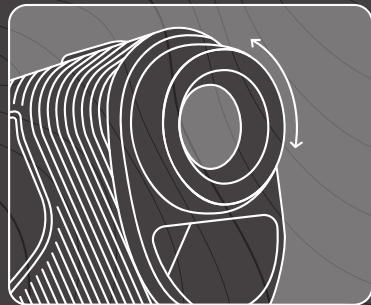

4: Rotate the dial left or right on the adjustable eyepiece until the display appears sharply focused.

 
RANGEFINDER QUICKSTART GUIDE



5: Point the aiming circle at the target -- flag, tree, bunker, etc. -- then press the **POWER** button to “shoot your target.”




6: The distance will appear on the screen.

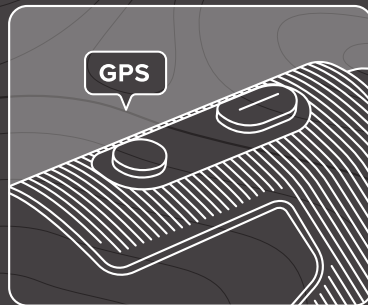

7: Press the **MODE** button to see the Front-Center-Back measurements on the GPS Screen.


*(Press the **MODE** button again to return to the Laser Screen.)*

 RANGEFINDER QUICKSTART GUIDE

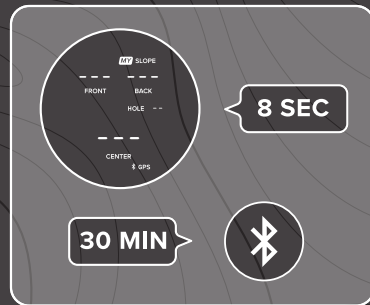

8: The Rangefinder's Screen will turn off after 8 seconds of inactivity. The bluetooth connection will disconnect after 30 minutes of inactivity.

 
SCREENS

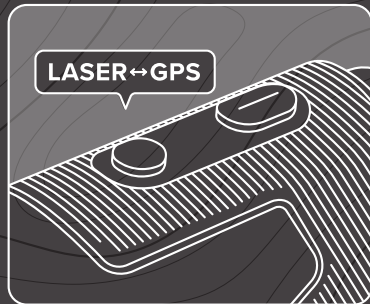

1: Press and release the **MODE** button to switch between the Laser Screen and the GPS Screen.



 2: If a round of golf has been started in the Precision Pro Golf app, the GPS distances to the Front, Center, and Back of the green will appear on the GPS Screen.

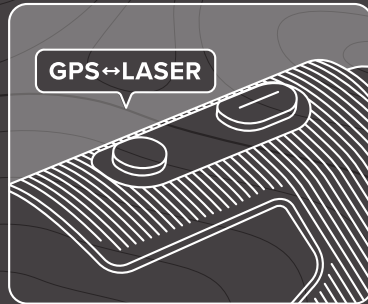

3: Press and release the **MODE** button again to switch the display back to the Laser Screen.

SCREENS

YARDS / METERS

 


1: Ensure your rangefinder is on the Laser Screen (*Screen 1*).




2: Press and hold the **MODE** button for six seconds until the Yards/Meters indicator changes from Y to M, or vice versa.

SLOPE SWITCH

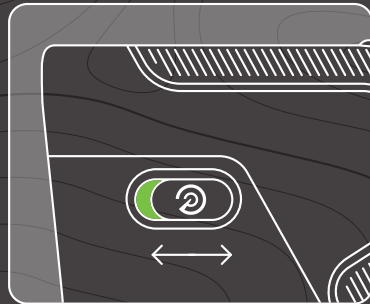

 1: Slide the Slope Indicator switch on the side of the rangefinder forwards or backwards to turn slope on and off.

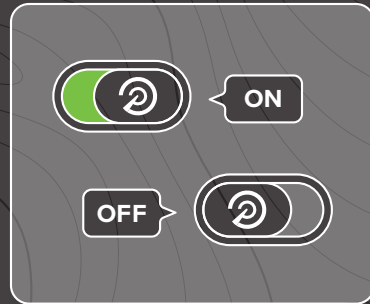


2: Slope is activated when the green is visible. Slope is turned off when the green is not visible.


FIND MY PRECISION PRO



 1: Open the Precision Pro Golf app and go to the DEVICES tab.

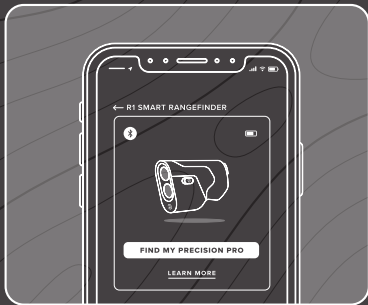

 2: Under the R1 Smart Rangefinder, select “Find My Precision Pro.”

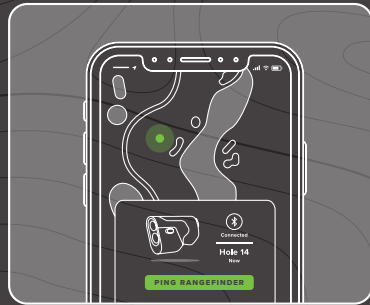

3: The screen will show the location where you were last connected to your rangefinder.

FIND MY PRECISION PRO

 


* **Please note:** you will need to have first connected you R1 and will need to have cell service for the feature to function properly.

WIND ASSIST™




1: Ensure your rangefinder is on the Laser Rangefinder Screen (*Screen 1*). Real-time wind data from our app is calculated before each shot.

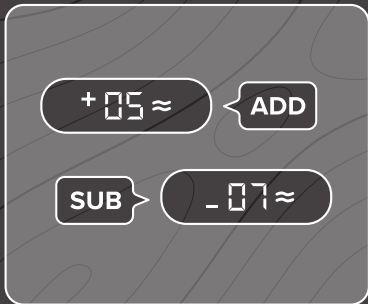


2: A plus-sign (+) signifies the number of yards to **ADD** to your distance. A minus-sign (-) signifies how many yards to **SUBTRACT** from your distance.

 CHARGING YOUR RANGEFINDER

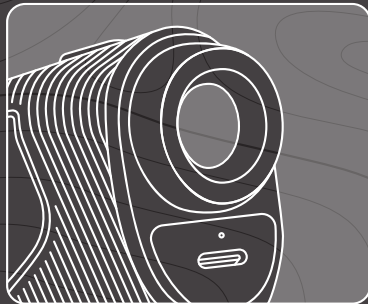

 1: Your R1 Smart Rangefinder includes a USB to USB-C charging cable.

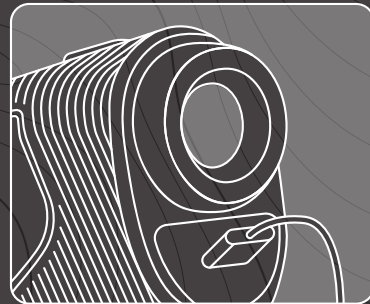

2: Plug the charging cable into the port on the rangefinder located underneath the adjustable eyepiece.

PRECISION PRO GOLF

INDUSTRY-LEADING CUSTOMER SUPPORT

✉ help@precisionprogolf.com

🌐 precisionprogolf.com/help

📞 (888) 568-6770