


LOVENSE

Calor

USER MANUAL

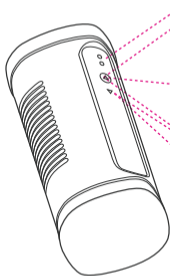

- Charging Port
- Button A: On/Off (hold for 3 seconds) - Default start mode set to Depth Control; Vibration (one tap to cycle “up” through preset vibrations)
- Heating Feature: Attach the charging cable and hold Button A for 3 seconds to heat up the toy; when the orange light on Button B is OFF, the toy is fully heated
- Indicator Lights
- Button B: Switch from Depth Control to Button Control (hold for 3 seconds); Vibration (one tap to cycle “down” through preset vibrations)

What's Included

- (1) Bluetooth® Depth-Controlled Male Masturbator
- (1) USB Charging Cable
- (1) User Manual
- (1) Quick Setup Guide
- (1) Storage Bag

Specifications

Materials	ABS Plastic/Body-Safe Silicone
Weight	345g
Battery	Li-Ion Rechargeable
Charging	90 Mins
Use Time	up to 130 Mins
Standby	up to 120 Hours
Waterproof	IPX7 Waterproof

Charging

Turn off Calor. The cable can be plugged into any USB port or USB/AC power adapter. It will take approximately 90 minutes to fully charge. Once it is fully charged, the solid red light will turn off.

Note: *It is a magnetic charger. When attempting to charge, make sure a solid red light appears.*

Cleaning & Care

- Clean Calor before and after each use.
- Clean inner and outer parts with warm water and a mild soap (or sex toy cleaner).
- Dry thoroughly before storing.

Usage Tips

- Heating up may take 5-20 minutes depending on room temperature.
- Before insertion, generously apply lube to the inside of toy and your penis. Only use water-based lube, as silicone or oil-based lube may affect the silicone casing. Make sure you add the lube before turning on the heating feature (the toy should be kept horizontal).
- You can adjust the low, medium, and high levels to suit your needs.
- Once in the programming mode in our app, you can store up to 10 patterns (that you create) in Calor.

Warning

- When using the heating feature, check the toy's temperature with your hand before inserting the penis.
- Keep away from extreme heat or cold.
- Make sure your toy is recharged at least once every six months.
- DO NOT use the toy while charging/heating up.
- Please make sure you don't attach the charging cable to any metal or stainless steel materials.

Links

Check out the newest guide/download links here. Our software is constantly updated.

Online guide: www.lovense.com/guide

App download: www.lovense.com/download

If you have any feedback or need any additional assistance, use the contact form at www.lovense.com/contact. Someone from the Lovense team will normally reply within 12-24 hours.

Warranty Terms & Conditions

LOVENSE warrants this product for a period of ONE (1) YEAR, after the date of original purchase, against defects due to faulty workmanship or materials. If you discover a defect and notify LOVENSE during the warranty period, LOVENSE will, at its discretion, replace the product free of charge.

Visit www.lovense.com/warranty for detailed warranty and product return information.

FCC Warning

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
 - Increase the separation between the equipment and receiver.
 - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
 - Consult the dealer or an experienced radio/TV technician for help.
- The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction

FCC ID:2AXNT-CALOR