




LOVENSE

Hyphy

USER MANUAL

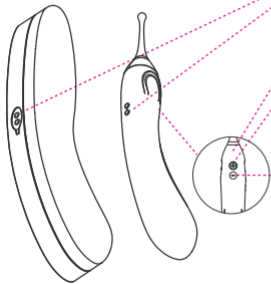

- Charging Port
- Indicator Light
- Button A: On/Off (hold for 3 seconds) - Default start mode set to High-Frequency End Vibration (one tap to cycle “up” through preset vibrations)
- Button B: Switch from High-Frequency End Vibration to G-Spot End Vibration (hold for 3 seconds) & Vibration (one tap to cycle “down” to preset vibrations)

English

What's Included

- (1) Bluetooth® Remote-Controlled Dual-End Vibrator
- (1) Charging/Storage Case
- (1) USB Charging Cable
- (1) User Manual
- (1) Quick Setup Guide
- (1) 3 Attachments

Specifications

Materials	ABS Plastic/Body-Safe Silicone
Weight	125.4 g
Battery	Li-Ion Rechargeable
Charging	75 Minutes
Use Time	up to 310 Minutes
Standby	up to 120 Hours
Waterproof	IPX7 Waterproof

Charging

Turn off Hyphy. The cable can be plugged into any USB port or USB/AC power adapter and attached to the toy directly or the charging/storage case. It will take approximately 75 minutes to fully charge. Once it is fully charged, the solid red light will turn off.

Note: The magnetic charger will only work if positioned correctly. If a solid red light doesn't turn on, rotate the cable 180 degrees.

Cleaning & Care

- Clean Hyphy before and after each use.
- Clean with warm water and a mild soap (or sex toy cleaner).
- Dry thoroughly before storing.

Usage Tips

- For your first time, we suggest setting the High-Frequency End vibration to low and/or using the attachments and then testing/changing until you find your preferred speed.
- It is necessary to properly apply lube to your body and the toy before insertion. Only use water-based lube, as silicone or oil-based lube may affect the silicone casing.
- You can adjust the low, medium, and high levels to suit your needs.
- Once in the programming mode in our app, you can store up to 10 patterns (that you create) in Hyphy
- Open the attachments' plastic cover plate on the "arrow" side..

Warning

- Keep away from extreme heat or cold.
- Make sure your toy is recharged at least once every six months.
- DO NOT use the toy while charging.
- Please make sure you don't attach the charging cable to any metal or stainless steel materials.

Links

Check out the newest guide/download links here. Our software is constantly updated.

Online guide: www.lovense.com/guide

App download: www.lovense.com/download

If you have any feedback or need any additional assistance, use the contact form at www.lovense.com/contact. Someone from the Lovense team will normally reply within 12-24 hours.

Warranty Terms & Conditions

LOVENSE warrants this product for a period of ONE (1) YEAR, after the date of original purchase, against defects due to faulty workmanship or materials. If you discover a defect and notify LOVENSE during the warranty period, LOVENSE will, at its discretion, replace the product free of charge.

Visit www.lovense.com/warranty for detailed warranty and product return information.

FCC Warning

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation.

which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help. The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction

FCC ID:2AXNT-HYPHY