




不见不散
SEE ME HERE

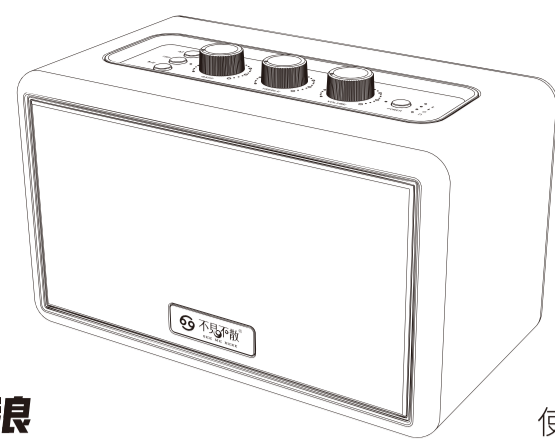

WAVE热浪
W100蓝牙音箱

使用说明书
USER MANUAL



生产企业:深圳市不见不散电子有限公司
地址:深圳市宝安区航空路32号-不见不散视听产业园
电话:0755-61181399 网址:www.hb2099.com

Table of Contents

01- 07 English

08- 14 简体中文


01 Precautions

English

- ◆Please read the instruction first.
- ◆Please follow the instruction carefully.
- ◆Please store and use this product at room temperature.
- ◆Do not use this product near heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- ◆Do not block the opening of the speaker, and do not insert objects into the vents or slots of the speaker.
- ◆Do not throw and drop the product to avoid damage.
- ◆Please charge the speaker with product rated voltage.
- ◆If the connection line does not match your device, please contact the dealer.
- ◆Please keep volumes of the speaker mode rate to avoid temporary or permanent hearing impairment.
- ◆No matter the equipment is damaged due to any reason, it must be repaired by professional maintenance personnel in time.
- Unauthorized disassembly will invalidate the warranty.
- ◆If the battery is not properly replaced, there will be an explosion accident, which can only be replaced with the same type of battery.
- ◆Do not disassemble, impact, squeeze or throw in to fire, if severe swelling occurs, do not continue to use, do not place in a high temperature environment, do not use after the battery is soaked in water.
- ◆Battery (battery pack or combined battery) can not be exposed to such conditions as sunshine, fire or similar over heating conditions.
- ◆If consumers use a power adapter to charge, they should purchase a supporting power adapter that has obtained CCC certification and meets the standard requirements.

02 Packing List

English

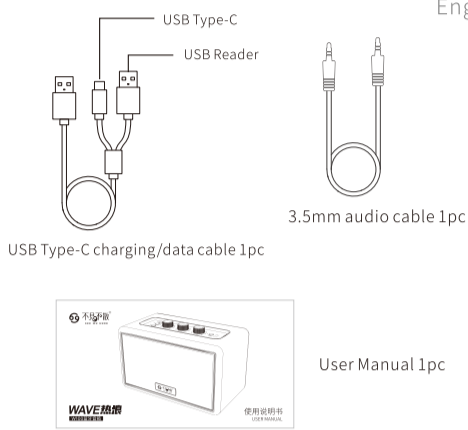

03 Instructions of Buttons

English

Bluetooth: Press and hold for 2 seconds to enter the Bluetooth pairing mode (two player devices can be connected at the same time). Press and hold for 5 seconds to disconnect Bluetooth and clear the pairing list.

Modes Switch: press to Switch different modes (Bluetooth-->TF card-->U disk-->AUX IN)

Note: Bluetooth mode is the default startup mode.

POWER: Indicator light flash, waiting for the bluetooth pairing, connection into a work light is normally on

AUX IN indicator light

U Disk indicator light

SD Card indicator light

Power Button: Long Press 2s to turn on or turn off.

Reset: Long press 8s to reset.

Power indicator light: the red LED is on during charging, it's green once fully charged.

Battery indicator: Red slow flash=10%
10%=<Red<20% 20%=<Orange<55%
55%=<Yellow<75% Green=>75%

PLAYBACK: Short press while playing music: Play/Pause

DOUBLE CLICK: Previous song Long press: Next song

TWS: Tap the TWS of the main speaker to initiate a connection. The indicator blinks quickly

04 Instruction of Ports

English

Data Transmission
In the off state, a Micro SD card has been inserted into the speaker, and the data cable is connected to the computer, so that you can copy music files into the Micro SD memory card

AUX input
Connect the audio cable, prompt sound, sound box automatically switch to AUX mode

Charging:
Take an USB adapter of DC5V-3A (or above) to charge.

MicroSD/U disk playback
When the Speakers is powered on, insert a Micro SD card or USB flash drive to prompt the Speakers to start. Speakers will automatically play music files in the Micro SD card or U disk

05 Bluetooth Connection

English

1. Power on Speakers
When the speaker is powered on, long press the M button for 2s to enter the Bluetooth pairing mode, and the Bluetooth indicator will flash quickly, waiting for Bluetooth pairing.

2. Connect to a Bluetooth device
Go to Bluetooth page of the device search and connect the pairing name "WAVE W100", the indicator light of the M button will stay once connected and hearing the prompt tone after succeeded.

Other:

01. Long press 5 seconds to disconnect bluetooth connectivity and clear matching list

02. Speakers support to connect two devices at the same time

06 TWS(TrueWirelessStereo)function

English



- 1. Initiating the Main speaker' TWS connection**
Select a speaker to start and switch to Bluetooth mode. Press the TWS key. When you hear the prompt tone, the speaker will enter TWS series mode and start to search for the following speaker.
 - 2. Connecting the Satellite speaker' TWS**
Power on the Satellite speaker and switch to Bluetooth mode. Then long press M for 2 seconds to switch to pairing mode and wait for TWS of main speaker to connect.
 - 3. TWS Connected successfully**
The main and Satellite speaker are successfully connected, and a TWS set is made. The TWS key indicator of the main speaker blinks slowly, and the TWS key indicator of the Satellite speaker is steady on.
 - 4. Disconnect TWS**
After connected successfully, if you want to exit the TWS mode, just short press the TWS key.
- Other note:**
01. Main speaker is the left channel, Satellite speaker is the right channel.
02. A TWS set only support 2pcs Speakers.
03. After TWS was connected successfully, operating the function keys of any speaker, the other speaker will have synchronous operation accordingly, except for volume, treble and bass adjusting.

07 Specifications

English

Basic parameters	
Speaker Type	Bluetooth Speaker
Storage Type	Support FAT/FAT32 format Micro SD card/U disk
Power Supply	DC 5V-3A power, the charging time is around 4 hours
Technical parameters	
Drivers	4 inch bass + 66 mm dome tweeter speaker + air duct design
Frequency Response	55-20KHZ
Bluetooth Version	Bluetooth 5.3
USB	USB2.0, compatible with USB1.1
Formats on Micro SD card	
Bitrates	MP3:8Kbps-320Kbps WMA:32Kbps-384Kbps WAV:32Kbps-1414Kbps

Product size: 265x150x172mm
Product weight: 3.07kg (including built-in Li-ion Battery)

08 注意事项

简体中文

- ◆请阅读本说明。
- ◆请遵循本说明。
- ◆请在常温环境中存放和使用本产品。
- ◆请勿在近热源处使用本产品,如散热器、热风调节器、炉灶或其他产生热量的仪器(包括放大器)。
- ◆请勿堵塞音箱的开口处,勿将物体塞入音箱的通风口或槽隙中。
- ◆请勿丢弃,避免因跌落造成本产品损坏。
- ◆请使用音箱额定电压的电源充电器充电。
- ◆如果连接线与您设备不匹配,请与销售商联系。
- ◆请将音量调至合适音量,避免对您的听力造成损害。
- ◆无论设备因何原因损坏,都必须及时请专业维修人员修理,擅自拆卸将使保修失效。
- ◆如果电池更换不当会有爆炸危险,只能用同样类型或等效类型的电池来更换。
- ◆禁止拆解、撞击、挤压或投入火中;若出现严重膨胀,请勿继续使用;请勿置于高温环境中,电池浸水后禁止使用。
- ◆电池(电池包或组合电池)不得暴露在诸如日照、火烤或类似过热环境中。
- ◆消费者若使用电源适配器充电,则应购买配套使用获得CCC认证并满足标准要求电源适配器。

09 包装清单

简体中文

音箱主机 1台

10 按键功能指示

简体中文

蓝牙模式: 长按2秒进入蓝牙配对模式(支持同时连接两台播放设备), 长按5秒断开蓝牙并清除配对列表

模式切换:短按模式切换 蓝牙模式/TF卡模式/U盘模式/AUX切换

注: 开机默认蓝牙模式

蓝牙模式: 指示灯快闪, 等待蓝牙配对, 连接成功指示灯常亮

AUX指示灯

U盘指示灯

SD卡指示灯

电源键: 长按2秒开关机

系统复位: 长按电源键8秒强制重启

电源指示灯: 充电中红色常亮, 充满绿色常亮

电量指示: 红色慢闪=10%
10%=<红色<20% 20%=<橙色<55%
55%=<黄色<75% 绿色=>75%

播放键: 播放音乐时短按: 播放/暂停
双击: 上一曲 长按: 下一曲

TWS键: 短按主机TWS发起连接, 指示灯快闪提示

11 接口功能指示

简体中文

数据传输
关机状态下, 音箱内已插入Micro SD卡, 数据线连接电脑, 即可拷贝音乐文件存入Micro SD存储卡

外接音源输入
连接音频线, 提示音响起, 音箱自动切换至外接音源模式

电源充电
连接DC5V-3A以上的USB电源适配器充电

Micro SD/盘播放
音箱开机状态插入Micro SD卡或U盘, 提示音响起, 音箱将自动播放Micro SD卡或U盘内的音乐文件

12 蓝牙音频连接

简体中文

- 1. 进入蓝牙配对模式**
音箱开机, 长按M键2秒进入蓝牙配对模式, 蓝牙指示灯快闪, 等待蓝牙配对。
- 2. 连接到移动设备**
开启移动设备蓝牙选项, 在蓝牙设备列表中找到WAVE W100, 连接成功您将听到提示音, 同时M键指示灯常亮。

其它:

01. 长按M键5秒断开蓝牙连接并清除配对列表

02. 音箱支持同时连接两台播放设备

13 TWS无线串联功能

简体中文

- 1. 主机TWS发起连接**
选中一台音箱开机并切换到蓝牙模式, 短按TWS键, 听到提示音, 音箱进入TWS串联模式, 开始主动去搜索从机。
- 2. 从机TWS连接**
从机音箱开机并切换到蓝牙模式, 再长按M键2秒切换到配对模式状态, 等待TWS主机连接。
- 3. TWS连接成功**
稍后主机从机连接成功, 并播放提示音, 主机TWS指示灯慢闪, 从机TWS指示灯常亮。
- 4. TWS断开操作**
连接成功后, 如需要退出TWS模式, 短按TWS键即可退出。

其它说明:

01. 主机为左声道, 从音箱为右声道。

02. TWS无线串联, 仅支持2个音箱设备无线串联。

03. 无线串联成功后, 操作任一音箱功能按键, 另一音箱同步相应操作, 音量、高低音只有主机有。

14 技术参数

简体中文

基本参数	
音箱类型	蓝牙音箱
存储类型	支持FAT/FAT32格式 Micro SD卡/U盘
电源供应	DC5V-3A以上的USB电源充电器4小时左右
技术参数	
扬声器单元	低音4英寸喇叭+高音音板66mm球顶喇叭+导相管
频率响应	55-20KHZ
无线连接	Bluetooth 5.3
USB规格	USB2.0, 兼容USB1.1
播放功能	
文件格式	MP3:8Kbps-320Kbps WMA:32Kbps-384Kbps WAV:32Kbps-1414Kbps

产品规格: 265x150x172mm
产品净重: 3.07kg (含内置锂电池)

15 产品售后服务条例

简体中文

- 一、本公司提供的售后服务方式:
 1. 咨询服务: 用户在使用产品前, 请仔细阅读本产品的使用说明书。在使用过程中遇到任何问题, 均可与当地经销商联系, 或致电不见不散全国统一客服热线: 400-888-0396, 或登陆不见不散官方网站 www.hb2099.com 查询。
 2. 包修服务: 包修期内(自购机之日起七日内), 正常使用出现了非人为故障, 请持产品、配件和包装的外观与完整(若外观损坏, 作保修处理), 经检测确认后故障后, 可选择换货或修理, 用户可到当地不见不散委托经销商处联系处理。
 3. 保修服务: 保修期内, 正常使用出现了非人为故障, 均可享受免费保修服务(主机一年内免费保修, 若人为损坏, 作收费维修服务)。
 4. 收费维修服务: 产品在购机之日起一年到三年内, 出现故障可收费维修, 用户需要支付维修所需的元件费、运输费和合理的维修人工费。
- 二、以下情况不在三包范围内, 本公司可提供有偿服务:
 - (1) 超过三包期限。
 - (2) 涂改三包凭证, 或序列号与产品本身不符。
 - (3) 意外因素或人为行为导致的产品损坏(如: 未按使用说明书操作、维护或保管, 错误安装造成的故障, 接入不合适的电源, 进水、渗油、摔坏等)。
 - (4) 无有效三包凭证和有效发票(能证明产品确属服务期内的除外)。
 - (5) 因不可抗力如地震、火灾、水灾、雷击等导致的产品故障或损坏。

(6) 未经本公司许可, 擅自拆卸、修理或改装。

二、关于售后服务的说明:

1. 购机日期以本凭证或购机发票为准, 不能提供有效证明的, 以生产日期为准。
2. 质量问题不包括用户个人对音质、音色等主观评价。
3. 外表、说明书、包装不在保修服务范围内。
4. 对已停产型号产品的服务, 本公司仅做功能性修复(外观可能与原产品有异)。
5. 经销商向您做出的非本公司保证的其它承诺, 本公司不承担任何责任。
6. 用户在享受服务之前请将重要资料另行备份或记录, 因维修或其他任何原因造成的任何损失, 本公司概不负责。因保管不善等原因将机内资料泄露给第三者所造成的损失(如: 银行帐号、密码、资料被更改等), 本公司也概不负责。
7. 在免费保修期内, 本公司或授权服务机拥有更换后的故障件的所有权及处置权。
8. 使用本产品前, 请仔细阅读本产品的使用说明书, 并妥善保存购机凭证。本三包凭证内容解释权归属深圳市不见不散电子有限公司所有, 如有变动, 恕不另行通知。

客户服务时间: 每周一至周五 8:30-18:00
(法定节假日除外) 公司网址: www.hb2099.com

产品保修卡

购买本产品时, 请认真填写此卡, 并予以妥善保管。

产品型号: _____

购买日期: _____

用户名: _____

用户地址: _____

联系电话: _____ 邮编: _____

经销商单位: _____

地址: _____

负责人: _____

联系电话: _____ 邮编: _____

签章: _____

FCC Warning

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.