
X10使用说明书

尺寸:79X103mm 材料:128g铜版纸 工艺:四色印刷,折页

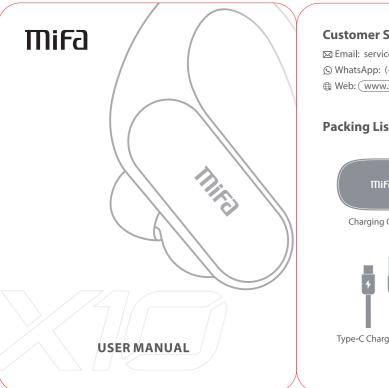

Customer Service — ☑ Email: service@mifa.tech © WhatsApp: (+86) 1392 3490 475 ⊕ Web: (www.mifa.tech ○) Packing List -Charging Case ×1 Earphone ×2 Type-C Charging Cable ×1 Ear Tip ×3 Pairs 1/13

Flexible Ear hook Earphone LED Light/ Control Area Built-in Mic Charging Case Power Display Charging Pins Charging Port 2/13

Product Overview —

First-time use —

- Remove the plastic protective films on the earphones. • Fully charge both Earphones and charging case when first-time
- Use the provided Type-C charging cable, or upright the charging case on a wireless charger to get charge.

How to wear? —

1.Choose suitable ear tips.



2.Put on and twist to adjust to the most comfortable angle.



3/13

Touch & hold on R earphone

Touch & hold on L earphone

How to charge? —

» Type-C Cable charging

Place earphones into the charging case correctly, open the dustproof cover, connect to power supply with the USB-C charging cable, then the earphones and charging case will start charging.



» Wireless Charging Supported

Upright the charging case on a wireless charger(not included) to get charge. (* We recommend you to use

 
wireless charger with QI certificate.)

4/13

LED Battery Power Display —

Battery indicator of Charging Case

The display will show the remaining power of case when you put earphones in, or just open the charging case lid. The number will flash when charging, and will show "100" when fully charged, and will turn off about 10 secs later.



>> Charging Status of Earphones

When being charged, earphones' LED will flash red light; When fully charged, earphones' LED red light will turn off.



Q1: Why does the music cut in and out sometimes?

earphones and your device.

supplied original charging cable.

are clean & dry before charging.

WhatsApp: (+86) 1392 3490 475

Web: (www.mifa.tech Q)

sometimes it can't be charged properly.

signal interruption.

A1: 1-Please make sure there is no obstacle between the

2-Please make sure there is no Microwave oven/Wifi

transmitter around you, which are more likely to

produce electromagnetic interference and result in

Q2: What should I do if the earphones stop charging?

A2: 1-We advise you to charge the earphones by using the

2-Please make sure the charging pins and charging points

3-Please make sure the headphones' battery was run out if

How to power on/off? ———

>> Automatically Power on/off (Make sure the earphones and charging case have power.)

1.Take out earphones from the charging case, they will auto power on and enter pairing mode. (You could hear prompt sound

wear the earphones.)



2.Put the earphones back into the charging case, the earphones will

6/13

disconnect & power off

automatically.

» Manually Power on/off

Touch & hold earphones' touch control area for about 3 secs, earphones' LED light flashes red and green alternately, then turns off, which means the earphones turn on and ready to pair.



Ensure the earphones are not connected to any device, then touch & hold either earphone's (L/R) touch control area for about 5 secs, both earphones' light will flash red for 2 secs, then turn off, which means the earphones (L & R) turn off.





7/13

How to pair & connect dual earphones? —

1. Take out both earphones from the charging case, they will auto turn on and be ready for connection.

2. Then activate the Bluetooth setting on your phone, search and connect "Mifa X10".





Single Mode —

• When on dual mode, put one earphone into the charging case. • Only take one earphone out from the charging case and connect it.

8/13









Factory Restore Setting -

>> When should I do reset?

When only one side play music. When both earphones fail to pair with each other or occur connection related issues.

>> How to do the reset?

1.Delete all "Mifa X10" from the Bluetooth menu on your phone and deactivate the Bluetooth setting.

2.Place earphones into the charging case correctly, touch and hold both earphones' touch control area for about 10 secs, earphones' LED light flashes red 3 times, which means the earphones have been reset.

3. Now take out the earphones from charging case and activate the Bluetooth setting on your device, search "Mifa X10", it will connect without problem.



9/13

Multi-function Operations —

Incoming Call





10/13









Music Mode

Volume +

Volume -

Play/Pause







11/13

Triple-tap on L/R earphone

1.Bluetooth Version: V5.0

2.Support: A2DP/HFP/HSP/AVRCP

Specification -

3. Transmission Range: 33 feet (without obstacle)

4.Charging Port: Type-C 5. Wireless Charging Supported: Yes 6.Music Time: 7H

7.Phone Call Time: 5H 8.Charging Time: about 2H

9.Battery of each earphone: 40mAh 10.Battery of Charging Case: 500mAh

Safety Precautions —

1.Please do not dismantle the earphones or charging case. 2.Please Keep the earphones and charging case out of extreme heat or humidity. And prevent them from being stricken, dropped, warped, soaked, etc.

3.Please stop using the device if it causes any discomfort or pain. 4.Please do not overcharge the device for a long time, otherwise it will decrease the battery's lifespan.

12/13

5.Use DC 5V-1A chargers/adapters certified by a regulated manufacturer. Recharging and discharging the headphones repeatedly will lead to decrease in battery performance over time, which is normal for all rechargeable electronic products.

Q3: How to contact Mifa customer service? A3: Email: service@mifa.tech

If there is any issue with your Mifa X10, please don't hesitate to

contact us, we will reply within 24 hours and solve your problem

13/13

This device complies with part 15 of the FCCRules. Operation is subject to the followingtwoconditions:(1)thisdevicemaynotcauseharmfulinterference,

Any changes or modifications not expressly approved by the party responsible

ClassBdigitaldevice, pursuant to Part 15 of the FCCRules. The selimits are designedtoprovidereasonableprotectionagainstharmfulinterferenceina residentialinstallation. This equipment generates, uses and can radiate radio

installation.

If this equipment does cause harmful interference to radio or television

--Increase the separation between the equipmentand receiver. --Connecttheequipmentintoanoutletonacircuitdifferent

and(2)thisdevicemustacceptanyinterferencereceived,including interference that may cause undesired operation.

could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a

frequency energy and, if not installed and used in accordance with theinstructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular

which can be determined by turning the equipment of fandon, the user is encouragedtotrytocorrecttheinterferencebyoneormoreofthefollowing

 $\hbox{\it --} Re orientor relocate the receiving antenna.$

fromthattowhichthereceiverisconnected.

--Consultthedealeroranexperiencedradio/TVtechnicianforhelp.Thedevice has been evaluated to meet general RF exposure requirement. The device can beusedinportableexposureconditionwithoutrestriction FCCID:2AXOX-X10