


User's Manual

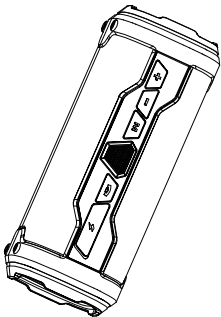


MC002 Wireless Speaker

Packing List

Bluetooth speaker	1
Type-C Charging Cable	1
User manual	1
3.5mm Audio Cable	1
Lanyard	1

Note: Please check if the Bluetooth speaker has power before use.

Product Introduction

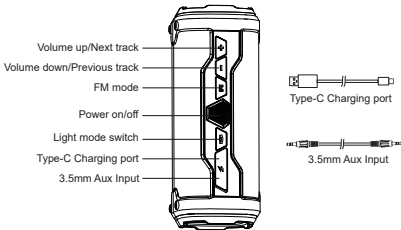

Product specifications

Model	MC002
Product dimensions	173*68*70mm
Product weight	437g
Bluetooth version	V5.3
Speaker power	2*10w
Frequency response range	20Hz-20kHz
Charging Port	Type-C
Built-in battery	Yes
Battery capacity	4000mAh
Play time(Varies by volume level and audio content)	12H
Standby time	40H
Charging time	3H
Signal-to-noise ratio	55dB(A)
Transmission range(unobstructed)	≤20m
Built-in antenna	Yes
Adapter	5V/2A
Power on	Press and hold the power button for 4 seconds to power on.
Power off	Press and hold the power button for 4 seconds to power off. If not connected to Bluetooth, it will automatically power off after 5 minutes.

Feature introduction

Bluetooth connection

Step 1 :

Press and hold the power button (approximately 4 seconds) to power on. The LED lights will illuminate, and you will hear a voice prompt: "Power on Bluetooth mode." [If the speaker is not connected to your device for more than 5 minutes, it will automatically power off.]






Step 2 :

Open your phone's Bluetooth settings, search for and select "MC002" to connect. After the connection is established, you will hear a voice prompt saying "Connected".

By default, the last paired device will automatically reconnect to the speaker after the initial successful connection.

To play music

After successfully pairing with your phone, you can play music by using a music playback app on your phone.

	Press the "V+ / ►" button to increase the volume.
	Press the "► / V-" button to decrease the volume.
	Press the power button to play/pause
	Press and hold the "V+ / ►" button for 2 seconds to skip to the next track.
	Press and hold the "► / V-" button for 2 seconds to go to the previous track.

Calling function

- When there is an incoming call, press the power button to answer and end the call.
- When there is an incoming call, press and hold the power button for 2 seconds to end the call.

FM mode

- Built-in FM antenna
- After connecting to the phone, press the M button once to switch to FM mode (voice prompt: "FM mode"), then press the power button to search for channels.

Note: Pressing the FM button again switches back to Bluetooth mode (voice prompt: "Bluetooth mode").

Light mode switch

- After connecting your phone, click the "T" button to switch between seven lighting modes.
- Connect using a 3.5mm audio cable.
- The speaker is equipped with a 3.5mm input port. Insert one end of the 3.5mm Audio Cable into the 3.5mm input port of the speaker, and the other end into a device (such as a smartphone, computer, laptop, tablet, etc.) that supports a 3.5mm input port.

Charging

Insert the Type-C charging cable, and the speaker will enter charging mode. If the speaker is turned off during the charging process, the power button will light up in red. If the speaker is turned on during the charging process, the lights will remain normal.

Friendly reminder

- If the speaker is not used for more than 3 months, we recommend charging it.
- Please use an FCC (Federal Communications Commission) approved charger.
- Please do not dismantle the speaker.
- Please do not expose the speaker to high or low temperatures.
- Please do not use the speaker during thunderstorms.
- Avoid dropping or subjecting the speaker to severe impact.
- Please keep the speaker away from a heat source during use.
- Please do not submerge the speaker in water.

Question and Answer

Frequently Asked Questions

Why can't these speakers pair with my phone?

- Please make sure the speaker is fully charged and powered on.
- Please make sure that the Bluetooth on your phone is turned on.
- Please check if the speaker is automatically connecting to any other devices.
- If none of the above points are an issue, please turn off the speaker, delete the pairing record between your phone and the speaker. Wait for one minute and then reconnect your phone.

Why is the music cutting in and out?

- First, please ensure that the distance between these speakers and your phone does not exceed 15 meters (unobstructed).
- If the distance is less than 15 meters, please turn off the speaker, delete the connection records between your phone and the speaker. Wait for a minute, and then reconnect your phone.

Why can't I find any channels with the FM function?

- Please make sure that the speaker has not been impacted or fallen from a height, which could damage the built-in antenna.

- Please make sure there is no signal interference around you. You can go to an open area.
- You can try inserting a 3.5mm audio cable into the speaker's jack and use it as an external antenna to see if it works.
- Please confirm if your FM function is properly enabled.
- The FM function is subject to regional limitations and may not receive signals in certain areas.

Are these speakers sweatproof and waterproof?

- These speakers are sweatproof and have slight water resistance. However, for electronic products, we do not recommend immersing them in water.
- For more detailed product FAQs, please contact our customer service.

Activation and Warranty

We provide a 30-day unconditional return and exchange service, as well as a 24-hour after-sales service within 180 days. Please activate within 15 days by contacting us at ***Prscfumstore@hotmail.com***.

FCC Caution

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.