

## Warranty Card

## Packing Information

## Product Parameters

UserName :  
Address :  
Tel :  
ProduceCode :  
PurchaseDate :  
PurchaseStore :  
PurchasePrice :  
ReceiptNumber :  
WarrantyDate :  
RepairingOrganization :

Date	Maintain Recoad	Repairman

## Notice


- 1. One year guarantee for main engine half for battery, please bring warranty card and receipt to assigned place. Human damage not included.
- 2. No guarantee for the machine has been dismantled.
- 3. Expired warranty card is invalid.

Thank you very much for using the Smart Sweeper. It is a high-tech intelligent automatic sweeping machine to create a healthy and comfortable environment for your family.

Main Engine	1	Desk	Side Brush	4	Piece
Charger	1	Piece	Use Manual	1	Source
Remote Control	1	Piece	Certificate	1	Piece
Warranty Card	4	Piece			



## USE MANUAL

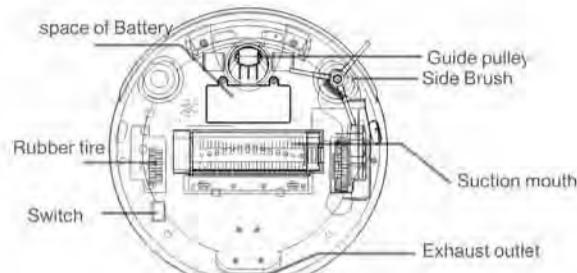

## Product Parameters

Voltage 19V  
Power 22W  
Noise 40-60dB  
Height 8.5CM  
Battery Capacity 2200mAh  
Battery Life 1000 times  
Single Working Time 120min  
Remote Range ≤10m  
First Time Charging Time 8h  
Normal Charging Time 3-4h  
Dust Box Capacity 650ml

Thank you for purchasing this product, please read the contents carefully before use.

## Problem Solved

## Note the note

## Operation guide

## Instructions for use

## • The red light flashes after power on

## Reason

- 1. Battery is low
- 2. Host is raised
- Method of exclusion
- 1. Charging batteries
- 2. Main engine back to the ground
- Fault content: no suction

## Reason

- 1. Dust box is full
- 2. Dust box is not properly installed

## Method of exclusion

- 1. Clean the dust box
- 2. Reinstall the dust box

## • Stop the machine when cleaning

## Reason

- 1. Edge brush winding
- 2. Machine is exhausted

## • Method of exclusion

- 1. Clean the edge of the brush
- 2. Charge the machine

## • Machine can not start

- Reason
- 1. Battery is not installed properly
- 2. Not enough power
- 3. Host is in a protected state

## Method of exclusion

- 1. Make sure the battery is properly installed
- 2. Charge the machine
- 3. Restart

- 1. When the host is discarded, the battery must be removed
- 2. When removing the battery from the host and the virtual wall, the switch must be turned off
- 3. Do not store the battery at temperatures above 45°C or in water
- 4. Do not exert an external force on the battery or fall from a height
- 5. Battery must be recycled, safe disposal
- 6. Host does not use a non-rechargeable battery.




## Cleaning and maintenance

## Clean the suction port


After a period of time, the dust will accumulate at the bottom of the machine. To ensure that the product is effectively cleaned, clean the suction port regularly for maintenance. Smooth air flow.

1. First turn off the power switch.
2. Will be stacked in the suction port of dust dirt clean clean.

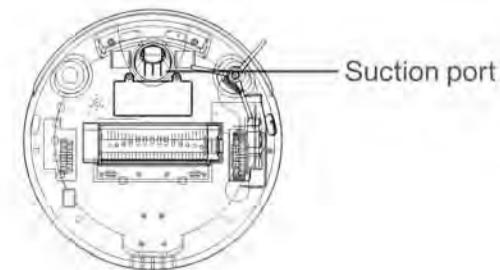


## Boot

1. Turn on the power switch on the right side of the machine
2. Host beeps to indicate that the power is on and the machine is in standby mode.

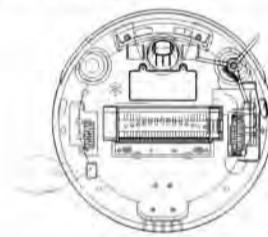

## Machine scope

The host is used for cleaning of family dwellings, hotel rooms and small offices, and has a good cleaning effect on a variety of wooden floors, hard floors and tiled floors. Hard carpet also ok. But no support wool carpet.

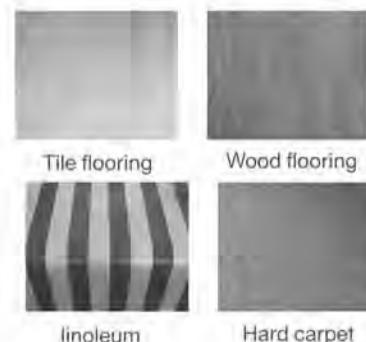

## Automatic Charge

Firstly, use the power adapter to charge the automatic charger to keep the lights on. Then put the automatic charger against the wall. When the smart sweeper is out of power, it will find the automatic charger by itself and start charging.




## Manual charge

Use the power adapter to charge the vacuum cleaner directly. The direct charge is to connect the output of the power adapter to the host charging jack.



## Sweep the brush

1. Replace the edge of the brush with a right hand while holding the sweep of the cat, left hand to suppress the edge of the sweep can be pulled out
2. Remove the brush from the side of the box, the location shown below corresponds to a good direction can be pressed down.

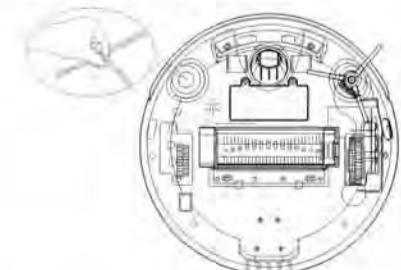


## Handling of the dust box

1. Press the machine cover on the logo, the cover will pop up, the machine can be made of dust box.
2. The machine will be put into the dust box, according to the installation steps can be installed.




## Quick Guide - connecting the device to the Tuya Smart app

1. Download Tuya Smart app  from Play Store (Android) or App Store (iOS). After installation open the application.
2. Create a new account using a valid email address. You will receive an email with a validation code. Enter the received code in the application in order to continue the registration. Set a password for your account.
3. Press the Add Device button.
4. Click on Small Home Appliances and choose Robot Vacuum.
5. Allow the app to access your location and choose a 2.4GHz WiFi network (the robot cannot connect to a 5Ghz wifi network). Enter the password for the chosen Wi-Fi network.
6. Turn on the robot by pressing the power button located on the bottom of the device, then press and hold the button on the front of the robot for 10 seconds.

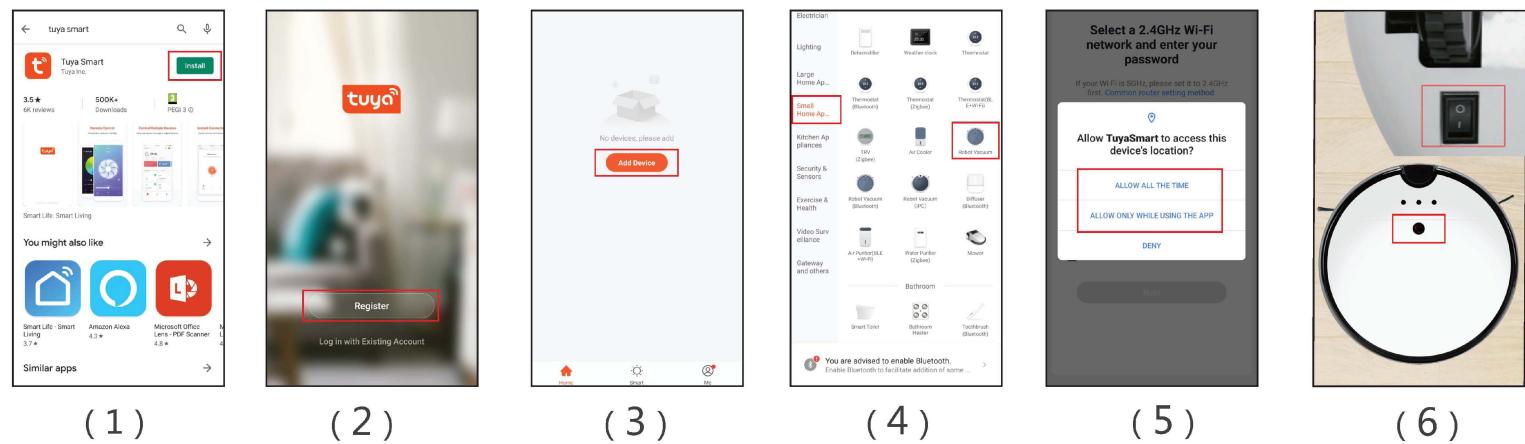

## Quick Guide - connecting the device to the Tuya Smart app

7. Choose the Fast flashing (0.5 seconds/ 1time) option.
8. Wait for the robot to synchronize with the application. Hold the smartphone near the robot.
9. After synchronization, choose your device and press Done.
10. Open the application to start using the robot.
11. At the bottom of the interface you will find all the general functions of the robot.
12. To increase suction power press Settings at the bottom of the interface, choose the Suction/Water option and select High, then press Done.

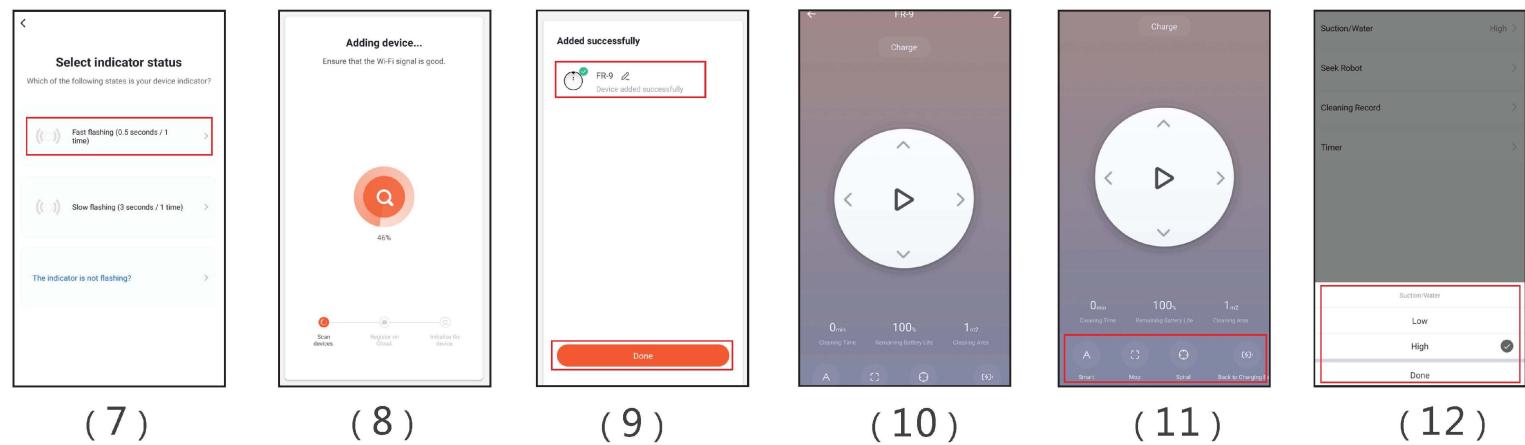

## FCC STATEMENT

1. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
  - (1) This device may not cause harmful interference, and
  - (2) This device must accept any interference received, including interference that may cause undesired operation.
2. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/ TV technician for help.

## FCC Radiation Exposure Statement:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. In order to avoid the possibility of exceeding the FCC radio frequency exposure limits, Human proximity to the antenna shall not be less than 20cm (8 inches) during normal operation