


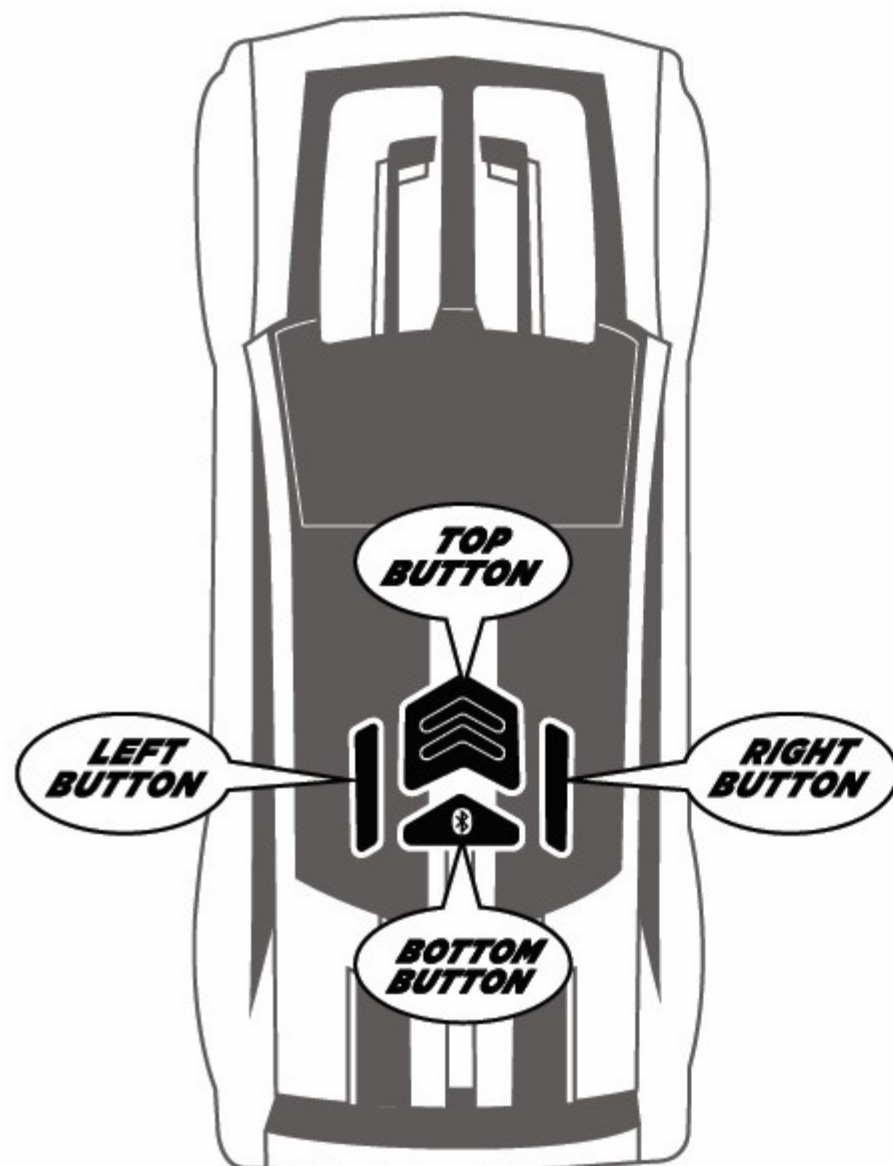

TOP VIEW



HYPER BASS - INSTRUCTIONS

NORMAL MODE:

TOP Button – Press to play music and dance (drives forward and backwards).

BOTTOM Button – Press and release within 1 second to turn on running sound effects.

RIGHT Button – Press to play tire sound effects.

LEFT Button – Press to play engine sound effects.

BLUETOOTH SPEAKER MODE:

BOTTOM Button – Press and hold to turn on Bluetooth mode. Once in Bluetooth mode, connect a smart device with the vehicle to play music.

LEFT Button – Press to turn down the volume. Hint: You can also control the volume from your smart device.

RIGHT Button – Press to turn up the volume. Hint: You can also control the volume from your smart device.

TOP Button – Press to turn on the music dance mode (drives forward and backward along with the music).

**** Under Bluetooth mode – The light of the vehicle will blink along with the music.**

Hint - In Bluetooth speaker mode, if there is no connection within 5 mins, the vehicle will enter sleep mode to save battery. Press any button to wake up the Bluetooth. In Bluetooth speaker mode, press button for a few seconds to exit Bluetooth speaker mode.

Caution: The user is cautioned that changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Supplier's Declaration of Conformity

Maxx Action Glow Racers Hyper Bass / 320278

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Sunny Days Entertainment, LLC
PO Box 80644 Simpsonville, SC 29680
www.sunnydaysent.com



WARNING:
CHOKING HAZARD – Small parts.
Not for children under 3 years.


DISTRIBUTED BY
SUNNY DAYS ENTERTAINMENT, LLC
PO BOX 80644
SIMPSONVILLE, SC 29680
MADE IN CHINA
WWW.SUNNYDAYSSENT.COM