

尺寸：110\*150MM

封面157G双铜

+

内页80G书纸



+

钉装

**tibuta**



**USER'S MANUAL**




*Nous vous remercions d'avoir choisi un appareil Tibuta Computing. Afin que votre appareil vous apporte pleine satisfaction, nous vous invitons à lire les informations du présent manuel d'utilisation.*


*Thank you for choosing a Tibuta Computing device. To ensure that you are fully satisfied with your device, we invite you to read the information in this user manual.*

*Gracias por elegir un dispositivo de Tibuta Computing. Para asegurarse de que está completamente satisfecho con su dispositivo, le invitamos a leer la información de este manual de usuario.*

*Obrigado por escolher um dispositivo Tibuta Computing. Para garantir que está totalmente satisfeito com o seu dispositivo, convidamo-lo a ler as informações contidas neste manual do utilizador.*




*Vielen Dank, dass Sie sich für ein Tibuta Computing-Gerät entschieden haben. Um sicherzustellen, dass Sie mit Ihrem Gerät rundum zufrieden sind, bitten wir Sie, die Informationen in dieser Bedienungsanleitung zu lesen.*

 


*Bedankt voor uw keuze voor een Tibuta Computingapparaat. Om er zeker van te zijn dat u volledig tevreden bent met uw apparaat, nodigen wij u uit om de informatie in deze gebruikershandleiding te lezen.*

*Grazie per aver scelto un dispositivo Tibuta Computing. Per essere pienamente soddisfatti del vostro dispositivo, vi invitiamo a leggere le informazioni contenute in questo manuale utente.*



# USER'S MANUAL

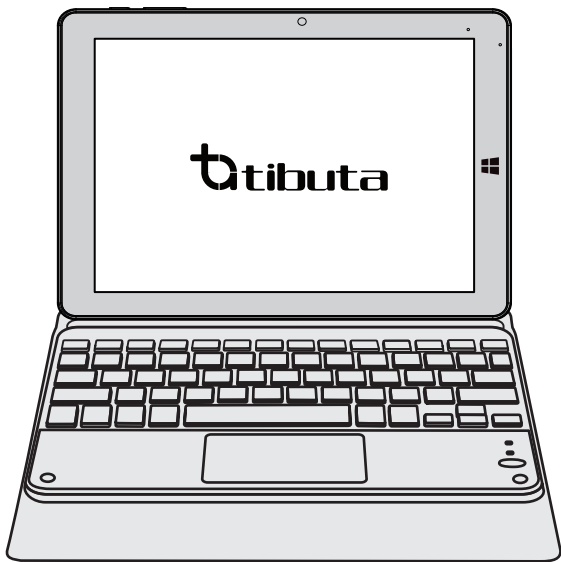

## MasterPad W100



## - Important safety instructions -

This unit should be used in an environment with an ambient temperature between 5°C (41°F) and 35°C (95°F).

Do not expose the unit to rain or moisture and keep it away from liquids. In case of splashing water or other liquid on the unit, immediately switch off the unit and wait until it is completely dry before turning it on again.

Do not expose the device directly to solar radiation

Do not use strong solvents, liquid detergents or other chemicals on or near the surface of the unit to prevent corrosion or deterioration of the surface of the unit.

Do not expose the camera to a dusty environment.

Do not use the unit during a gas leak.

Do not expose the device to strong magnetic or electric fields. You can run the device through airport x-ray detectors. However, it is recommended not to pass your device through the magnetic detection portals or expose it to portable detectors.

Do not place any objects on the device.

Do not place the unit on an uneven or unstable surface.

Make sure to protect the unit from falls or any other impact that may damage it.



Do not leave the appliance on or loaded on your lap or any other part of your body to avoid any risk of heat-related injuries.

Switch off the unit before transporting it or covering it with a material that does not allow optimal air circulation.

Do not use damaged power cords, accessories or other devices with your device.

We recommend the exclusive use of the accessories (power supply, cables, etc.) supplied with the unit.

Use only original batteries. Replacing the battery with an incorrect battery can cause an explosion risk.





Do not disassemble, modify or repair the unit yourself, as this may void the warranty.

Please back up your important content regularly to avoid data loss.

Our company accepts no responsibility for the loss or removal of items contained in the device due to improper use of the hardware or software, lack of maintenance or any other accidental event.



This product has been designed to allow proper recycling of parts and components. The symbol representing a crossed-out wheeled bin indicates that the device should not be disposed of with municipal waste. Consult local regulations for disposal of electronic devices.



The symbol representing a crossed-out wheeled bin indicates that the battery should not be disposed of with municipal waste. Consult local regulations for battery disposal.

 


At full volume, prolonged listening to the portable audio device may damage the user's hearing.




## - Presentation of the device -


Front view

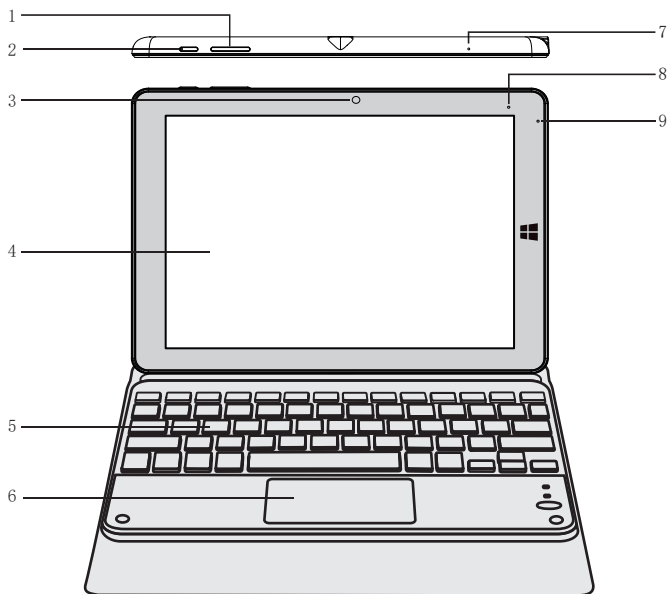

Right view

 

Left view

 

**Note :** The presentation of the device and some features may vary by country, model or version.



### Front view

1. Volume + / Volume -
2. Power button  
*A long press of this button allows you to turn your notebook on or off.*
3. Front camera - Webcam  
*Use this camera for video calls or to take pictures.*
4. Screen
5. Keyboard
6. Touchpad  
*The touchpad allows you to enjoy the features of a mouse. It offers an intuitive interface thanks to its multi-gestures features.*
7. Microphone  
*The microphone allows you to use the voice commands on your device, make audio/video calls, or make audio recordings.*
8. Power-on LED
9. Charging indicator  
*This indicator lights up while the tablet is being charged.*



### Right view



10. Mains power port  
*This port provides power when connected to an adapter.*
11. Mini HDMI port (High - Definition Multimedia Interface)  
*This port allows you to connect your device to an HDMI-compatible device such as a TV, monitor or projector.*
12. USB port type A  
*This port is compatible with USB devices such as a keyboard, mouse, flash drive (USB sticks, memory card readers...), external hard disk, printer.*
13. Headset/microphone socket  
*Use this port to connect external speakers or headphones to your tablet. You can also connect headphones with an external microphone.*
14. Speakers

### Left view

15. Micro-SD card reader  
*The micro-SD card reader allows you to read or write to micro-SDHC / micro-SDXC memory cards.*
16. Speakers

 


## - Switching on -

**Note :** Charge your Thomson device before using it for the first time.

### Charging the battery of your device

Connect the AC adapter to an earthed electrical outlet.




#### **WARNING :**

Read carefully the following instructions concerning the battery of your Tibuta device:

- Only a technician authorized by Tibuta is authorized to remove and handle the battery.
- The battery in your Tibuta device may present a fire or burn hazard if it is removed or disassembled.
- Comply with the information on the device's warning labels to avoid any risk of injury.
- There is a risk of explosion if the battery is replaced by an incorrect model.
- Do not dispose of the battery in a fire.
- Do not attempt to short-circuit the battery of the Tibuta camera.
- Do not attempt to disassemble the battery or reassemble the battery.
- Stop using the battery if it leaks.
- The battery and its components must be recycled or disposed of properly.
- Keep the battery and its components out of reach of children.

### Turning your device on / off

 Turn on your device by pressing and holding the power button for a long time.

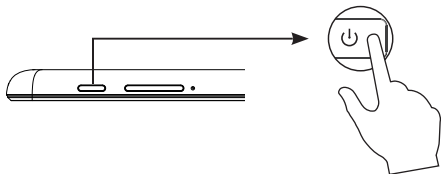

To turn off your device, go to the Start menu and select Start/Stop > Stop.





## First start of your device

During the first boot, the Windows® 10 operating system will guide you through the configuration steps.

Once these configuration steps are completed, the system completes the installation and applies your customized settings. Do not turn off the unit and ensure that there is sufficient battery power during this step.

The Windows® 10 home screen appears after installation and configuration is complete.

 
**Note :** *If you want to restore the factory configuration or reinstall your operating system, we recommend using the Windows Reset function. For this reason,*

1. *Open the start menu and choose «Settings».*
  2. *Select «Update and Update and Security» then «Recovery» from the Right menu.*
  3. *Click on the «Start» button in the «Reset this PC» section.*
  4. *Let us guide you.*
- 
- 

## - Using the touchpad -

### Move the pointer


Slide your finger on the touchpad to move the cursor.

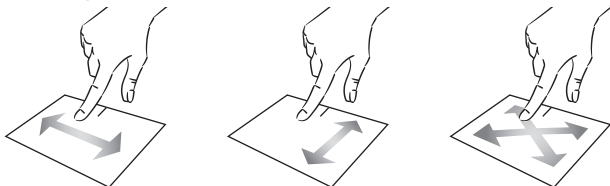

### Click / Double-click


Press briefly once to make a click. For example, to select an item on the desktop or in the file explorer or to open an application from the start menu.

 Press briefly twice to make a double click. For example, on the desktop or in the file explorer, this function will allow you to open the selected item.

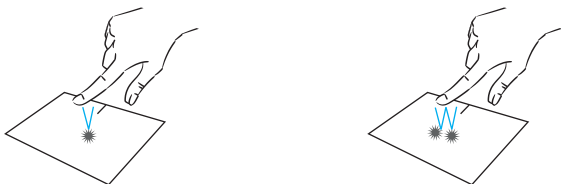

### Drag and drop

 
Press the trackpad briefly twice to select the item and hold your finger on the trackpad by sliding it to the desired position and releasing. You can also select an element and hold down a left click while sliding another finger on the touchpad to drag and move an element.

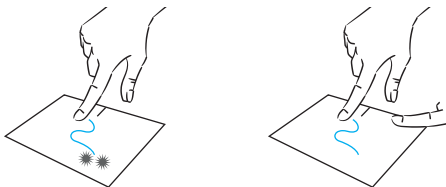




### Left click

 Briefly press the touchpad once to make a left click.

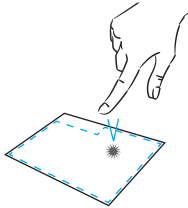


### Right click

 Press briefly once at the bottom right of the touchpad to make a right click or press briefly with two fingers on the touchpad.

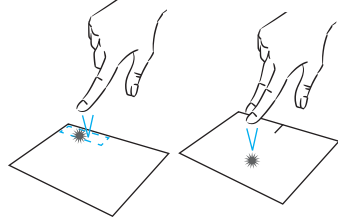


### Scrolling

 Slide two fingers up or down to scroll vertically.

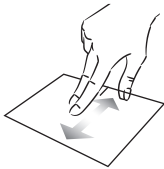


 Slide two fingers left or right to scroll horizontally.

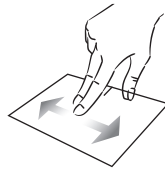


### Zoom

 Move two fingers closer to the touchpad area to zoom out (zoom -).

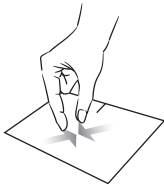


 Move two fingers away from the touchpad area to zoom in (zoom +).

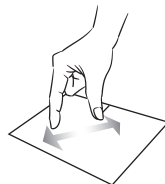


### Show all applications running

 Slide three fingers upwards to display all applications running.

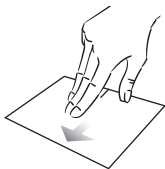


### View the desktop

 Slide three fingers down to display the Windows® 10 desktop.

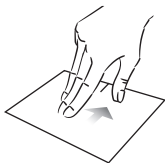

### Open the action center

 Briefly press with four fingers to open the Windows® 10 action center.

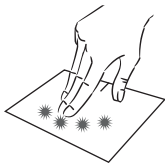















 





 


## - Using the keyboard -

### Function keys

The keypad on your device is equipped with function keys for performing actions or settings.

**Note :** The key icons displayed and the functions offered may vary depending on the model.


fn +  Put the computer into standby mode	fn +  Displays applications running at runtime
fn +  Opens the default web browser	fn +  Opens the sharing pane
fn +  Enables or disables the touchpad	fn +  Vertical scrolling upwards
fn +  Lower the volume level	fn +  Vertical scrolling down
fn +  Increases the volume level	fn +  Start function
fn +  Enables or disables sound	fn +  Fine function
fn +  Opens the default media player	Pause Cancels the current program (example: a game)
fn +  Media player playback or pause function	PrtScr/ Saves a screenshot of your Impécr screen
fn +  Previous music or video	NumLck/ Enables/disables the numeric VerrNum keypad
fn +  Next music or video	ScrLk Enables/disables scrolling
fn +  -Decreases the brightness of the screen	Ins Enables/disables the Refresh mode
fn +  +Increases the brightness of the screen	
fn +  Opens the default email software	
fn +  Enables the use of an external display	
fn +  Opens the settings menu	
fn +  Opens the search pane	
fn +  Enables / Disables the wireless network	




## Shortcut keys

Using the shortcut keys makes it easier to navigate under Windows® 10.

 Opens the Windows® 10 Start menu

 + A Opens the action center


 + D Displays the desktop

 + E Opens the file explorer

 + I Opens the Device Settings menu

 + L Locks the computer and displays the lock screen

 + M Reduces the size of active windows

 + S Opens the search window

 + P Opens the Project pane

## - Windows® 10 Overview -

### Presentation of the interface

*Note : The interface may vary by country, model or version of Windows® 10*



The Start menu is the entry point for your device. It allows you to access applications, folders and settings.

The taskbar displays the applications in use and allows you to switch between them.

The notification area displays important information about the use of your device.

 
The search pane allows you to easily search through your files, applications and other items on your device.



## Presentation of the Start Menu

*Note : The interface may vary by country, model or version of Windows® 10*

The Start menu is the entry point for your device. It allows you to access applications, folders and settings.

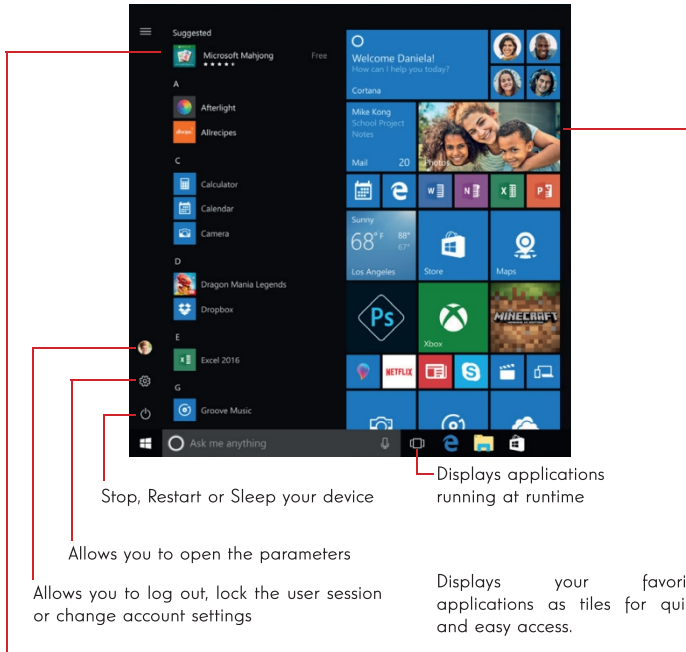

Stop, Restart or Sleep your device

Allows you to open the parameters

Allows you to log out, lock the user session or change account settings

The applications installed on your device are listed here.

*Note : To open an application, move the mouse pointer over it and click to open it.*

Displays applications running at runtime

Displays your favorite applications as tiles for quick and easy access.

*Note : To display an item as a tile, right-click on it and select the «Pin to Start Menu» option.*


*To remove a tile, right-click on it and select the option: «Detach from the start menu».*

## Presentation of the Action Centre

*Note : The interface may vary by country, model or version of Windows® 10*




The action center groups all notifications from your applications. The lower part provides the main shortcuts useful for setting up your device.



To open the action center, click on the icon  in the notification area.



## Connecting to a wireless Wi-Fi network

Your device is equipped with a Wi-Fi module. Connecting to a Wi-Fi wireless network will allow you to access the Internet, check your e-mails, perform device updates or access a home or business network. To connect, follow these steps:

- > Click on the  or  in the notification area.
- > If Wi-Fi is not enabled, click on the .
- > Select your wireless network from the list.
- > Click on «Connect». If your wireless network requires a security key, fill in the key before making the connection.

## Pairing your device with a Bluetooth device

Your device is equipped with a Bluetooth module. This one allows you to connect it to a Bluetooth device (mouse, portable speakers...). To connect the two devices, follow these steps:

- > Go to the Start menu  and select Settings.
- > Click on the «Devices» section and select «Bluetooth and other devices».
- > Select the option  "Add Bluetooth or other device"
- > Let the assistant guide you.

## Activate the Airplane mode

Airplane mode disables wireless Wi-Fi and Bluetooth connectivity. To activate the airplane mode :

- > Click on the icon  or  in the notification area.
- > Click on the button .

To disable the airplane mode :

- > Click on the icon  or  in the notification area.
- > Click on the button .



## System restoration


### WARNING:

Make a backup of your important data before running this option.

Windows® 10 offers several recovery options to restore the factory configuration :

- Keep my files: Reset your device by keeping your personal files.
- Delete All: Restores the factory configuration of your device. Make a backup of your important data before running this option.
- Retrograde to the previous version of Windows® 10: Use this option if you are having trouble with your device after the system update.
- Advanced boot: This option allows you to boot from an external device or access the device's firmware settings or change Windows boot settings or restore Windows from a disk image.

To perform a restoration operation, follow the following steps :

- > Go to the Start menu  and select Settings.
- > Click on the «Update and security» section and select «Recovery».
- > Select the restoration option to be executed.

# Windows 10

Discover more features on the Microsoft website :

<https://support.microsoft.com/en-us/hub/4338813/windows-help?os=windows-10>

## Windows help



### FEATURED

#### Windows Update FAQ

Find out how Windows Update keeps your devices up-to-date.

[Keep your device up-to-date >](#)

Select your product

Windows 10

### FEATURED

#### Free up drive space in Windows 10

Free up some drive space to keep your PC up-to-date and running smoothly.

[See how to free up drive space >](#)

[Update & activate](#)

[Internet & storage](#)

[Security & privacy](#)

[Devices & recovery](#)

[Microsoft Store & apps](#)

[Gaming & Mixed Reality](#)



### What's new in recent updates

Check out these new features we added in recent Windows 10 updates, including the May Update.

[Find out what's changed >](#)

### Windows update

#### Windows Update: FAQ

[Free up drive space in Windows 10](#)

[Manage updates in Windows 10](#)

[Fix Windows Update errors](#)

[Fix printer problems after updating or upgrading to Windows 10](#)

[Troubleshoot black screen problems](#)

[Troubleshoot problems updating Windows 10](#)

[Free up space to install the latest Windows 10 feature update](#)

[Windows 10 update history](#)

[Install & upgrade](#)

[Activate](#)

 
## Get more support



### Microsoft Community

Post questions, follow discussions, and share your knowledge in the Microsoft Community forums.

[Ask the community >](#)



### Assisted support options

Learn about support plans to keep your Windows and Office software running smoothly.

[Purchase a support plan >](#)



### Contact support

Have questions with your Microsoft product? We'll get you the help you need.

[Get support >](#)



## - FAQ -

### **A black or colored dot appears on the screen !**

This does not affect the performance of your device. If the problem persists, please consult the general warranty conditions and then contact Tibuta Customer Service.


### **The touchpad doesn't work !**

Check that the touchpad is correctly activated using the function keys Fn + 


### **The battery charge indicator does not light up !**

Make sure that the AC charger is properly connected to an AC outlet and the power port of the unit. If the problem persists, contact Tibuta Customer Service.

### **How to optimize battery life ?**



To optimize the battery life, you can adjust the screen brightness, disable Wi-Fi and Bluetooth if you are not using it and close applications you are not using.





### **I lost the AC adapter !**

Contact Tibuta Customer Service.

### **The battery doesn't work anymore !**

Contact Tibuta Customer Service.

### **The device does not emit any sound !**

Check that the sound has not been disabled by using the function key Fn +  or by increasing the volume by using the function key Fn + . Make sure that no headphones are connected to your device.



**When the device starts, the power indicator lights up but the operating system does not start !**

Force the device to turn off by pressing the power button for 10 seconds and then disconnect all connected USB devices. Connect the device to a socket with the charger. Turn on the device.

If the problem persists, contact Tibuta Customer Service.

**The computer does not wake up from sleep mode !**

Use the power button to exit the standby mode. Check that the battery level is sufficient by plugging the unit into an AC outlet using the charger. Press the power button again.

**Where to find the drivers for your Tibuta device ?**

The drivers necessary for the proper functioning of your device are present in the following folder :

**C:\WINDOWS\DRIVERS\**

We recommend that you backup the entire folder to an external storage medium (external hard disk, USB sticks, CD-R) in order to keep a copy of these drivers.



### WARRANTY CARD

Model Name MasterPad W100

Product Serial No. \_\_\_\_\_ IMEI No./MEID No. \_\_\_\_\_

Date of purchase

dd

mm

yy

#### Customer's Details

Name \_\_\_\_\_

Address in full \_\_\_\_\_

\_\_\_\_\_

Telephone No. \_\_\_\_\_

Dealer Name & Address \_\_\_\_\_

Customer's signature & Date

Dealer's signature with rubber stamp





FCC Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

This device and its antenna(s) must not be co-located or operating in conjunction with any other antenna or transmitter.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
  - Increase the separation between the equipment and receiver.
  - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
  - Consult the dealer or an experienced radio/TV technician for help.
- The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction

The WLAN function for this device is restricted to indoor use only when operating in the 5150 to 5250 MHz frequency range.



**tibuta**



Windows 10



intel



FCC ID: 2AXUI-W100

