

双铜纸  
哑面

<b>PRODUCT NAME:</b> Cracker Barrell TWS Manual
<b>ARTWORK TYPE:</b> <input type="checkbox"/> PRODUCT <input checked="" type="checkbox"/> PACKAGING <input type="checkbox"/> MANUAL <input type="checkbox"/> LABELS

<b>MATERIAL:</b> 350gsm
<b>FINISH:</b> Matt Laminate
<b>CUTTER GUIDE REF:</b> W 210mm x H 220mm
<b>PRODUCT CODE:</b> TWSEARCB
<b>BARCODE:</b> xxx <b>TYPE:</b> EAN 13, 80%

<b>CMYK</b> 	<b>PANTONE COLOURS</b> Black	<b>CREASE</b> 	<b>CUTTER</b> 
		<b>SPOT UV</b> 	<b>INK FREE</b> 

FONTS:		
WHERE	WHAT	
1.	Product Title	MONTERRAT REG
2.	General Text	MONTERRAT LIGHT
3.	TU Details	HELVETICA
4.	Warnings	HELVETICA

<b>IMAGES:</b> XXXXXX.ai XXXXXX.ai XXXXXX.ai XXXXXX.ai XXXXXX.ai XXXXXX.ai XXXXXX.ai
---

<b>NOTES:</b>
---------------

VERSION DATE:	
DATE	DESIGNER
12/10/2020	CHLOE ROWLEY

**PLEASE ENSURE ALL FONTS ARE OUTLINED AND IMAGES EMBEDDED BEFORE RELEASING ARTWORK TO FACTORIES**



## Wireless Earbuds Manual

### Power ON/OFF

Press the "On/Off" button on the back of the case, a blue light will turn on. To turn the case off press the button again, the blue light will turn off.

### To Charge the earbuds

Return earbuds to case. Use lighting cable supplied and plug into USB plug. A red light will flash to show the case is charging. Once charge is complete the red light will remain on.

### To use the earbuds

Open the top cover of the charging case and remove the earbuds. Both earbuds will automatically power on and red and blue light will flash on the earbuds. Once both earbuds are paired successfully, the right earbud will flash with a blue and red light. The left earbuds will not flash once paired with the right earbud.

To Pair the earbuds with your wireless device: open your device wireless functions setting and search EARCB. Select EARCB and pair with your wireless device. Once connect a voice will say 'CONNECTED' through the earbuds and the light will stop flashing on the earbuds.

Your earbuds are now successfully connected and ready to use.

To power off your earbuds, simply place the earbuds back into the case and the earbuds will automatically disconnect from your wireless device.

The earbuds will automatically power off when not connected to a wireless device for 5 minutes.

### Touch Functions

#### Answer Telephone calls

When a call is received, touch the earbud once and the call will be answered. To end the call touch the earbud once and the call will end.

To reject a telephone call, touch the earbud for 3 seconds and the call will be rejected.

#### Play and Pause Music

Touch either earbud once to start and pause music

#### Next song

Touch the Right earbud 2 consecutive times to move to next song

#### Previous song

Touch the LEFT earbud 2 consecutive times to move to previous song

#### Volume increase

Touch the Right earbud for 2 seconds on to increase the volume, a beep noise will confirm the volume increase.

#### Volume Decrease

Touch the LEFT earbud for 2 seconds on to decrease the volume, a beep noise will confirm the volume decrease.

### Troubleshooting

#### Earbuds not powering on

Return earbuds to case and use a lighting cable to charge.

#### Low battery

A 'dingdong' noise will sound in the earbuds.

#### Earbuds not connecting

Return both earbuds back to the case and press the ON/OFF button on the case to reset the earbuds.

Battery for charging case: 502030, 3.7V/250mAh.

Battery for earbuds: 400909, 3.7V/25mAh.

**NOTE:** This equipment has been tested and found to comply with the limits for a Class B digital device pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Designed in London by Magnum Brands Group Ltd.  
Ruslip, HA4 6EJ, UK  
© www.magnumbrands.com

**M:G** MAGNUM  
BRANDS  
GROUP

E&OE images and illustrations may differ from actual product.



FCC ID: 2AXUXTWSEARCB