



 



DH-I66S (GWP) Series Quick Guide

1 Before

Please prepare the following items before installation.
Only the device in the product package.


DH-I66S	Wall bracket	8Pin cable	10Pin cable	M4×30 Screw
 ×1	 ×1	 ×1	 ×1	 ×2

2 Product Overview

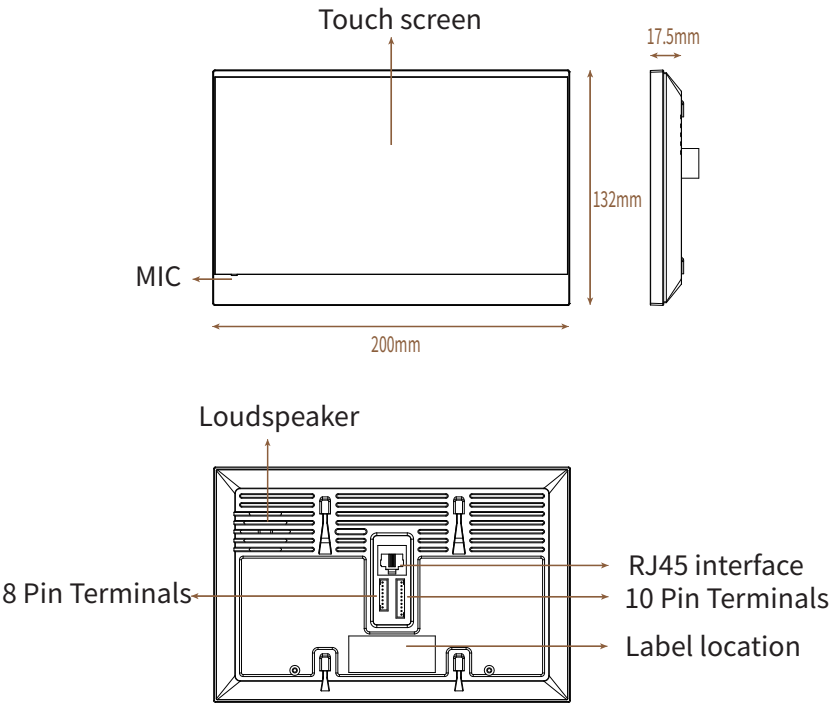


3 Installation

With embedded box in the wall

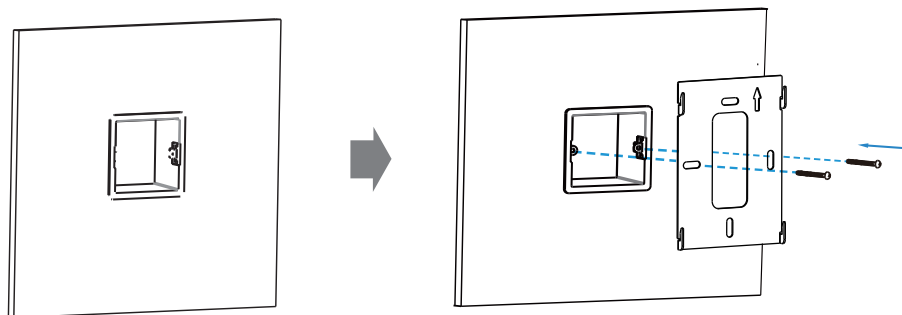

Step1 : Make sure all cables in the embedded box.


Step2 : Fix the wall bracket on the embedded box with two screws.

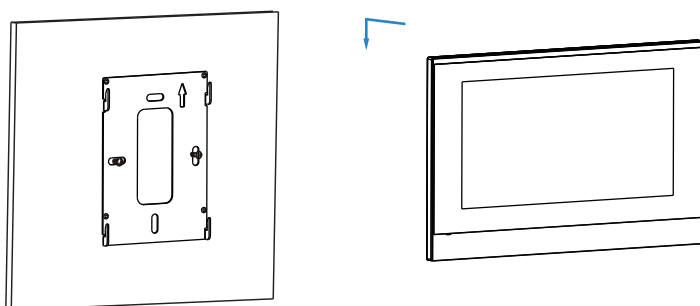

Step3 : After the device is connected to the power cord, network cable, and zone line, Push down to fix the device securely.

DH-I66S (GWP) Series Quick Guide



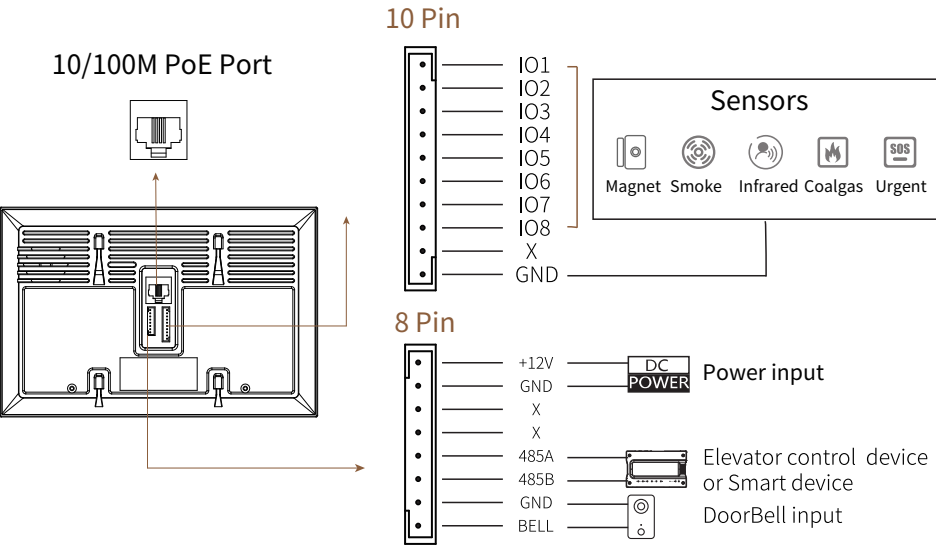












4 Device Wiring



5 Specifications

OS	Android
Display	7 Inch LCD
Resolution	1024×600
Input power	DC12V / 1A
PoE	Support
WiFi	Support
ZigBee	Support
Bluetooth	Support
Front panel	ABS
Working Temperature	-10°C ~ 55°C
Working Humidity	10%~95%RH
Equipment size	200×132×17.5mm

6 Stats

Voice	 Voice	 Mute
Arming	 Disarm	 Arming
Gateway	 Unstart	 Non-networked
	 Unauthorized	 Server Exception
	 Not online	 Online
LAN	 Connected, but not access door unit	
	 Not connected	 Connected
WAN	 Connected, but not access door unit	 Connected

7 Intercom

Make a call:

The user can call the management center or other residents.
Press Intercom icon to enter the room address , then choose to call out.

Receive a call:

After receiving the call, the user authenticates the visitor through the video, and then chooses to unlock or refuse.

Unlock :


During the talk, press the unlock icon in talking interface to unlock the door.

Monitor:


In the monitor interface,press icon to receive the video from doorway IPC or indoor IPC or community IPC any time.

8 Smarthome Gateway

• Network topology

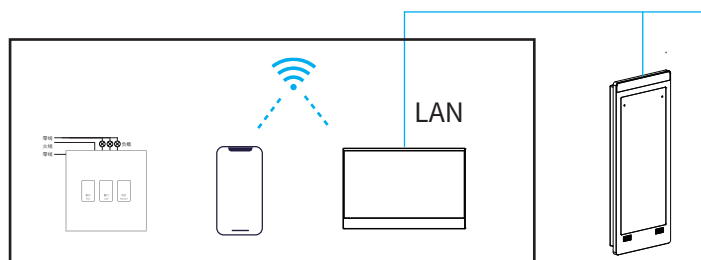

• Operating instructions

- ①The device is powered on and connected to Wi-Fi.Ensure the device gateway status is .
- ②Go to the Settings-WLAN of your phone,select and connect to the same Wi-Fi.
- ③Search “AIhome-SmartLife” in iOS App store or Google play to download the APP.Complete registration and login.
- ④Then enter the device’ s application “Setting→System info”, click“Allow access”.
- ⑤Begin to add smart devices through APP, See AIHome APP user's instruction manual for details.

• About the use of wireless:

When users need to remotely control the smart home, they need to connect to the smart home platform through **Wi-Fi**.And smart home terminals, such as panels and sensors, connect to DH-I66(GWP) through **ZigBee**. User can also connect smart terminals through **Bluetooth**, such as smart panels,Bluetooth speakers.

9 Warning

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
 - Increase the separation between the equipment and receiver.
 - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
 - Consult the dealer or an experienced radio/TV technician for help.
- Any Changes expressly or modifications not approved by the party responsible for compliance could void the user's authority to operate the equipment. This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference,
- (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC Radiation Exposure Statement:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment .

This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

This equipment should be installed and operated with minimum distance 20cm between the radiator &you body.

Fujian Nexhome Intelligent Technologies Co., Ltd.

ADD : 7th floor, building 1, No. 9, Gaoxin Avenue, Shangjie Town,Minhou County,Fuzhou,China
Sites: www.nexhome.cn