
SYNCO)

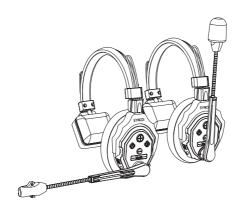

XTALK

Full Duplex Wireless Intercom Headset System

User Manual

Thank you for choosing SYNCO product. Please read this manual carefully before use and follow all instructions mentioned herein.

Caring For Your SYNCO Product

- · Please keep the product in a dry, clean, dust-free environment.
- Keep corrosive chemicals, liquids and heat sources away from the product to prevent mechanical damage.
- · Use only a soft and dry cloth for cleaning the product.
- Malfunction may be caused by dropping, the impact of external force.
- Do not attempt to disassemble the product. Doing so voids the warranty.
- Please have the product checked or repaired by authorized technicians if any malfunctions happen.
- · Failure to follow all the instructions may result in mechanical damage.
- · Warranty does not apply to human errors.

Packing List



Headset (3/5 pcs for X3/X5)



Cable (2/3 pcs for X3/X5)



(3/5 pcs for X3/X5)

SYNCO)

Storage Bag x1



Charging Station (2/3 pcs for X3/X5)



One-Ear Foam Cushions (5/8 pcs for X3/X5)

Mic Windshield (5/8 pcs for X3/X5)

Product Introduction

- 1 3 5mm Mic In Port
- ② Power On/Off Toggle
- (3) Indicator Light
- (4) Button A (5) Volume +
- (6) Button B
- (7) Volume —
- ® Type-C Port



Operations

 
1. Power On/ Off

Power On: Push the power toggle switch upwards to turn it on. Power Off: Push the power toggle switch downwards to turn it off.

2. Master/Remote Settings


To set/cancel the headsets as the Master, long-press the A button for 8 seconds. Every headset is available to be set as Master/Remote.

* Long press the volume up button for 3 seconds to play the Master/ Remote mode voice prompt.



3. Pairing

 Long press the A key for 3 seconds to enter pairing mode. Long press the A key for 3 seconds to cancel pairing.



4. Volume Settings

Short press the volume up/down button to increase/decrease the volume.

5. Noise Cancellation

Short press the B button to turn on/off the noise cancellation feature.

6. Mute/Unmute

Rotate the boom arm up/down (see the picture below) to mute/unmute.

† The Mute/Unmute mode voice prompt will be played once the Mute/
Unmute is activated.



7. Domination Mode

Press and hold the B button to enter domination mode for muting all Remotes. The Remotes are still available for listening and the Master is available for speaking. Release to exit domination mode.



8. Indicator Light Status

Green Light Flashing	Not Connected
Green Light Steady	Connected
Red Light Flashing	Low Battery
Red Light Steady	Charging

9. Powering

1). Via Replaceable Battery Power

Push down the toggle of the battery case then pull the case door outward to place/remove the battery.

2). Via Power Bank

Use the Type-C port for simultaneous charging and using.



10. Real-Time Monitoring

Connect the devices with headset via 3.5mm TRS port for monitoring the audio from device.

Specifications

Wireless Technology	Digital 2.4GHz
Transmission Mode	Full-Duplex
Operating Range	350m (LOS)
Frequency Band	2.4GHz
Latency	About 50ms
Approximate RF Sensitivity	<-90dBm
Radio Output Frequency	20dBm
Power	USB-C 5V
Battery Capacity	1050mAh Li-ion Battery
Working Time	20H
Charging Time	About 2.5H
Frequency Response	150Hz~7KHz
Signal-To-Noise Ratio	≥ 65dB
Distortion	<1 %
Microphone Type	Condenser Microphone
Max Input Sound Pressure Level	>115dBSPL
Output Sound Pressure Level	Typical 98+3dBSPL(at 94dBSPL 1KHz)
Weight	About 188g (Battery Included)
Temperature Range	0~+45° C(Working Status)
	-20~+60° C(Storage Condition)

WARRANTY

Warranty Period

Thank you for purchasing SYNCO products.

- Customers are entitled to free replacement or repair service in case of quality defect(s) found in the product under normal use within 30 days upon receipt of the product.
- Original SYNCO products are entitled to 12-month limited warranty service. The warranty period begins on the date of purchase of brand new, unused products by the first end-user.

Within the warranty period, if product defect or failure is attributable to material defection or technological problem, the defective product or defective part will be repaired or replaced without charge (service and materials fee).

Warranty Exclusions and Limitations

- 1. Faults resulted from inappropriate use of a product without following its operation specification
- 2. Artificial damage, e.g. crash, squeeze, scratch, or soaking
- Modifications to a product by its user or a third party without prior written consent of SYNCO, e.g. replacement of element or circuit, label alteration
- 4. The code on product is inconsistent with that of warranty certificate, or the code on the product or warranty certificate is altered or torn off
- All consumable accessory attached to a product, like cable, wind muff, battery
- 6. Faults as a result of force majeure, such as fire, flood, lightning, etc.

Warranty Claim Procedure

- If failure or any problem occurs to your product after purchase, please contact a local agent for assistance, or you can always contact SYNCO's customer service through email at support@syncoaudio.com.
- 2. Please retain your sales receipt and warranty certificate as proof of

purchase. If any of these documents is missing, only sales return or chargeable service will be provided.

3. If the SYNCO product is out of the warranty coverage, the service and the parts cost will be charged.

Guangzhou Zhiying Technology Co., Ltd

- Room 2401, 24 / F, South Tower, Lisheng Plaza, No. 68 Huadi Avenue, Liwan District, Guangzhou, China, 510000
- support@syncoaudio.com
- ø www.syncoaudio.cn

FCC Warnning:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection againstharmful interference in a residential installation. This equipment generates, uses and can radiateradio frequency energy and, if not installed and used in accordance with the instructions, maycause harmful interference to radio communications. However, there is no guarantee thatinterference will not occur in a particular installation. If this equipment does cause harmfulinterference to radio or television reception, which can be determined by turning the equipmentoff and on, the user is encouraged to try to correct the interference by one or more of thefollowing measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1)This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 0cm between the radiator and your body.