

OEB-311说明书: Internal Use(内部公开)

 
100g铜版纸,无膜,4C+1专印刷,折页 成品尺寸: 55*85mm

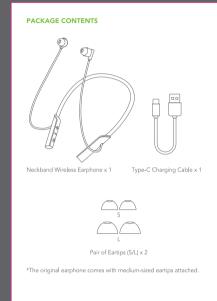


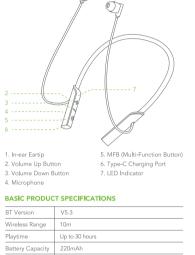








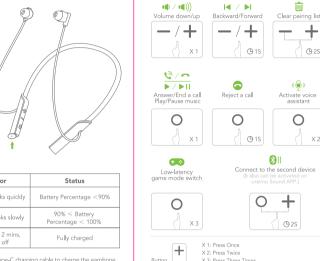

	ATTENTION		
© 2S	1. To preserve battery lifespan, fully charge at least once a month. 2. Use original or certified cables. 3. Do not expose to liquids. 4. Do not disassemble. 5. Avoid dropping. 6. Avoid extreme temperatures. 7. Do not use the product outdoors during a thunderstorm. 8. Do not use any corrosive cleaner/oil to clean.		
() Activate voice assistant	TROUBLE SHOOTIN	G	
	Problem Description	Cause	Solution
	Power on function fails.	The battery is exhausted.	Use the charger to fully charge the battery.
	Charging function fails.	The charging port is not properly connected.	Reconnect the charging port.
cond device ivated on APP.)	Power off function fails.	The earphone program is in error due to an incorrect operation.	Use the charger to charge and reset the earphone.
+	The earphone cannot be searched or pairing fails.	The earphone does not enter into the pairing mode.	Enable the earphone to enter into the pairing mode.

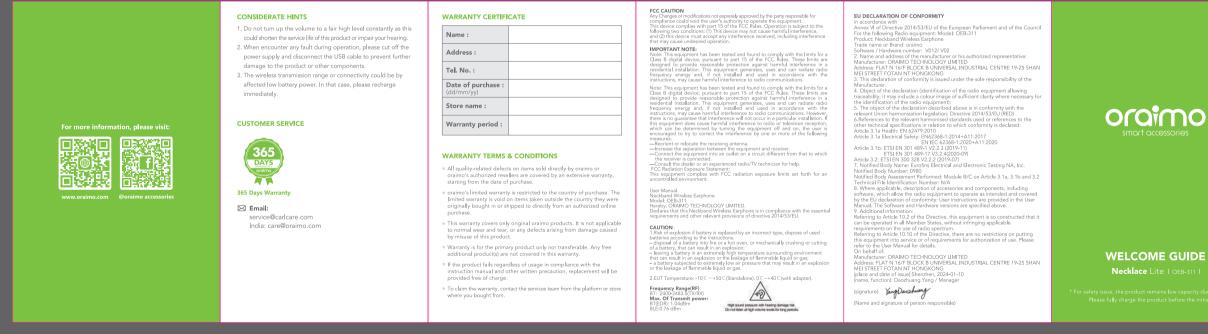

封底 封面