



OF-kk30说明书-英语:
 100g书纸, 无膜, 1专+1C, 左右风琴
 成品尺寸: 80*80mm








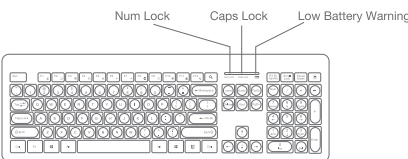
WELCOME GUIDE

Please read this Guide carefully before using the product

Package Contents

 Keyboard x 1
  Mouse x 1
  Nano Receiver x 1

Product Overview



Basic Product Specifications

Keyboard
 Material: ABS
 Key number: 104 Keys
 Key stroke: 3.5±0.3mm
 MCU: CX51761Y
 Operating voltage: DC 3V
 Battery: 2*AAA
 Transmission distance: 8M
 Application and compatibility: Windows 2000/ WindowsXP/ Vista/ Windows 7/ Windows 8/ Mac

Indicator function: Num Lock- Caps Lock- Low Battery Warning
 Full key conflict free: Support

Mouse
 Number of keys: 3
 Work type: Optical
 MAX DPI: 800DPI
 Battery: 2*AAA
 Application and compatibility: Windows 2000/ WindowsXP/ Vista/ Windows 7/ Windows 8

MCU: MX8650

Using Instructions

Step 1: Install the mouse batteries and remove the nano receiver

- Take the battery cover off.
- Remove the nano receiver.
- Insert an AA battery into the battery compartment. Make sure that the + and - signs match the symbols in the compartment.
- Put back the battery cover.

Tip: Store the nano receiver in the mouse when it is not in use.

Step 2: Install the keyboard batteries

- Take the battery cover off.
- Insert two AAA batteries into the battery compartment. Make sure that the + and - signs match the symbols in the compartment.
- Put back the cover.

Step 3: Connect your mouse and keyboard to your computer

- Plug the nano receiver into the USB port on your computer.
- Slide the ON/OFF switch on your mouse to ON. The computer will automatically detect the mouse and keyboard, so you can immediately begin using them.

Troubleshooting

My mouse or keyboard is not working.

- Make sure that your mouse and keyboard are turned on.
- Move your keyboard and mouse closer to your computer.
- Make sure that your computer meets the system requirements.
- Only use the mouse on a clean, flat, non-slippery surface to ensure smooth and accurate cursor action.
- Avoid using your mouse on reflective, transparent, or metallic surfaces.
- Make sure that your mouse or keyboard and the nano receiver are paired.
- Replace the mouse or keyboard batteries.
- Try connecting your nano receiver into a different USB port on your computer.
- Try removing or moving other wireless devices near the computer to prevent interference.

If your mouse pointer is too sensitive, or not sensitive enough, or your scrolling wheel needs adjustment, do the following:




- Go to Control Panel > Hardware and Sound > Mouse (Windows 7), PC Settings > PC and Devices (Windows 8), or System Preferences > Mouse (Mac) and adjust the cursor or scrolling wheel settings.

Customer Service

365 DAYS WARRANTY

India: care.in@oraimo.com
 Nigeria: care.ng@oraimo.com
 Kenya: care.ke@oraimo.com
 Ghana: care.gh@oraimo.com
 Morocco: care.ma@oraimo.com
 Africa: service@carlcare.com

For more information, please visit:

www.oraimo.com @oraimo_accessories

Warranty Certificate

Name :	
Address :	
Tel. No. :	
Date of purchase : (dd/mm/yy)	
Store name :	
Warranty period :	

Warranty Terms & Conditions

- * All quality-related defects on items sold directly by oraimo or oraimo's authorized resellers are covered by an extensive warranty, starting from the date of purchase.
- * oraimo's limited warranty is restricted to the country of purchase. The limited warranty is void on items taken outside the country they were originally bought in or shipped to directly from an authorized online purchase.
- * This warranty covers only original oraimo products. It is not applicable to normal wear and tear, or any defects arising from damage caused by misuse of this product.
- * Warranty is for the primary product only nor transferable. Any free additional product(s) are not covered in this warranty.
- * If the product fails regardless of usage in compliance with the instruction manual and other written precaution, replacement will be provided free of charge.
- * To claim the warranty, contact the services team from the platform or store where you bought from.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Warning: changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment