


Golden Ages


真无线蓝牙耳机

Instructions

Package list

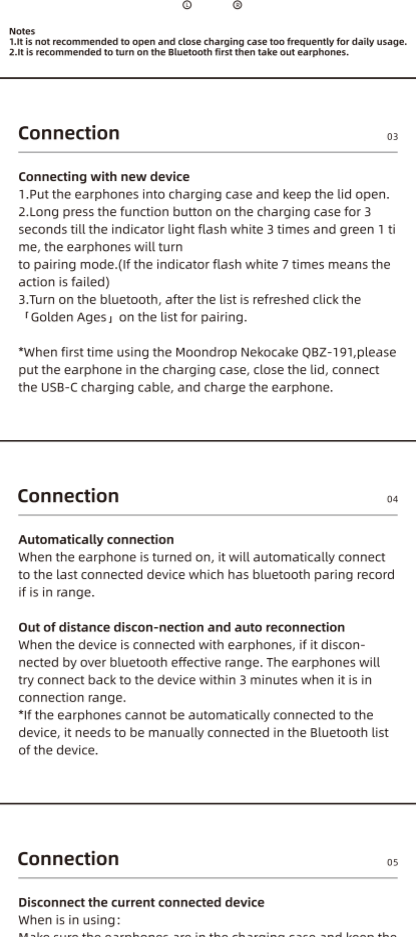

Product Description

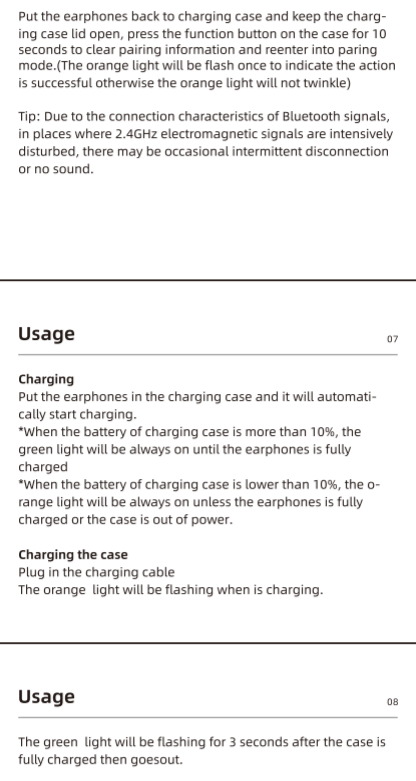

Notes:
 1. It is not recommended to open and close charging case too frequently for daily usage.
 2. It is recommended to turn on the Bluetooth first then take out earphones.

Connection

Connecting with new device
 1. Put the earphones into charging case and keep the lid open.
 2. Long press the function button on the charging case for 3 seconds till the indicator light flash white 3 times and green 1 time, the earphones will turn pairing mode. (If the indicator flash white 7 times means the action is failed)
 3. Turn on the bluetooth, after the list is refreshed click the "Golden Ages" on the list for pairing.

*When first time using the Moondrop Nekocake QBZ-191, please put the earphone in the charging case, close the lid, connect the USB-C charging cable, and charge the earphone.

Connection

Automatically connection
 When the earphone is turned on, it will automatically connect to the last connected device which has bluetooth pairing record if it is in range.

Out of distance disconnection and auto reconnection
 When the device is connected with earphones, if it disconnected by over bluetooth effective range. The earphones will try to connect back to the device within 3 minutes when it is in connection range.
 *If the earphones cannot be automatically connected to the device, it needs to be manually connected in the bluetooth list of the device.

Connection

Disconnect the current connected device
 When is in using:
 Make sure the earphones are in the charging case and keep the charging case lid open. Pressing the function button on the case for 3 seconds. The earphones will be disconnected from the current device and enter the pairing mode.
 When is not in using:
 Press and hold both touch zone on the earphones for 3 seconds at the same time to disconnect current device and enter pairing mode.

Factory Reset
 Delete "Golden Ages" from bluetooth paired list.

Connection

Put the earphones back to charging case and keep the charging case lid open, press the function button on the case for 10 seconds to clear pairing information and reenter into pairing mode. (The orange light will flash once to indicate the action is successful or otherwise the orange light will not indicate)

Tip: Due to the connection characteristics of Bluetooth signals, in places where there is 2.4GHz electromagnetic signals are intensively disturbed, there may be occasional intermittent disconnection or no sound.

Usage

Charging
 Put the earphones in the charging case and it will automatically start charging.
 *When the battery of charging case is more than 10%, the green light will be always on until the earphones are fully charged.
 *When the battery of charging case is lower than 10%, the orange light will be always on unless the earphones is fully charged or the case is out of power.

Charging the cable
 Plug in the charging cable
 The orange light will be flashing when is charging.

Usage

The green light will be flashing for 3 seconds after the case is fully charged then goes out.
Check battery
 To check remaining battery of the charging case, press the function button on the charging case. The light will flash once with dedicated colour.
 Green Light: The battery is more than 10%
 Orange Light: The battery is less than 10%

Low battery alarm for charging case
 Open the lid of the charging case and short press the function button, the orange light will flash 10 times.

Usage

(Now the orange light won't be flashing, the earphones won't be charging and the case will only keep the earphones shutting down)
Turn on
 The earphone is in the charging case, when open the charging case lid, the ear-phones will be on automatically.

Turn off
 Timed shutdown: Automatic shutdown when the device is not connected for more than 3 minutes.
 Low power shutdown: automatic shutdown when the battery voltage is lower than 3.05V.

Usage

Noise cancelling mode switching
 Turn on the earphones and long press one side of earphone for 1 second to switch between noise cancelling mode/normal mode (the beeping sounds will appear within 3 seconds to indicate the action is successful.)

Function

Operation
 Voice Assistant: Click the left/right earphone 3 times to start, and click to exit.
 *Part of Android smartphones require opening the "enable voice assistant"
 Music: Play/pause: Click the left/right earphone
 Previous/Next: Double-click the left earphone for the previous song, and the right earphone for the next song.

*The touch function can be modified by App
 Call Answer: Click the left/right earphone
 Decline: Long press left/right earphone for 1.5s
 Hang up: Click the left/right earphone
 Third-party call: Click the left/right earphone, water damage to the equipment will not be covered.
 Switch the call: Double-click the left/right earphone

Product Specifications

Product Model: Golden Ages
 Bluetooth Version: 5.3
 Codec: SBC/AAC/LC3/LDAC
 Audio Distribution Profile: A2DP/AVRCP/HFP/HSP
 Bluetooth Range: 10 meters (Open Environment)
 Battery Life: 4(Earphone)+12(Case)Hours

△ Please use the proper output charger that fits device input which indicated in the manual(5V-1A)

Security Instructions

Please read this important security instructions before using the equipment. This information contains general safety information applicable to this device and may include warnings not applicable to this device. Please follow the warnings and cautions to avoid injury to yourself or others or damage to your equipment.
Warning
 Failure to comply with safety warnings and regulations without result in serious injury or death.
 Do not use damaged power cord or plug or loose power source.
 Unsafe connections can cause electric leakage or fire.
 Do not use wet hands or other wet body parts to touch.

Security Instructions

Touch the device, power cord, plug or power socket, otherwise it may cause electric shock.
 When unplugging the power cord, do not use too much force, otherwise it may cause electric shock or fire.
 Do not bend or damage the power cord, otherwise it may cause electric leakage or fire.
 Do not operate the device with wet hands while it is charging, otherwise it may cause electric shock.
 Do not directly connect the positive and negative terminals of the charger together, otherwise it may cause a fire or cause serious injury.

Do not use the device outdoors during a thunderstorm, otherwise it may cause electric shock or equipment failure. Use batteries, chargers, accessories and supplies approved by the manufacturer.

Security Instructions

By the manufacturer.
 - Using universal batteries or chargers may shorten the life of the battery or cause the device to malfunction. They may also cause a fire or cause the battery to explode.
 - Only use chargers and data cables specially designed for equipment and approved by MOONDROP. Incompatible chargers and data cables may cause danger or damage the device.
 - When customers use accessories or supplies not approved by MOONDROP, MOONDROP is not responsible for the customers' safety.
 Do not put the device in the back pocket or hang it on the waist
 - Excessive force may damage the device, might cause explode or skin irritation.

Security Instructions

or fire.
 - If you hit or fall, you may be injured.
Do not drop the device or subject it to strong impact
 - Otherwise, it may damage the device or battery, cause the device to fail to work normally, or shorten the device life.
 - It may also cause overheating, burning or other dangers.
Handle and dispose of equipment and chargers carefully.
 - Do not throw batteries or devices into fire.
Do not place batteries or devices in or on heating devices (such as microwave ovens, ovens, or radiators). The device may explode if overheated.
When disposing of used battery or device, please comply with local regulations.

Security Instructions

- Do not squeeze or pierce the device.
 - Do not subject the device to external high voltage, otherwise it may cause internal short circuit and overheating.
Protect equipment, batteries and chargers from damage.
 - Avoid exposing the device and battery to extremely cold or extremely hot temperatures.
 - Extreme temperature can damage the device, reduce the charging capacity of the device, and shorten the service life of the device and the battery.
 - Do not use the data cable with the skin peeled off or damaged, and do not use the charger with damaged or not working properly.
Do not store device near or in water heaters, microwave ovens, hot cooking equipment, or high-pressure containers

Security Instructions

- The battery may leak.
 - The equipment may overheat and cause a fire.
Do not use or store the device in areas where dust or aeolian materials are concentrated
Dust or foreign objects may cause device damaged, fire or electric shock.
 Prevent the charger socket and the smaller end of the charger from contacting conductive materials such as liquid, dust, metal powder, or pencil lead.
Do not touch with sharp tools. Charger socket; do not bump the charger socket
 Conductive materials may short-circuit or corrode the contacts, which may cause explosion or fire.

Security Instructions

When using a wireless charger, do not place metal objects, magnets, and magnetic stripe cards between the device and the wireless charger.
 The device may not charge properly or may overheat.
Do not bite or suck the device or battery
 - Otherwise, it may damage the equipment or cause an explosion or fire.
 - Children or animals can suffocate by swallowing small parts.
 - When children use this device, please make sure they use it correctly.
Do not poke the device or its accessories into your eyes, ears or mouth, otherwise it may cause suffocation or serious injury.

Security Instructions

Do not use, damage or leaking batteries. For safe disposal of batteries, please contact the nearest authorized service center.
 The device and some accessories (sold separately) contain magnets. The American Heart Association and the British Medicines and Health Products Administration also warned that magnets will affect implantable pacemakers, heart rhythm converters, defibrillators, insulin pumps or other electronic medical devices (collectively referred to as "medical devices") within 15 cm of operating. If you are a user of any of these medical devices, please do not use this device and some accessories (sold separately) before consulting a doctor.

Security Instructions

Failure to comply with safety precautions and regulations can lead to personal injury or property damage
Do not use the device near other electronic devices.
 Most electronic devices use radio frequency signals. Your device may interfere with other electronic devices.
 Equipment with speakers is particularly susceptible to interference.
Do not use your device in places that may be interfered by radio frequency such as hospitals, airports or cars.
 If possible, use the device beyond 37cm of the pacemaker to avoid interference with the pacemaker.
 - In order to minimize the interference of the device to the pacemaker, please use the device on the side of opposite to the pacemaker.

Security Instructions

- If you use medical equipment, please contact the medical equipment manufacturer before using this device to determine whether it will be affected by the radio frequency emitted by this device.
 - During air flight, the use of electronic equipment will interfere with the airplane's electrical equipment. Follow the airline's regulations and the instructions of the "aircraft crew. If the equipment is allowed, please always use the flight mode.
 - The electronic equipment of the car may malfunction due to radio interference from the equipment. For details, please contact the manufacturer.
Do not place the device in a place with dense smoke or fog
 Otherwise, the surface of the device may be damaged or the device may malfunction.
 If you use hearing aids and cochlear implants, please contact the manufacturer.

Security Instructions

the manufacturer for information about radio interference.
 The radio frequencies emitted by this device may interfere with certain hearing aids and cochlear implants. Before using this equipment, please contact the manufacturer to determine whether the equipment will be affected by the radio frequencies emitted by this equipment.
Do not use the device near radio frequency devices or instruments (such as audio systems or radio antenna towers) Radio frequency may cause device malfunction.
 - Always operate in a potentially explosive environment and signs in an explosive environment.
 - Do not use the equipment in gas stations or near flammable materials, chemical agents and explosive areas.

Security Instructions

- Do not store or carry flammable liquids, gases or explosive materials in boxes containing device or accessories.
If any part of the device is damaged, smokes, or smells of burning things, please stop using the device immediately.
 The equipment can not be reused until being repaired by the MOONDROP Service Center.
 - Broken glass may hurt your hands and face.
 - If the device emits smoke or the smell of burning things, it may cause the battery to explode or burn.
Please observe all safety warnings and regulations regarding the use of equipment while driving.
Driving safely is your primary responsibility while driving. If prohibited by law, please do not use the device while driving. For the safety of you and others, please follow the safety

Security Instructions

warnings and relevant regulations and remember the following tips:
 - Place the equipment in an easy-to-access location. No need to look away from the road to get the wireless device.
 - In order to avoid danger, use the call in traffic jams or bad weather conditions (rain, sleet, snow, ice). Rain and sleet, snow, ice and heavy traffic can cause danger.
 - Do not record voice memos. Recording a language memo while driving prevents you from focusing on the primary responsibility of driving safely.
 - According to the traffic situation, decide whether to answer the call reasonably. Answer calls when not moving forward or in traffic jams. Try to call after parking.
 - Do not engage in nervous or excited conversations to avoid distraction. Please let the caller know that you are driving. Properly maintain and use equipment

Security Instructions

Keep the equipment dry
 - Moisture and liquid can damage equipment or circuits.
 - Do not turn on the device when it is wet. If the device is turned on, turn it off (if the device cannot be turned off, please maintain the status quo). Then dry the equipment with a towel and contact the local MOONDROP service center.
 - This equipment is equipped with a built-in liquid indicator. Water damage to the equipment will invalidate the manufacturer's warranty.
The device should be stored on a flat ground. If the device falls, it will be damaged.
 The device can be used where the atmosphere temperature is between 0°C and 35°C.

Security Instructions

between 0°C and 35°C. You can use the device where the ambient temperature is between -20°C and 50°C. Using or storing the device outside the recommended temperature range may cause damage to the device or shorten battery life.
 - Do not store the device in extremely hot areas, such as in a car within 15 cm of operating. If you are a user of any of these devices, please do not use this device and some accessories (sold separately) before consulting a doctor.
 - Do not expose the device to direct sunlight for a long time, such as on the dashboard of a car. Do not store the device with metal objects such as coins, keys and necklaces.
 - The device may be scratched or malfunction.
 - If the battery contacts come in contact with metal objects, it may cause a fire.
Do not store the device near magnetic fields

Security Instructions

- When exposed to a magnetic field, the device may malfunction or the battery may discharge.
 - Magnetic stripe cards (including credit cards, phone cards, bank books and boarding cards) may be damaged by magnetic fields. Avoid contact with the device when it is overheated. Otherwise it may cause low temperature burns, redness and skin irritation.
 - After using the device for a long time, pay attention to the heating of the device and avoid contact with the skin for too long.
 - Do not sit on the device, or keep in direct contact with your skin for a long time while the device is charging or connected to the power source.
 - High temperature resistance varies from person to person.

Security Instructions

Please pay special attention when using it by children, the elderly, protect hearing and ears when using earplugs.
 - Excessive exposure to strong sounds can cause hearing loss.
 - Contact with strong sounds while walking may distract you and cause accidents.
 - Always turn down the volume before using earplugs, and use only the lowest volume required to listen to conversations or music.
 - If there are foreign objects on the earplugs, and you wear the earplugs for a long time, it may cause ear infections. Please keep the earplugs dry and clean.
 - In a dry environment, static electricity may accumulate in the earplugs. Avoid using this earplug in a dry environment, or touch metal objects to discharge static electricity before using

Security Instructions

the earplug.
 - Do not use headphones while driving or riding a horse.
 - Otherwise, it may distract you and cause accidents. Depending on your area, this may also be illegal.
Precautions for using the device during walking or moving.
 Always pay attention to your surroundings to avoid harming yourself or others.
Do not paint or paste paper on the equipment
 If you are allergic to the paint or metal parts of the device, it may cause itching, eczema or swelling of the skin. When the above situation occurs, please stop using the device and consult a doctor.
Install the device cautiously

Security Instructions

Do not place equipment and accessories in or near the airbag deployment area. If the equipment is improperly placed, the airbag inflates rapidly, which can cause serious injury.
Do not drop the device or cause collision
 - The device may be damaged or malfunction.
 - If the device is bent or deformed, it may damage the equipment or cause parts malfunction.
 Ensure the longest service life of the battery and charger
 - If the battery is not used for a long time, the battery may malfunction.
 - The equipment will discharge if left unused for a long time, and must be recharged before use.
 - When the equipment is not in use, disconnect the power supply.

Security Instructions

Security Instructions
 - The battery can only be used for the designated purpose.
 - Follow all the instructions in this manual to ensure the longest service life of the device and battery. The manufacturer will not provide warranty for damage or poor performance caused by failure to follow the warnings and instructions.
 - The equipment may wear out over time. Although some parts and accessories are guaranteed for a certain period, damage or deformation caused by the use of unapproved accessories is not covered by the warranty.
Do not disassemble, modify or repair the equipment
 Any changes or modifications to the equipment will cause the manufacturer to not guarantee the equipment. For repairing, please contact your local MOONDROP authorized dealer.
 - Do not disassemble or pierce the equipment, as this may

Security Instructions

cause an explosion or fire.
 - Do not disassemble or reuse the battery.
When cleaning the equipment, please follow the following advices
 - Use a soft and dry cloth to wipe the device, use a brush or other tools to remove the earwax or dirt on the earpiece.
 - Clean the battery contacts with a dry cloth.
 - Do not use chemicals or cleaning agents. Otherwise, the surface of the equipment may be discolored or corroded, and it may also cause electric shock or fire.
 Prevent the equipment from contact with dust, sweat, ink, oil, and chemical products (such as cosmetics, antibacterial sprays, hand sanitizers, detergents and pesticides). Otherwise, there may be damage to the equipment. Internal and external parts of the device may be damaged, or

Security Instructions

the performance may deteriorate. If the device comes into contact with any of the above-mentioned substances, please wipe it with a soft, lint-free cloth.
Do not use the device for any purpose other than the designated purpose
 The device may malfunction.
 Avoid disturbing others when using the device in public places
Only qualified personnel are allowed to repair the device
 If the equipment is repaired by unqualified personnel, the equipment may be damaged and the warranty will not be provided.
Do not distribute copyrighted content
 Do not distribute copyrighted material without the permission of the content owner.

Security Instructions

of the content owner. This behavior violated copyright law. The manufacturer is not responsible for any legal problems caused by any illegal actions by users against copyrighted content.
Disclaimer
 All content and services available through this device belong to third parties and are protected by copyright, patents, trademarks and other intellectual property laws. Such content and services are also for personal non-commercial use. Without the permission of the content owner or service provider, you may not be able to use any content or service. In addition to the above restrictions, unless you have the explicit permission of the application content or service provider, you may not be able to modify, copy, republish, upload, post, transmit, translate, or repost any content or service displayed through this device, sell, create new derivative works, develop or distribute in any way.
 All rights are reserved. For more information, please refer to the purpose, MOONDROP Company does not provide any express or implied guarantees for the content or services provided. MOONDROP Co. expressly declares that it does not assume any legal liability for the content or services provided, its timeliness, legality or completeness.
Third-party services may be stopped or interrupted at any time, and MOONDROP is not responsible for the services for any content or the time period during which the service is available. The content and services are transmitted by third parties through networks and transmission equipment outside the control of MOONDROP. In addition to the generality of the exemption clause, MOONDROP also expressly stated that it does not assume any responsibility or obligation for any interruption or delay of any content or

Security Instructions

service applicable to this device.
 MOONDROP Co has neither responsibility nor obligation for customer service involving content and services. Any service requirements related to content or services should be directly borne by the content and service providers.

Security Instructions

Content of hazardous substances in products

Name	Hazardous substances and elements					
	Lead (Pb)	Mercury (Hg)	Cadmium (Cd)	Hexavalent Chromium (Cr(VI))	Polybrominated Diphenyl Ethers (PBDE)	Poly Aromatic Hydrocarbons (PAHs)
Limit components	X	O	O	O	O	O
Internal parts	O	O	O	O	O	O
Accessories	O	O	O	O	O	O
Speaker	O	O	O	O	O	O
Battery	X	O	O	O	O	O
Case	O	O	O	O	O	O

O: Indicates that the amount of the hazardous substance in all homogeneous materials of the product is within the limit specified in GB/T 26573-2011. X: Indicates that the amount of the hazardous substance in at least one of the homogeneous materials of the product exceeds the limit specified in GB/T 26573-2011, and there is currently no mature alternative in the industry. Please handle such parts or substances properly to avoid impact on the environment and human.

FCC Warning

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
 - Reorient or relocate the receiving antenna.
 - Increase the separation between the equipment and receiver.
 - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
 - Consult the dealer or an experienced radio/TV technician for help.
Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.
This device complies with part 15 of the FCC Rules.

FCC Warning

Operation is subject to the following two conditions:
(1) This device may not cause harmful interference, and
(2) this device must accept any interference received, including interference that may cause undesired operation.
 This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment.
This equipment should be installed and operated with minimum distance 0cm between the radiator and your body.

FCC Warning

service applicable to this device.
 MOONDROP Co has neither responsibility nor obligation for customer service involving content and services. Any service requirements related to content or services should be directly borne by the content and service providers.

FCC Warning

Security Instructions
 - The battery can only be used for the designated purpose.
 - Follow all the instructions in this manual to ensure the longest service life of the device and battery. The manufacturer will not provide warranty for damage or poor performance caused by failure to follow the warnings and instructions.
 - The equipment may wear out over time. Although some parts and accessories are guaranteed for a certain period, damage or deformation caused by the use of unapproved accessories is not covered by the warranty.
Do not disassemble, modify or repair the equipment
 Any changes or modifications to the equipment will cause the manufacturer to not guarantee the equipment. For repairing, please contact your local MOONDROP authorized dealer.
 - Do not disassemble or pierce the equipment, as this may

FCC Warning

cause an explosion or fire.
 - Do not disassemble or reuse the battery.
When cleaning the equipment, please follow the following advices
 - Use a soft and dry cloth to wipe the device, use a brush or other tools to remove the earwax or dirt on the earpiece.
 - Clean the battery contacts with a dry cloth.
 - Do not use chemicals or cleaning agents. Otherwise, the surface of the equipment may be discolored or corroded, and it may also cause electric shock or fire.
 Prevent the equipment from contact with dust, sweat, ink, oil, and chemical products (such as cosmetics, antibacterial sprays, hand sanitizers, detergents and pesticides). Otherwise, there may be damage to the equipment. Internal and external parts of the device may be damaged, or

FCC Warning

the performance may deteriorate. If the device comes into contact with any of the above-mentioned substances, please wipe it with a soft, lint-free cloth.
Do not use the device for any purpose other than the designated purpose
 The device may malfunction.
 Avoid disturbing others when using the device in public places
Only qualified personnel are allowed to repair the device
 If the equipment is repaired by unqualified personnel, the equipment may be damaged and the warranty will not be provided.
Do not distribute copyrighted content
 Do not distribute copyrighted material without the permission of the content owner.

FCC Warning

of the content owner. This behavior violated copyright law. The manufacturer is not responsible for any legal problems caused by any illegal actions by users against copyrighted content.
Disclaimer
 All content and services available through this device belong to third parties and are protected by copyright, patents, trademarks and other intellectual property laws. Such content and services are also for personal non-commercial use. Without the permission of the content owner or service provider, you may not be able to use any content or service. In addition to the above restrictions, unless you have the explicit permission of the application content or service provider, you may not be able to modify, copy, republish, upload, post, transmit, translate, or repost any content or service displayed through this device, sell, create new derivative works, develop or distribute in any way.
 All rights are reserved. For more information, please refer to the purpose, MOONDROP Company does not provide any express or implied guarantees for the content or services provided. MOONDROP Co. expressly declares that it does not assume any legal liability for the content or services provided, its timeliness, legality or completeness.
Third-party services may be stopped or interrupted at any time, and MOONDROP is not responsible for the services for any content or the time period during which the service is available. The content and services are transmitted by third parties through networks and transmission equipment outside the control of MOONDROP. In addition to the generality of the exemption clause, MOONDROP also expressly stated that it does not assume any responsibility or obligation for any interruption or delay of any content or

FCC Warning

service applicable to this device.
 MOONDROP Co has neither responsibility nor obligation for customer service involving content and services. Any service requirements related to content or services should be directly borne by the content and service providers.

FCC Warning

Security Instructions
 - The battery can only be used for the designated purpose.
 - Follow all the instructions in this manual to ensure the longest service life of the device and battery. The manufacturer will not provide warranty for damage or poor performance caused by failure to follow the warnings and instructions.
 - The equipment may wear out over time. Although some parts and accessories are guaranteed for a certain period, damage or deformation caused by the use of unapproved accessories is not covered by the warranty.
Do not disassemble, modify or repair the equipment
 Any changes or modifications to the equipment will cause the manufacturer to not guarantee the equipment. For repairing, please contact your local MOONDROP authorized dealer.
 - Do not disassemble or pierce the equipment, as this may

FCC Warning

cause an explosion or fire.
 - Do not disassemble or reuse the battery.
When cleaning the equipment, please follow the following advices
 - Use a soft and dry cloth to wipe the device, use a brush or other tools to remove the earwax or dirt on the earpiece.
 - Clean the battery contacts with a dry cloth.
 - Do not use chemicals or cleaning agents. Otherwise, the surface of the equipment may be discolored or corroded, and it may also cause electric shock or fire.
 Prevent the equipment from contact with dust, sweat, ink, oil, and chemical products (such as cosmetics, antibacterial sprays, hand sanitizers, detergents and pesticides). Otherwise, there may be damage to the equipment. Internal and external parts of the device may be damaged, or

FCC Warning

the performance may deteriorate. If the device comes into contact with any of the above-mentioned substances, please wipe it with a soft, lint-free cloth.
Do not use the device for any purpose other than the designated purpose
 The device may malfunction.
 Avoid disturbing others when using the device in public places
Only qualified personnel are allowed to repair the device
 If the equipment is repaired by unqualified personnel, the equipment may be damaged and the warranty will not be provided.
Do not distribute copyrighted content
 Do not distribute copyrighted material without the permission of the content owner.

FCC Warning

of the content owner. This behavior violated copyright law. The manufacturer is not responsible for any legal problems caused by any illegal actions by users against copyrighted content.
Disclaimer
 All content and services available through this device belong to third parties and are protected by copyright, patents, trademarks and other intellectual property laws. Such content and services are also for personal non-commercial use. Without the permission of the content owner or service provider, you may not be able to use any content or service. In addition to the above restrictions, unless you have the explicit permission of the application content or service provider, you may not be able to modify, copy, republish, upload, post, transmit, translate, or repost any content or service displayed through this device, sell, create new derivative works, develop or distribute in any way.
 All rights are reserved. For more information, please refer to the purpose, MOONDROP Company does not provide any express or implied guarantees for the content or services provided. MOONDROP Co. expressly declares that it does not assume any legal liability for the content or services provided, its timeliness, legality or completeness.
Third-party services may be stopped or interrupted at any time, and MOONDROP is not responsible for the