


Smart Door Lock

User Manual

T30


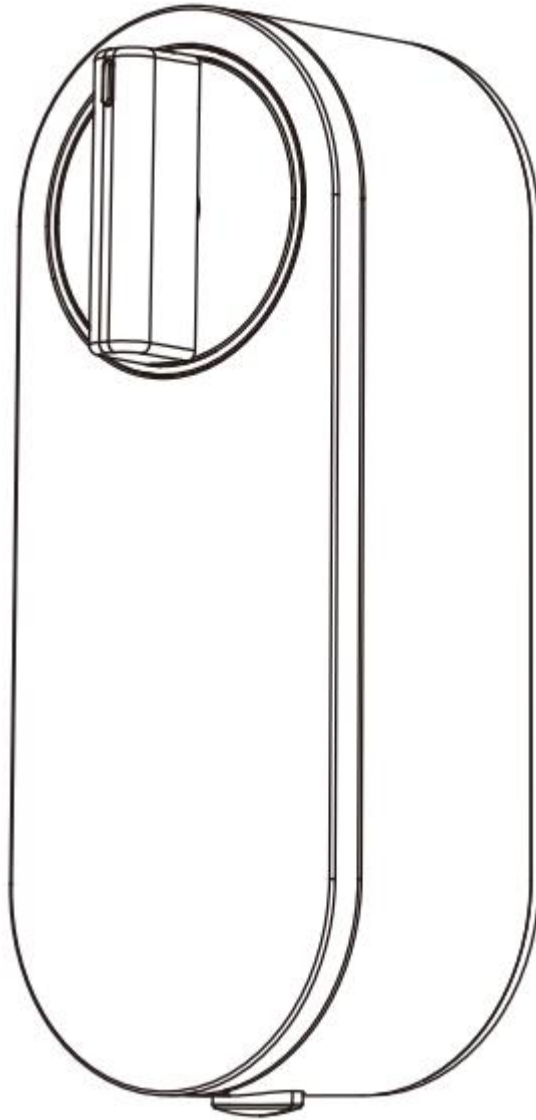


Special Attention:

- 1. Mechanical keys please keep outdoor, just in case keys lock in doors.*
- 2. Please replace for the battery when low wattage alarm.*
- 3. Reading this manual carefully before installation, and keep it for future reference.*

1. Introduction

1.1.Lock structure

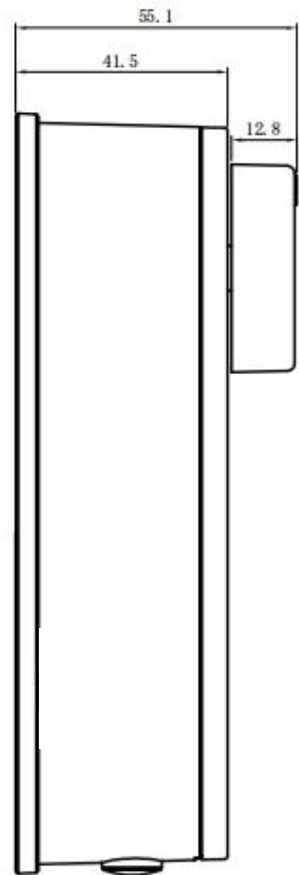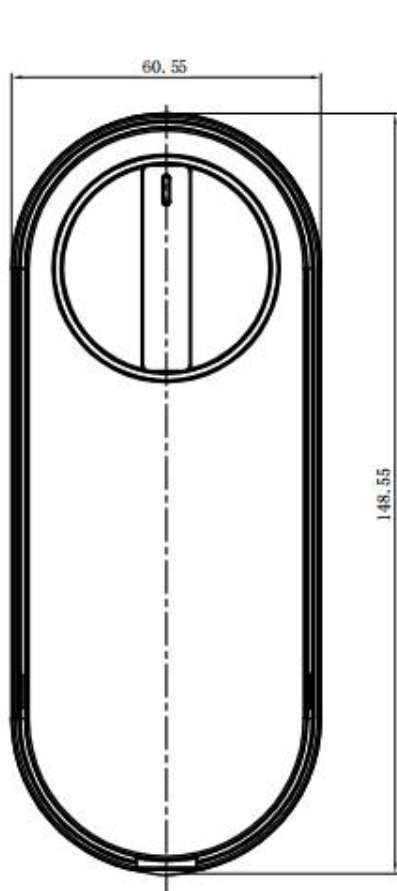

1.2.Packing List

💡 Check the following drawing to check whether the package contains all the parts


NO	Name	Qty	NO	Name	Qty
1	Front Pane	1	6	Mortise Screws:KA4*25mm (For Wooden Door)	4
2	Back Panel	1	7	Mortise Screws:M5*10mm (For Aluminum Door)	4
3	Waterproof Rubber Plate	2	8	M4*40 Screw	2
4	User Manual	1	9	M4*60 Screw	2
5	Screw Stubs:M5*M4*40	2	10	KA4*20	1

1.3.Specifications

Suitable for Models	T30	Doors Applicable	Aluminum door Wooden door
Materials	Aluminum alloy	Working Voltage	2X18650 lithium battery
Lock Weight	1.5KG	Door Thickness to Fit	35-55mm
Unlocking Way	Bluetooth Mechanical key	Working Temperature	-10°C-55°C
Color	Silver Black	Working Humidity	0-95%
Low Wattage Alarm	Less than 7.2V		

1.4.Initialization








Long press the reset button on the back of the front panel for about 3s,When the indicator light changes from dark blue to light blue, initialization is successful.

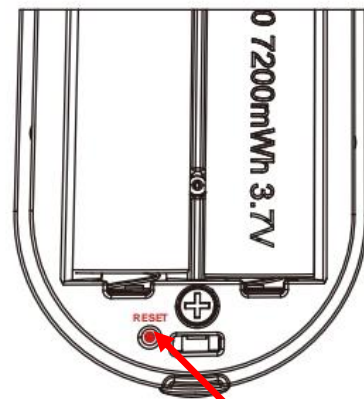

Reset Button

- Introduction
- Installation
- Operation
- F&Q
- Appendix

2. Installation Diagram
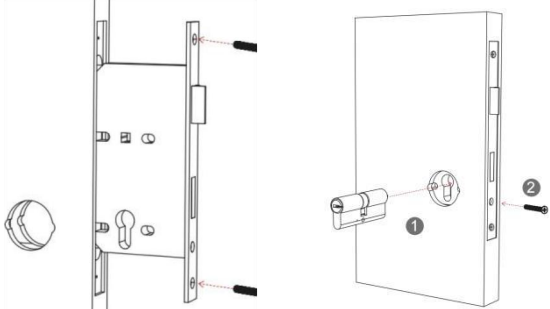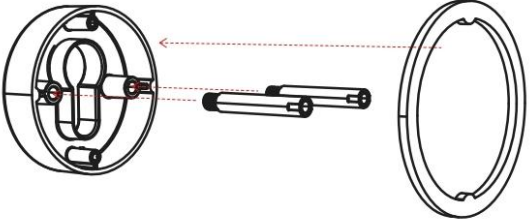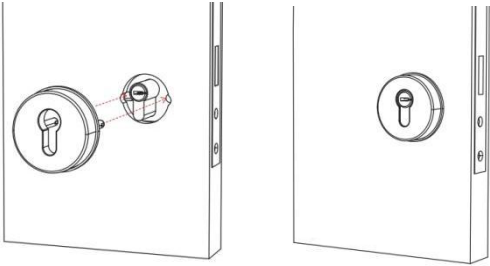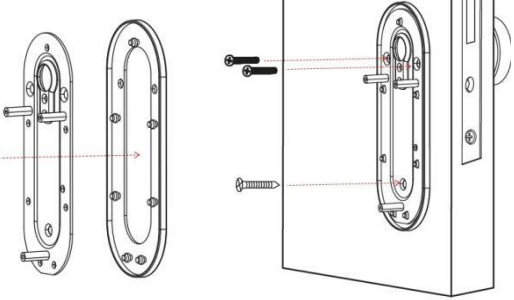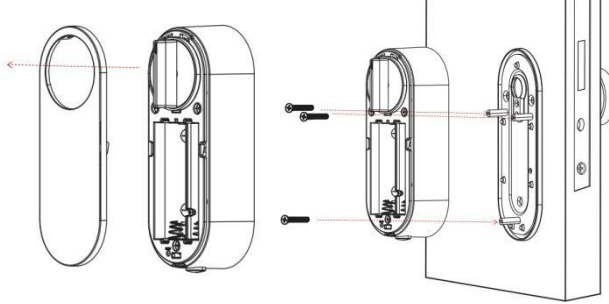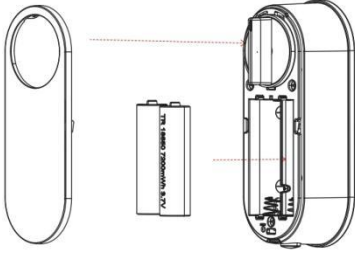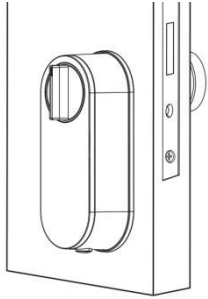
<p>Step1 Install Mortise and Cylinder</p>	<p>Step2 Install Screws Casing and Water Rubber Plate</p>
	
<p>Step3 Install Front Panel</p>	<p>Step4 Fixed Front Water Rubber Plate</p>
	
<p>Step5 Fixed Back Panels</p>	<p>Step6 Install Batteries</p>
	
<p>Step7 Installation completed</p>	
	

3. Operation



3.1. Registration



The software (iOS version) can be downloaded from the app store, and the Android version can be downloaded from the application store of Google play, Yingyongbao, Baidu, Ali, 360, Huawei, and Xiaomi.

3.2. Connect lock to the phone


- 1) please scan the QR code to download the app
- 2) You can also search for TTLock in the APP store(Google Play)to download
- 4) Register a new account (phone number or email) or login with an existing account.
- 5) press the reset button to light, click "+ Add Lock"
- 6) The lock nearby will appear on the phone screen, Click "+"
- 7) Re-name the lock
- 8) The lock added successfully

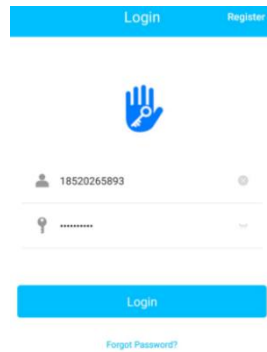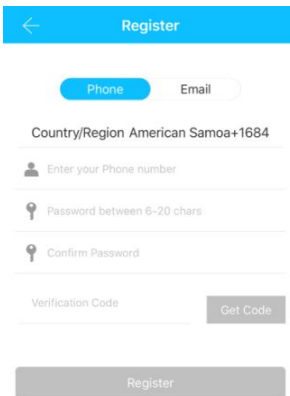

TTlock users can register the account by mobile phone and Email which currently support 200 countries and regions on the world. The verification code will be sent to user's mobile phone or email, and the registration will be successful after the verification.

3.3. Add locks

TTLock supports multiple types of lock devices. The lock needs to be added by the app after entering the add mode. Generally, a lock that has not been added, as long as press the reset button, it will enter the add mode.

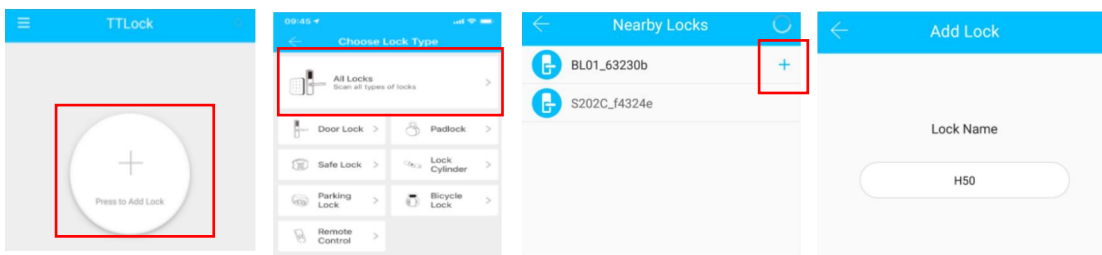


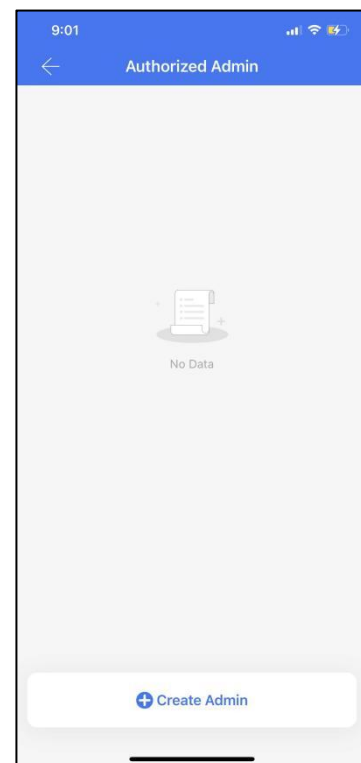
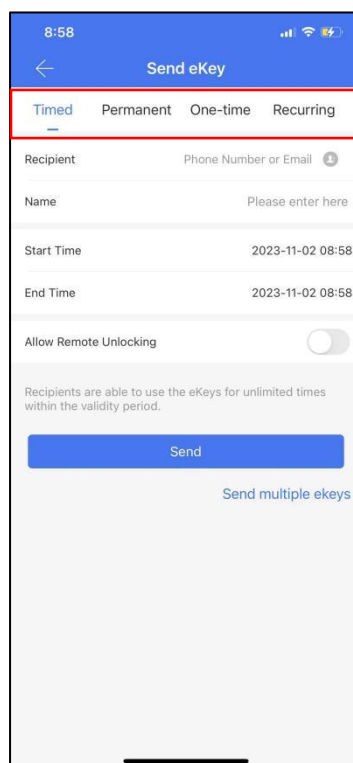
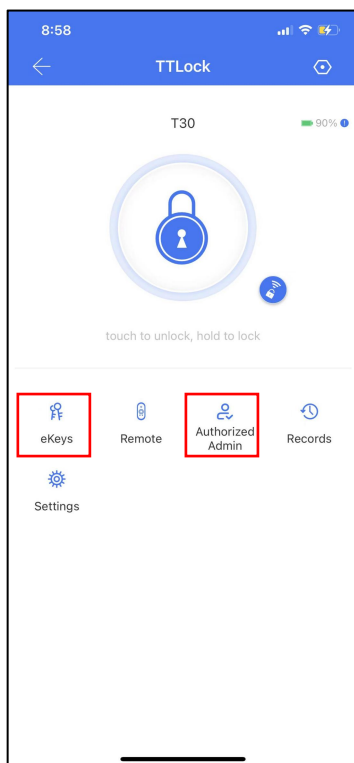
3.4. User Management

3.4.1. Bluetooth management

Make sure there is no problem with Bluetooth communication. After connecting the phone to the door lock as above, Click "  "to unlock.(the phone is within 5meters from the door lock)



3.4.2. Send e-Key

Click on the "  " as shown in figure, you can send the eKey to other users of TTlock to authorize the unlock(the receiver must be download the APP and set up an account)→ Select e-key format (Timed, permanent, One-time, Recurring) → Enter recipient's account of TTlock,set the name and effective time of the eKey, Can choose to allow remote unlocking or disallowing, authorized administrator or not authorized, as shown in figure →Send→The recipient's account has Bluetooth unlock permission





3.4.3.Add Remote

Supports opening doors through remote. Before remote is used to open the door, it needs to be added first. The adding process needs to be performed by the app beside the lock. The validity period of the remote can be set, it can be permanent, or it can be limited in time.

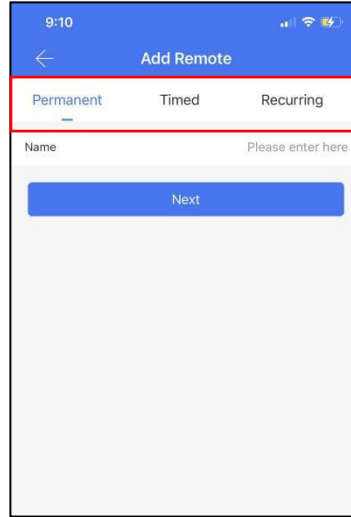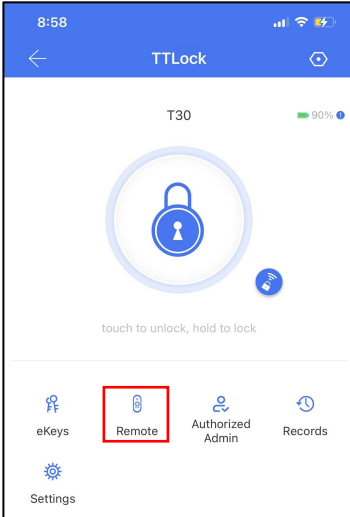

3.4.5.Unlock records

Click "Records" you can query your unlock record as shown in figure, The maximum number of door opening records is 500, which can be saved for six months.

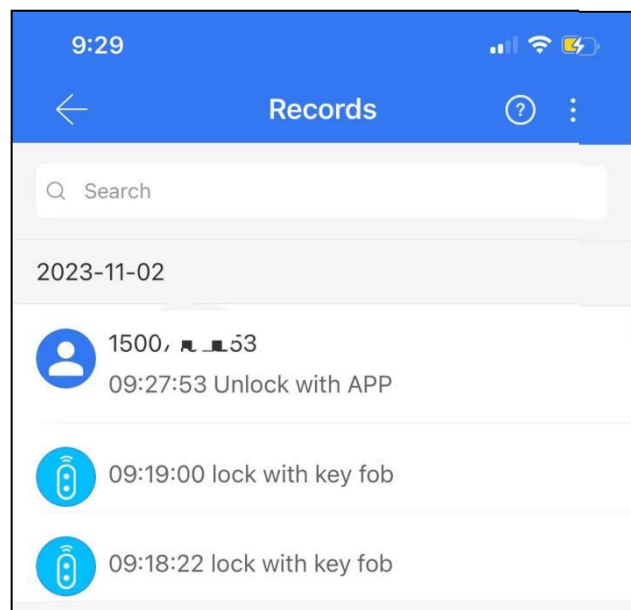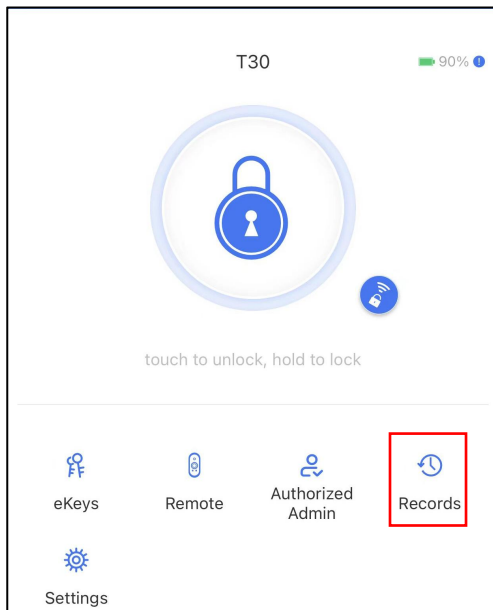

3.5. Gateway management(Optional)

The TT lock is directly connected via Bluetooth, that is why it is not attacked by the network. The gateway is a bridge between smart locks and home WIFI networks. Through the gateway, the user can remotely view and calibrate the lock clock, read the unlock record. Meanwhile, it can remotely delete and modify the password.

3.5.1. Add Gateway

Light Status




When the gateway is powered on:


- Light flashes alternately in red and blue: Stand-by mode, ready for pairing
- Blue light: Working mode
- Red light: Network failure

Pair the Gateway with APP


1 Activate the APP

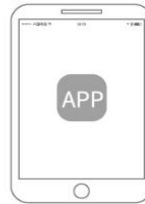


2 Press "☰"

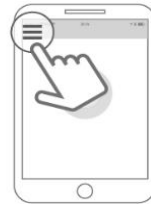


3 Select [Gateway]

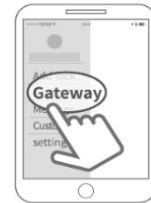

4 Select [G2]

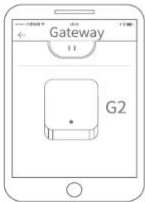

 5 Plug in the gateway and power it on, while the light flashes alternately in red and blue



6 Press "+" sign



7 Add Gateway



8 Select the network and fill in the password



9 Add complete

⚠ Notice: If times out, please power off and try it again.

3.5.2. Manual

After a short period of time, you can see which locks are in their coverage in the app. Once the lock is bound to the gateway, the lock can be managed through the gateway

4.FAQ

1) <i>How to read operation records?</i>	<i>In the Records of the main interface.</i>
2) <i>Why can't I unlock it after open the passage mode</i>	<i>You need to perform an unlock verification in any method, than the passage mode will take effect.</i>
3) <i>What is the purpose of Auto Lock</i>	<i>You can set how long to lock after unlocking</i>
4) <i>What is the reason why the app cannot be locked when you have completed the installation</i>	<i>You should check if the setting of the door opening direction is correct</i>
5) <i>What is the reason why the smart lock consumes fast power?</i>	<i>a) Large standby power consumption b) Short circuit</i>

Guarantee

Customer Name: _____

Customer Calls : _____

Purchase Date : _____

Product Name : _____

Product Model : _____

Note:

- 1) Please keep this card so that you can use it when you need warranty service.*
- 2) We provide you with a one-year warranty from the date of purchase.*
- 3) This warranty service is valid for customers in any country in the world.*

FCC WARNING

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

To maintain compliance with FCC's RF Exposure guidelines, This equipment should be installed and operated with minimum 20cm distance between the radiator and your body: Use only the supplied antenna.