

Front

6.8 in



10.27 in

Back

6.8 in

Tabletop Cornhole + Wireless Speaker

USER MANUAL FOR USE WITH Bluetooth ENABLED DEVICES

YOUR PRODUCT

Thank you for purchasing the "cornhole" wireless bluetooth speaker. This product can provide a high quality listening experience for all Bluetooth enabled smart phones, tablets, computers, and multimedia players. Before using this product, carefully read this manual for optimum user experience. Please ask your local dealer or call us if you have any questions.

PACKAGE CONTENTS

- Bluetooth Speaker x1
- Charging Cable x1
- User Manual x1
- Bean Bags x4

PAIRING YOUR PRODUCT

- Place the cornhole game within 30 ft of your bluetooth enabled device.
- Hold the power button (C) to turn on the speaker. The LED light (A) will flash blue to indicate it is ready to pair.
- Use your wireless enabled device to search for and select "SR-CHS2".
- The LED (A) will turn solid blue and the device will "beep" when pairing is complete. Note: If a pin is required, enter "0000".

SYNC TWO BOARDS TOGETHER

- Press and hold the power button (C) on both speakers.
- Double tap the power button (C) on one speaker. This will be the primary unit streaming from your device. They will automatically connect and "beep" to indicate they are paired together.
- From your devices bluetooth list select "SR-CHS2." One speaker will "beep" again to indicate successful pairing. Note - If audio does not come from both speakers hold down the power button (C) to turn off and repeat steps 1-3.

PRODUCT KEY

- A. LED indicator light
- B. Micro USB charging input
- C. Power button
- D. Speaker

SPECIFICATIONS

BATTERY: 300 mAh
SPEAKER: 4Ω/3W
PLAYING / CALLING TIME: (70% volume) 2-3 hours
CHARGING TIME: 1-2 hours

NOTICE

- Keep the product dry. Do not store or use in damp places. If wet, let dry completely before attempting to use.
- Keep out of direct sunlight or high temperatures. As this may result in damage or dysfunction.
- Keep out of cold temperatures. As this may result in internal damage.
- Do not disassemble the product. Avoid dropping the speaker.
- Do not charge the speaker for over 10 hours.

OFFICIAL CORNHOLE RULES

Every match is broken down into innings of play. During an inning of play, each player must pitch all four of his/her bags. An inning is never completed until all players pitch all four of his/her bags.

Two players compete against one another until a single winner is determined. Players alternate pitching bags until each player has pitched all four of his/her bags. Players then retrieve bags and take score. The top of an inning is completed when the first player pitches all four bags; the bottom of the inning is completed when the remaining player pitches all four bags. For doubles matches alternate players until a winner is determined.

The first player/team to reach (or exceed) 21 points at the conclusion of an inning is the winner.

Bags on board : Any bag which comes to rest anywhere on top of the board is worth one point.

Bags in the hole : Any bag which is thrown through the hole or knocked through the hole by another bag is worth three points.

©2021 Prime Brands Group. All rights reserved. All trade names are registered trademarks of the respective manufactures listed. Made in China.

Prime Brands Group • Brooklyn, NY 11232 • www.primebrandsgroup.com

10.27 in

Insert

Black and White, double sided printing.
Placed behind product, marble texture facing front.

FCC Warning

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.