

Note:

(1) With the Receiver and the Remote Transmitter on and successfully paired up, the Receiver Battery icon will be displayed when pressing any of the Function Buttons.

(2) If the Receiver is turned off, the Receiver Battery will keep displaying its level before shutdown on the Remote Transmitter.

How the System Works

The Remote Training Collar is easy to use with an advanced digital display that tells you the exact stimulation level you are using.

The Remote Training Collar assists you in controlling your dog without a leash. At the push of a button, your Remote Transmitter sends a signal activating your dog's Receiver. He receives a safe but annoying stimulation.

He'll quickly learn the association between his behavior and your correction, and soon you'll have a better-behaved dog.

 
 
The Remote Training Collar has been proven safe, comfortable, and effective for both small and large dog breeds.

If using the Remote Training Collar consistently and correctly, any basic obedience commands can be taught and will help correct any misbehavior that your dog exhibits.



V. Setting Up

1. Charge the Product

Remote Transmitter: charge the device until the rapidly flashing green indicator light becomes constantly on, which will take around 3 hours.

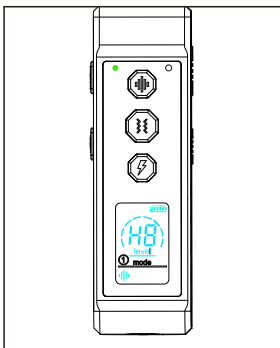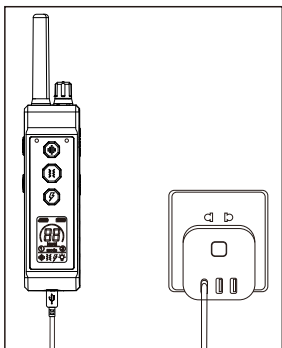

  Receiver: charge the device until the rapidly flashing green LED Indicator light becomes constantly on, which will take around 3 hours.

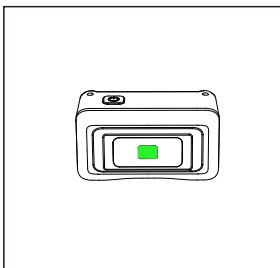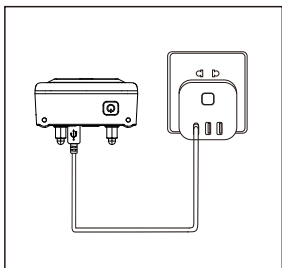

Note:

(1)The charger, power bank and other charging devices shown in the above picture are not included in the box.

(2)Use the charging cable in the package when charging. Other charging cables may not be suitable for this Dog Training Collar, which may cause electric damage.

 
 
(3)The Dog Training Collar ONLY supports a 5V-rated power source. If charged with an improper charger:

Receiver Collar—deliver a rapid warning tone and stop charging automatically.



Remote Transmitter—stop charging automatically with the Indicator rapidly blinking in red.

2.Turn On/Off the Product



Turn on/off the Remote Transmitter by pressing and holding the On/Off (Channel) Button for 2/3 seconds.

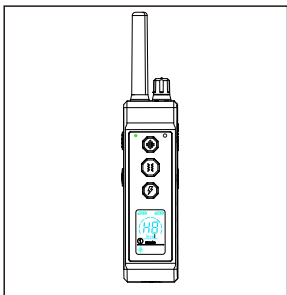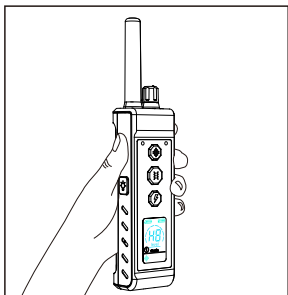

  
Turn on the Receiver by pressing and holding the Power Button for 3 seconds with a vibration to indicate that the Receiver turns on, as the green LED Indicator light blinks regularly.

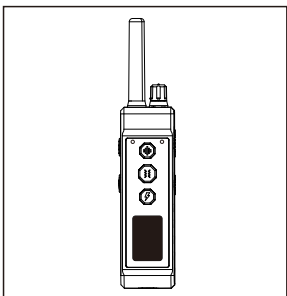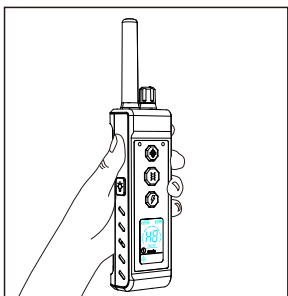

   Turn on the Receiver Collar by pressing and holding the Power Button for 3 seconds with vibration, as the green LED Indicator light blinks regularly.

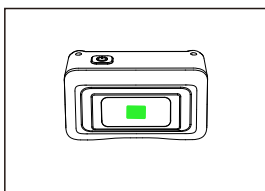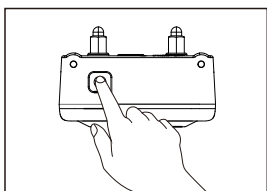


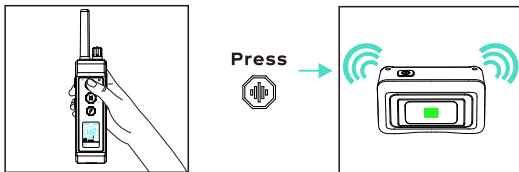 
Turn off the Receiver by pressing and holding the Power Button for 3 seconds with a long beeping to indicate that the Receiver has turned off as the green LED indicator light stops blinking.

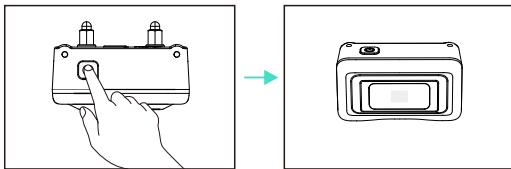


VI. Training Modes

 
1. Warning Tone Mode

Press the Warning Tone Button and the Receiver Collar will deliver a warning tone. It will cut off automatically if you press and hold the Warning Tone Button for 10 seconds. There is a total of 8 levels of Warning Tone for training. To adjust the warning tone level, press the Adjustment Knob to select the Warning Tone Mode first, then turn the Adjustment Knob left and right to raise/lower to the desired level, and finally press  button to confirm the modification.




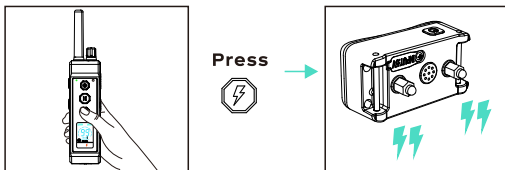 
2. Vibration Mode


Press the Vibration Button and the Receiver will deliver a vibration. It will cut off automatically if you press and hold the Vibration Button for 10 seconds. There is a total of 16 levels of Vibration. To adjust the vibration level, press the Adjustment Knob to select the Vibration Mode first, then turn the Adjustment Knob left and right to raise/lower to the desired level, and finally press  button to confirm the modification.

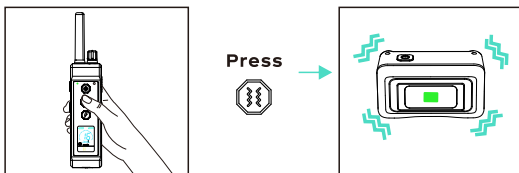

3. Shock Mode

 Press the Shock Button and the Receiver will deliver a static shock. It will cut off automatically if you press and hold the Shock Button for 10 seconds. There is a total of 99 levels of Shock. To adjust the shock level, press the Adjustment Knob to select the Shock Mode first, then turn the Adjustment Knob left and right to raise/lower to the desired level, and finally press  button to confirm the modification.




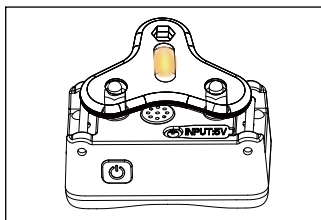

When testing the Shock function for the first time, place the Test Bulb on the Contact Points. The Test Bulb lights up to indicate that the Shock function is working, and it will become brighter at higher shock levels.

4.Light Mode

 
There is a total of two modes for the Light Mode: L1 for the Illuminating Light Mode, and L2 for the Positioning Light Mode, which you can adjust by pressing or holding the Positioning Light Button. Illuminating Light Mode: Press the Light Button, and the Illuminating Light on the Receiver will be on, while the “L1” icon is shown on the Remote Transmitter. Press the Light Button again, and the Illuminating Light Mode will be off. Once the Illuminating Light is on, it will cut off automatically after 30 minutes if there is no operation on the Remote Transmitter.

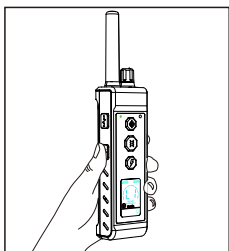

Press



 The Positioning Light Mode: Press and hold the Light Button for 2 seconds, and the LED Light blinks rapidly in blue and white while the “L2” icon is shown on the Remote Transmitter. Press and hold the Light Button again for 2 seconds, and the Positioning Light Mode will be off. Once the Positioning Light is on, it will cut off automatically after 30 minutes if there is no operation on the Remote Transmitter.

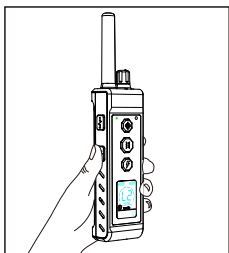

Press



Note:

 
Once both of the Light Modes are active, the green Indicator on the Receiver lights up if any other three training operations. After the operation is over, the Indicator Light resumes to the Light Mode you set.

5. Switching Channels

Press the On/Off(Channel) Button to choose the Receiver you want to control if you have paired up two Receivers.



Press

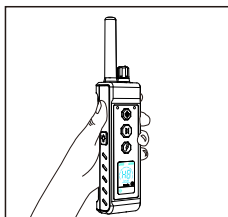


Note:


The Remote Transmitter will go into sleep mode if no operation in 1 minute saving battery power.

6. Turbo Mode

 Slide the Turbo Button to increase the remote control distance when your dog is far away from you. You don't have to worry about the receiver not receiving commands even at a long distance.

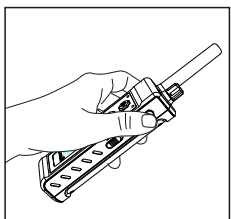

Slide

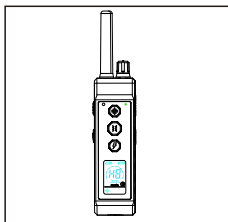 

VII. Fitting the Receiver

 
IMPORTANT:

The proper fit and placement of your Receiver are important for effective training. The Metal Prongs with Conductive Silicone Caps must have direct contact with your dog's skin on the underside of his neck. To ensure a proper fit, please follow these steps:


1. Make sure that the Receiver is turned off.
2. Let your dog stand on four feet or lay down fully (A).
3. Place the Receiver on your dog's neck close to the ears. Center the Metal Prongs underneath your dog's neck, touching the skin (B).

Note: It is sometimes necessary to trim the hair around the Metal Prongs to make sure that contact is consistent.

4. The Receiver should fit snugly, yet loose enough to allow one finger to fit between the strap and your dog's neck (C).
5. Allow your dog to wear the Receiver for several minutes then recheck the fit. Check the fit again as your dog becomes more comfortable with the Receiver.

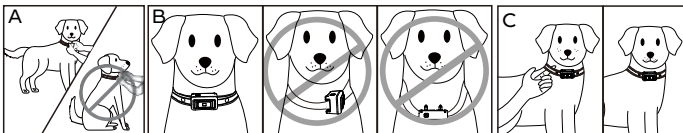

 6. To attach the collar to the Receiver, please follow the following steps as instructed to thread the strap.

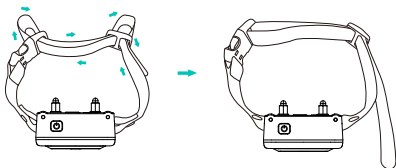


CAUTION:

- DO NOT leave the Receiver on your dog's neck for continuous 12 hours.
- Never attach a leash to the collar.
- Never fit the Receiver too tight to your dog's neck.
- DO NOT shave the dog's neck as this may increase the risk of skin irritation.
- Check the fit regularly to make your dog more comfortable with the Receiver.


VIII. Pairing Up

In case the Receiver is not responding to the Remote Transmitter, follow these steps to pair them up:






 
1. Press and hold the Power Button on the Receiver for 3 seconds to turn it on. Turn on the Remote Transmitter by pressing the On/Off(Channel) Button for 2 seconds.

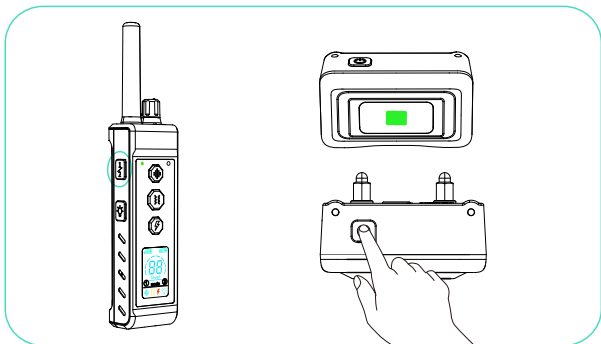

 2. Press the Power Button on the Receiver 3 times to enter the Pairing Mode. You will hear a Beeping tone and the LED Indicator light becomes solid green. You will now have 10 seconds to finish the pairing.

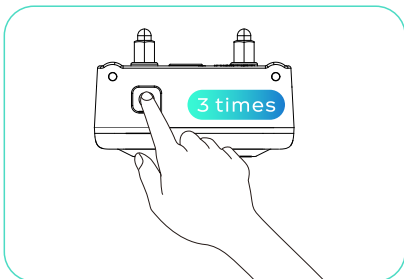

      3. Press the Warning Tone Button, Vibration Button, or Shock Button on the Remote Transmitter, and the Receiver will beep 3 times and respond respectively after you press any of the above buttons indicating that the pairing process is completed.

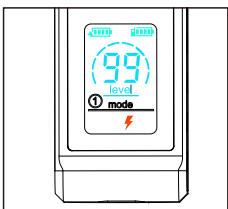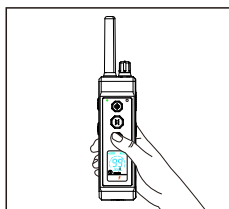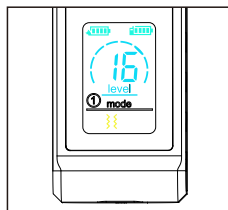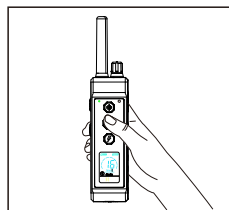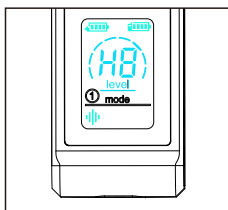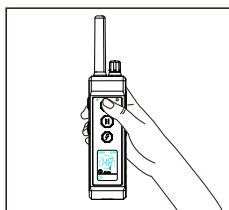











Tips:

The Receiver is paired up to the Remote Transmitter in Channel 1 by factory default setting. If you buy a new Receiver, you can follow the above instructions to pair it up to Channel 2. The system can pair up to 2 Receivers in 2 different channels. If you can not pair your device successfully, it may be due to signal interference. Please try pairing again in a different location or contact our service center.




IX. LCD Display & Indicator Definitions

Remote Transmitter:




	Warning Tone Mode
	Vibration Mode
	Shock Mode
	Indicator Mode
	Channel 1 and 2

	Level for Warning Tone/Vibration/Shock
	Remote Transmitter Battery
	Receiver Battery
	The Illuminating Light Mode
	The Positioning Light Mode

Remote Transmitter Indicator :

Charging	The Green Indicator light blinks slowly
Fully Charged	The Green Indicator light becomes solid
Press 	The Green Indicator light comes up
Press 	The Green Indicator light comes up
Press 	The Red Indicator light comes up

Receiver Indicator:

	Slowly blinking indicates the Receiver is on
	Fast blinking indicates the Receiver is in charge
	Faster blinking indicates the Receiver battery is low
	Illuminating Light Mode is on.
	The Positioning Light Mode is on.

X. Training Tip

HOW to find the best stimulation for your dog?

Important: Always start at the lowest level and work your way up. The Remote Training Collar has 8 types of Warning Tones, 16 levels of Vibration, and 99 levels of Shock. For Warning Tones, there are 8 types of Tones, with only frequency differences between the different types. For Vibration and Shock, level 1 is the lowest; the highest level for Vibration is level 16, and level 99 for Shock.

This allows you to choose the Stimulation level that is best for your dog. Once you have placed the Receiver on your dog, it is time to find the Stimulation Level that is best for him. This is called the Recognition Level. A slight change in your dog's behavior, such as looking around in curiosity, scratching at his collar, or flicking his ears, indicates the Recognition Level that is best for your dog.

Follow the steps below to find your dog's Recognition Level:

1. Starting at Level 1, press the Warning Tone/Vibration/Shock Button continuously for 1 to 2 seconds.

Note: When the Warning Tone/Vibration/Shock Button is held down for 10 consecutive seconds, the Remote Transmitter will "time out", and you must release and press the button again before additional stimulation can be delivered.

2. If your dog shows no reaction, repeat the Stimulation Level several times before moving up to the next level.

3. YOUR DOG SHOULD NOT WINE OR PANIC WHEN RECEIVING STIMULATION. IF THIS HAPPENS, THE STIMULATION LEVEL IS TOO HIGH AND YOU NEED TO GO BACK TO THE PREVIOUS LEVEL AND REPEAT THE PROCESS.

4. Move up through the Stimulation Levels until your dog reliably responds to the stimulation.

5. If your dog continues to show no response at the highest level of Vibration or Static Shock, check the fit of the Receiver. If your dog has long or thick hair, contact our Customer Care Center to obtain a longer set of Contact Points. Then go back to #1 and repeat the process. If this still does not yield any results, your dog's hair will need to be trimmed around the Contact Points. If after completing all of these steps, your dog still does not indicate he is feeling the stimulation, please contact our customer service.

How to Maximize the distance?

Terrain, weather, vegetation, transmission from other radio devices, and other factors will affect the maximum range.

Hold the Remote Transmitter in a horizontal position away from your body to achieve optimum range. For maximum signal strength, keep the device properly charged.



Maximum range



Typical range



Minimum range

*Avoid touching the antenna or the range may decrease substantially.

XI. Frequently Asked Questions

Q: Is the Stimulation safe for my dog?

A: While the Stimulation is unpleasant, it is harmless to your dog. Electronic training devices require interaction and training from the owner to achieve desired results.

Q: How old does my dog have to be before using the Dog Training Collar Mode?

A: Your dog should be able to recognize basic obedience commands such as "Sit" or "Stay". Dogs should be at least 6 months old before using the Trainer.

Q: Once my dog is trained and has been obeying my commands, will he have to continue to wear the Receiver?

A: Probably not. You may need to reinforce training with the Receiver from time to time.

Q: Is the Receiver waterproof?

A: Yes. The Receiver meets the IP67 waterproof rating, but make sure to keep the area dry when charging.

Note: The Remote Transmitter is not waterproof.

Q: Will I get a maximum range with the Remote Training Collar?

A: The range of the Dog Training Collar Mode will vary according to terrain, weather, vegetation, as well as transmission from other radio devices. See "How to Maximize the Distance" on page 18 for tips on maximizing your range.

Q: How long can I continuously deliver stimulation to my dog?

A: The maximum amount of time you can press the Warning Tone/Vibration/Shock button and deliver stimulation to your dog continuously is 10 seconds. After this, the Remote Transmitter will time out, and these stimulation buttons must be released and pressed again.

Q: How do I know if I can use this product for my dog?

A: The product is designed for healthy dogs over 6 months old. Most importantly, this product cannot be used on unhealthy or aggressive dogs, and if you are unsure whether this product is appropriate for your pet, please consult your veterinarian or a certified trainer.

Q: Can I charge this product with any type of charger?

A: No, you are suggested to charge this product with a charger of 5V output voltage, because a charger with an output voltage over 5V may cause damage to the product. The product will stop charging automatically if the input voltage becomes too high and delivers a warning tone.

XII. Trouble Shooting

1. My dog does not respond when I press a button.

- Make sure the Receiver has been turned on.
- If your range has reduced from the first time you used the Remote Training Collar, the battery(-ies) may be low in either the Remote Transmitter or Receiver.
- Many factors can impact the amount of range. For a list of these factors, see "How to Maximize the Distance" on page 18.
- Test the Receiver with the Test Bulb.

NOTE: If the Test Bulb does not flash, recharge the Receiver and re-test. If the Test Bulb Tool still does not flash, please contact our customer service.

- Increase the Stimulation Level. Refer to "HOW to find the best stimulation for your dog" on page 17 for more information.
- Make sure the Receiver's Metal Prongs are placed snugly against your dog's skin. Refer to "Fitting the Receiver" on page 14 for more information.

2.The Receiver will not turn on.

- Make sure the Receiver has been charged. For the initial charge, be sure to charge it for 4 hours. Subsequent charges only take 2-3 hours.

3.The Receiver is not responding to the Remote Transmitter.

- Verify the Receiver is on.
- If the indicator is blinking rapidly, fully charge the Receiver.
- If the first two solutions did not resolve your problems, please check the "Pairing Up" on page 15 to re-pair the Receiver to the Remote Transmitter.

XIII. FCC Statement

USA

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a specific installation. If interference does occur to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult customer care, the dealer, or an experienced radio/TV technician for help.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

The device has been evaluated to meet general RF exposure requirement.

The device can be used in portable exposure condition without restriction.