WIRELESS GAMING SPEAKER

Instruction Manual

Item Number:MU03026



Contents:

- Bluetooth speaker x 1
- Charging cable x1
- Instruction Manual x 1

Product Specification:

Lighting: 8 x color changing LEDs Battery Capacity: 1200 mAh/3.7V

Play Time: around 3 Hours (Different environmental

conditions will affect play time duration) Charging Time: around 3 Hours Speaker Output: 3W x 2

Range: 33ft / 10 m

Frequency Response: 20Hz-20KHz Operating temperature range: 0-45°C Includes 11.81" Micro USB charging cable

Dimension: 11.8" X 2.56" X 2.17"

Weight: 325g Input: DC == 500mA

Part Name:

1. " **-**₩ " Volume Down / Previous Song 2. " **►II/**O " Power key 3. " ➤+ " Volume Up / Next Song 4. Light switch 5. LED Indicator 6. Charging Port

How To Use:

- Power on: Press the power key "▶ı/o" 2 seconds when it is off. The blue LED light will be on, and a voice will prompt, this indicates the BT Speaker is in pairing mode.
- Pairing: Activate the bluetooth function on your phone within range and select "Gaming_Spkr" from the list shown. When the blue LED light stops flashing, it has paired successfully and you will hear a tone. The blue LED will flash slowly when
- center key "או/ט" again to play.
- Volume up: Hold down ">+" to increase the volume.
- Volume down: Hold down "-ा-«" to decrease the volume.
- Previous song: Press the "→⊷ " once to play the previous song.
- Next song: Press the ">+" once to play the next song.
- Power off: When the speaker is standby or operating, press and hold the speaker key "▶I/o" 3 seconds to shut down the speaker.
- Light up: Toggle the light switch to turn the multi-color changing LEDs off/on.

Front

Low Battery: LED indicator turns off and a short tone will prompt To Charge:

- 1. Insert the USB connector end of the included cable (see packing list) into the USB jack on the charger or USB port on the computer.
- 2. The indicator light will be red while charging.

MARNING:

the speaker.

damage to the product or injury.

3. When the speaker is fully charged, the indicator light will turn off.

Please unplug your charger from the power source.

- 4. Please use a qualified charger to recharge your speaker, otherwise it may result in damage or even explosion.
- 5. Repeated charging and discharging of the speaker will lead to decreased battery life over time, which is normal for rechargeable batteries.

· Charge and operate only as indicated in this manual, as improper use may result in

• To avoid risk of shock or injury, do not dismantle the device or insert any objects into

• To avoid electronic interference and/or compatible conflicts, turn off the product in

• Do not pull the speaker charging cable. Damage may result to the cable.

· Avoid exposure to moisture, liquids, heat, flame and high voltage equipment.

6. You must charge the Bluetooth speaker if it has not been used for more than 6 months.

Tips: Please do not turn the volume knob to the maximum level to prevent hearing damage and to prolong the service life of the system.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two condiions:(1) this device may not cause harmful interference, and (2) this device must accept any interference received including interference that may cause undesired operation.

-"WARNING: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment."

-"NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications."

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.


Increase the separation between the equipment and receiver.

Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio/TV technician for help."

FCC ID: 2AYB6-MU03026

 Distributed By: 1616 Holdings, Inc 701 Market Street, Suite 200, Philadelphia.PA 19106 Made in China

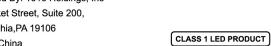



The device has been evaluated to meet general RF exposure requirement.

• Do not drop, place heavy weight or allow heavy impact to the speaker.

any facilities where posted notices instruct you to do so.

· Retain these instructions as they contain important information.

· Keep out of reach of children. This is not a toy.

• Do not short circuit the input terminals of the speaker.

• PCB of battery should not be crushed and twisted.

· Do not disassemble and Do not dispose of in fire.

• Battery body should not be bended.

RF warning statement: