 


size:210x148mm

## HEX WIRELESS WALL SPEAKER

### Instruction Manual

Item Number: MU03038

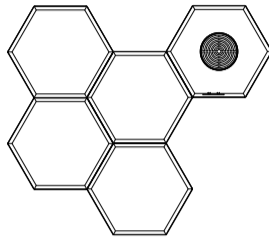 


#### Contents:


 
 



- 1(One) Hex Wireless Speaker 5.9in. x 5.1in. x 1.57in. (15cm x 13cm x 4cm)
- 1(One) USB-C Charging Cable 11.8in.(30cm)
- 1(One) Instruction Manual
- 4(Four) Hex Hanging Casings 5.9in. x 5.1in. x1.57in.(15cm x 13cm x 4cm)

#### Product Specification:

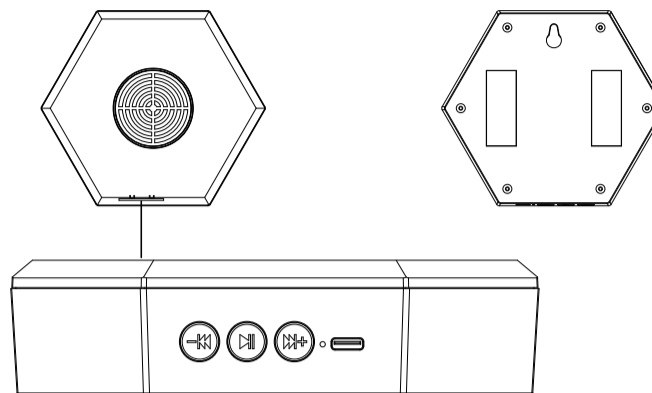Wireless Bluetooth® Speaker  
10 Sets of Velcro Straps Included for Attaching to Any Wall  
Frequency: 20Hz - 20kHz  
Impedance: 32 Ohms  
Battery Capacity: 3.7V / 800mAh  
Play Time: 3-5 Hours  
Charge Time: 2-3 Hours  
Input: 5V --- 500mA  
Speaker Output: 3W  
Working Distance: Up to 10m  
USB Cable Rating 1.0A Max  
FCC ID: 2AYB6-MU03038



#### How To Use:

- **Power on / Power off:** Long press “” to turn on/off the machine.
- **Pairing:** Activate the Bluetooth function on your phone within range and select “HEX BT SPEAKER” from the list shown.
- **Play / Pause:** Short press “” to play/pause
- **Volume up:** Hold down “” to increase the volume.
- **Volume down:** Hold down “” to decrease the volume.
- **Previous song:** Press the “” once to play the previous song.
- **Next song:** Press the “” once to play the next song.
- **TWS function:** When two speakers are turned on at the same time, the speakers will automatically pair and connect. When you hear the prompt sound, the TWS function of the speakers are successfully connected.
- **Charging:** When charging in standby or shutdown mode, insert the TYPE-C end of the USB power cord provided in the attachment into the TYPE-C jack of the speaker, and connect the other end to the computer USB port or USB charger to start charging. The charging LED will light up in red, and the charging indicator light will turn off when fully charged.
- **Wall hanging:** Stick two Velcro stickers on the back of the product, and then stick two Velcro stickers at the desired location and then stick the product together.

Front

#### ⚠ WARNING:

- Charge and operate only as indicated in this manual, as improper use may result in damage to the product or injury.
- To avoid risk of shock or injury, do not dismantle the device or insert any objects into the speaker.
- To avoid electronic interference and/or compatible conflicts, turn off the product in any facilities where posted notices instruct you to do so.
- Do not pull the speaker charging cable. Damage may result to the cable.
- Keep out of reach of children. This is not a toy.
- Avoid exposure to moisture, liquids, heat, flame and high voltage equipment.
- Retain these instructions as they contain important information.
- Do not short circuit the input terminals of the speaker.
- Do not drop, place heavy weight or allow heavy impact to the speaker.
- PCB of battery should not be crushed and twisted.
- Battery body should not be bended.
- Do not disassemble and Do not dispose of in fire.

#### RF warning statement:

The device has been evaluated to meet general RF exposure requirement.  
The device can be used in portable exposure condition without restriction.

Tips: Please do not turn the volume knob to the maximum level to prevent hearing damage and to prolong the service life of the system.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:(1) this device may not cause harmful interference, and (2) this device must accept any interference received including interference that may cause undesired operation.

**-WARNING:** Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**-NOTE:** This equipment has been tested and found to comply with the limits for a Class B digital device. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.”

**⚠ CAUTION:** FOR YOUR SAFETY, the charging cable included with this item is intended for use with this product only.

Distributed By: 1616 Holdings, Inc  
701 Market Street, Suite 200,  
Philadelphia, PA 19106  
Made in China



Back