 


**Wall mountable Bluetooth music system with CD / PLL FM
Radio and Clock**

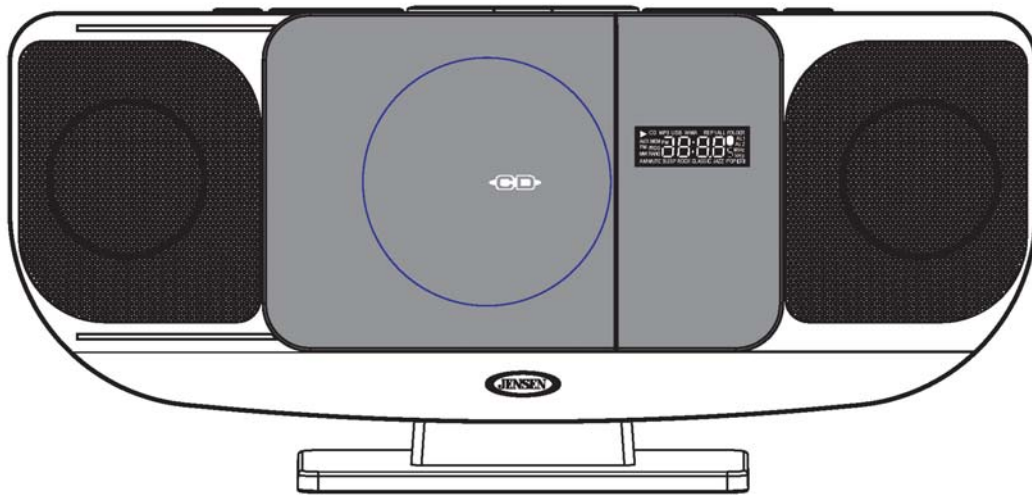 


**MODEL: MET812B
MODEL: JBS-215
USER MANUAL**

**PLEASE READ THIS USER MANUAL COMPLETELY BEFORE OPERATING THIS UNIT
AND RETAIN THIS BOOKLET FOR FUTURE REFERENCE**

WARNING

TO PREVENT FIRE OR SHOCK HAZARD, DO NOT USE THIS PLUG WITH AN EXTENSION CORD, RECEPTACLE OR OTHER OUTLET UNLESS THE BLADES CAN BE FULLY INSERTED TO PREVENT BLADE EXPOSURE. TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.

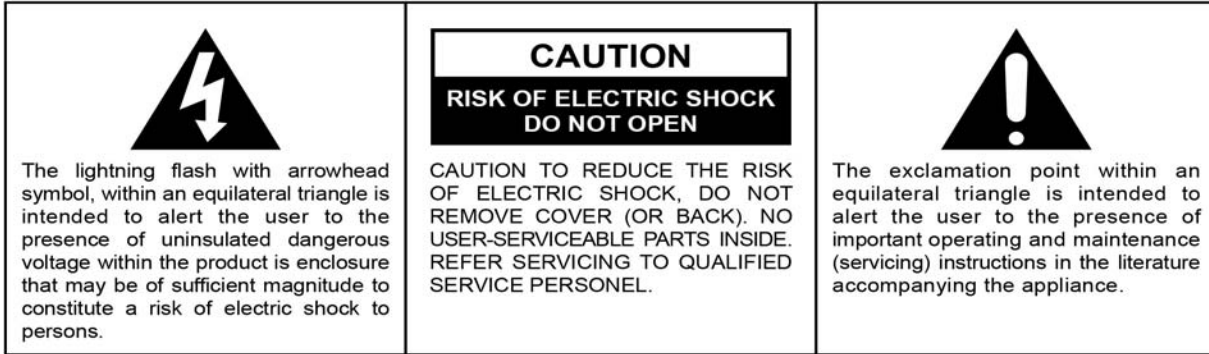

The Caution Marking is located at the back enclosure of the apparatus.
The Rating plate is located at the back enclosure of the apparatus

IMPORTANT SAFETY INSTRUCTIONS

1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Clean only with dry cloth.
7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that product heat.
9. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong is provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
11. Only use attachments/accessories specified by the manufacturer.
12. Use only with a cart, stand, tripod, bracket, or table recommended by the manufacturer, or sold with the product. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
13. Unplug this apparatus during lightning storms or when unused for a long period of time.
14. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.



15. This appliance shall not be exposed to dripping or splashing water and that no object filled with liquids such as vases shall be placed on the apparatus.
16. Do not overload wall outlet. Use only power source as indicated.
17. Use replacement part as specified by the manufacturer.
18. Upon completion of any service or repairs to this product, ask the service technician to perform safety checks.
19. Power Sources - This product should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power supply to your home, consult your product dealer or local power company. For products intended to operate from battery power, or other sources, refer to the operating instruction.
20. Object and Liquid Entry - Never push objects of any kind into this product through openings as they may touch dangerous voltage points or short-out parts that could result in a fire or electric shock. Never spill liquid of any kind on the product.
21. Damage Requiring Service - Unplug this product from the wall outlet and refer servicing to qualified service personnel under the following conditions:
 - a) When the power-supply cord or plug is damaged,
 - b) If liquid has been spilled, or objects have fallen into the product,
 - c) If the product has been exposed to rain or water,
 - d) If the product does not operate normally by following the operating instructions. Adjust only those controls that are covered by the operating instructions as an improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the product to its normal operation.
 - e) If the product has been dropped or damaged in any way, and
 - f) When the product exhibits a distinct change in performance - this indicates a need for service.
22. Mains plug is used as disconnect device and it should remain readily operable during intended use. In order to disconnect the apparatus from the mains completely, the mains plug should be disconnected from the mains socket outlet completely.
23. Battery shall not be exposed to excessive heat such as sunshine, fire or the like.
24. Excessive sound pressure from earphones and headphone can cause hearing loss.
25. Minimum distances of 4 inches around the apparatus for sufficient ventilation.
26. The ventilation should not be impeded by covering the ventilation openings with items, such as newspapers, table-cloths, curtains, etc.
27. No naked flame sources, such as lighted candles, should be placed on the apparatus.
28. The use of apparatus in moderate climates.
29. Attention should be drawn to the environmental aspects of battery disposal.

SAVE THESE INSTRUCTIONS

COMPLIANCE WITH FCC REGULATIONS

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B Digital Device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

 
- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

WARNING

Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

The equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. The equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

CAUTION

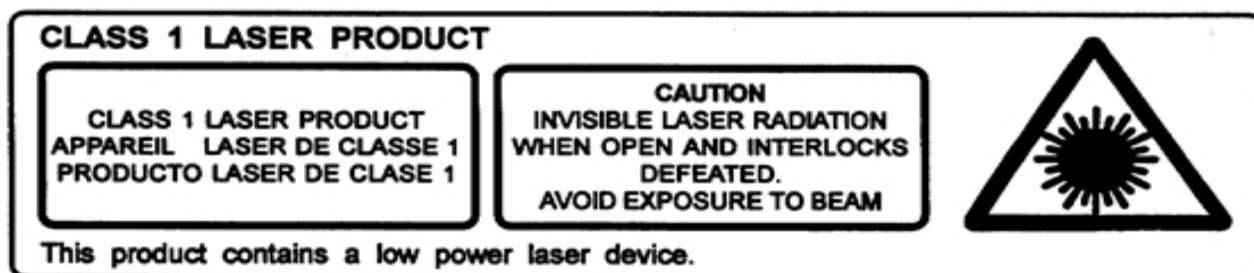

Follow the advice below for safe operations.

ON PROTECTION AGAINST LASER ENERGY EXPOSURE

- As the laser beam used in this compact disc player is harmful to the eyes, do not attempt to disassemble the casing.
- Stop operation immediately if any liquid or solid object should fall into the cabinet.
- Do not touch the lens or poke at it. If you do, you may damage the lens and the player may not operate properly.
- Do not put anything in the safety slot. If you do, the laser diode will be ON when the CD door is still open.
- If the unit is not to be used for a long period of time, make sure that all power sources are disconnected from the unit. Remove all batteries from the battery compartment.

- This unit employs a laser. The use of controls or adjustment or performance of procedures other than those specified here may result in exposure to hazardous radiation. Should any trouble occur, remove the power source and refer servicing to qualified personnel.

PROTECT YOUR FURNITURE

This system is equipped with non-skid rubber 'feet' to prevent the product from moving when you operate the controls. These 'feet' are made from non-migrating rubber material specially formulated to avoid leaving any marks or stains on your furniture. However certain types of oil based furniture polishes, wood preservatives, or cleaning sprays may cause the rubber 'feet' to soften, and leave marks or a rubber residue on the furniture.

To prevent any damage to your furniture we strongly recommend that you purchase small self-adhesive felt pads, available at hardware stores and home improvement centers everywhere and apply these pads to the bottom of the rubber 'feet' before you place the product on fine wooden furniture.

DEAR JENSEN® CUSTOMER

Selecting fine audio equipment such as the unit you've just purchased is only the start of your musical enjoyment. Now it's time to consider how you can maximize the fun and excitement your equipment offers. This manufacturer and the Electronic Industries Association's Consumer Electronics Group want you to get the most out of your equipment by playing it at a safe level. One that lets the sound come through loud and clear without annoying blaring or distortion and, most importantly, without affecting your sensitive hearing. Sound can be deceiving. Over time your hearing "comfort level" adapts to higher volumes of sound. So what sounds "normal" can actually be loud and harmful to your hearing. Guard against this by setting your equipment at a safe level BEFORE your hearing adapts.

To establish a safe level:

- Start your volume control at a low setting.
- Slowly increase the sound until you can hear it comfortably and clearly, and without distortion.
- Once you have established a comfortable sound level: Set the dial and leave it there. Taking a minute to do this now will help to prevent hearing damage or loss in the future. After all, we want you listening for a lifetime.

We Want You Listening For a Lifetime

Used wisely, your new sound equipment will provide a lifetime of fun and enjoyment. Since hearing damage from loud noise is often undetectable until it is too late, this manufacturer and the Electronic Industries Association's Consumer Electronics Group recommend you avoid prolonged exposure to excessive noise.



 
Customer's Record:

The serial number of this product is found on its bottom cover. You should note the serial number of this unit in the space provided as a permanent record of your purchase to aid in identification in the event of theft or loss.

Model Number: JBS-215


Serial Number:

LOCATION OF CONTROLS

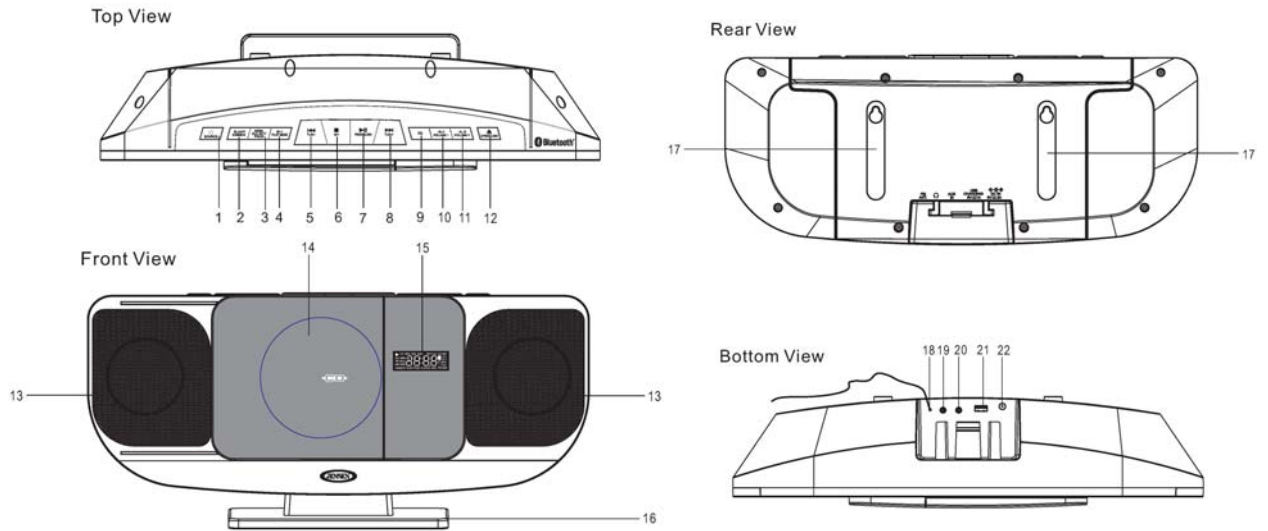

1	⏻ / SOURCE BUTTON	12	▲ OPEN /CLOSE
2	⏪ / SLEEP / DIMMER BUTTON	13	SPEAKER
3	MEM / CLK SET / PROG BUTTON	14	CD DOOR
4	M- / PLAY MODE BUTTON	15	LCD DISPLAY
5	⏮ / TUN- BUTTON	16	UNIT BASE
6	■ / M+ BUTTON	17	WALL MOUNT SLOT
7	▶ / PAIR / SCAN BUTTON	18	FM ANTENNA
8	⏭ TUN+ BUTTON	19	EARPHONES JACK
9	EQ BUTTON	20	AUX IN JACK
10	AL1 / VOLUME- BUTTON	21	USB PORT FOR CHARGING
11	AL2 / VOLUME+ BUTTON	22	DC IN JACK

 REMOTE LOCATION CONTROLS

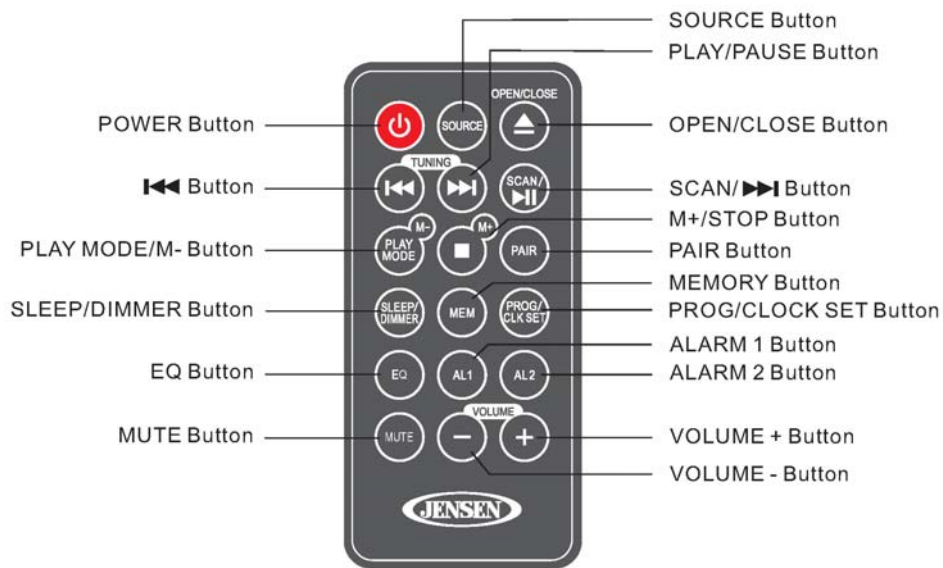

Notes:

1. Remove spacer tab before using this unit for first time.
2. Press the buttons of the remote to pointing the main unit remote sensor area to fully control the main unit.

TO INSTALLING / REPLACING REMOTE BATTERY

1. Pull the battery door at the back of the unit as shown figure.
2. Insert the battery in the battery door with "+" positive facing up. Only CR2025 3V lithium battery should be used.
3. Insert the battery door with new battery back into the unit.

Battery warning:

1. Make sure the correct polarity of battery to be installed.
2. Make sure you dispose of batteries properly (refer to your local regulations).
3. Do not open batteries.
4. Do not dispose of batteries in fire.
5. Do not heat up batteries.
6. Do not expose batteries to water.
7. Do not charge or recharge batteries.



 
POWER SOURCE

The JBS-215 operates using standard 120V~ 60Hz AC household power.

AC POWER OPERATION

An AC-DC Adaptor with the output of DC 5V, 3A (included) is required for operating the main unit when using AC power mode. To connect the AC-DC Adaptor to the unit and 120V~ 60Hz AC Outlet:

1. Firmly and securely insert the DC plug of the adaptor into the DC Jack on the back of the unit.
2. Plug the AC Adaptor plug into the 120V AC outlet. Connecting this system to any other power source may cause damage to the system

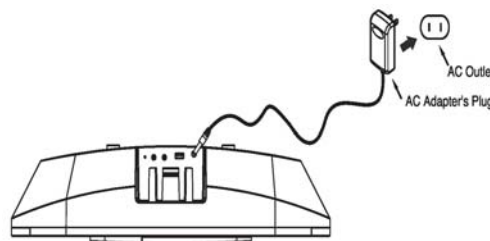

CLOCK SETTING

The LCD DISPLAY 12:00 will blink when the unit is plugged in for the first time and goes into standby mode.

Setting the Time

1. In standby mode, Press and hold the CLK SET BUTTON until the hour digits will blink.
2. Repeatedly tap the **◀◀** BUTTON or **▶▶** BUTTON to set the hour. Press and hold the buttons for fast advance/reverse setting.
Note: The PM icon on the left of the LCD DISPLAY will light when the hour is set to PM and will be off when the hour is set to AM.
3. Press the CLK SET BUTTON to confirm and the minute digits will blink.
4. Repeatedly tap the **◀◀** BUTTON or **▶▶** BUTTON to set the minute. Press and hold the buttons for fast advance/reverse setting.
5. Tap the CLK SET BUTTON to confirm and complete the setting. The display will stop blinking.

ALARM OPERATION

ALARM OPERATION

The JMS-215 features a dual alarm clock.

Setting the alarms:


1. In standby mode, press and hold the ALARM 1 BUTTON, the AL1 icon will light and the hour of the alarm time will blink.
2. Tap the **◀◀** BUTTON or **▶▶** BUTTON to set the hour. Press and hold the buttons for fast advance/reverse setting.
3. Tap the ALARM 1 BUTTON to confirm the hour setting, the minutes digits will blink to prompt for input.
4. Tap the **◀◀** BUTTON or **▶▶** BUTTON to set the minute. Press and hold the button for fast reverse/advance setting.
5. Press the ALARM 1 BUTTON to confirm the minute setting, the alarm sound icons will show on the LCD DISPLAY. (bU – Alarm sound, FM – FM radio, CD – CD MUSIC)
6. Tap the **◀◀** BUTTON or **▶▶** BUTTON to select the wake up option (ALARM, FM Radio or CD MUSIC).
7. Press the ALARM 1 BUTTON to confirm the wake up setting, the alarm sound level digits will blink to prompt for input.
8. Press the ALARM 1 BUTTON to confirm and complete the alarm setting.
9. The ALARM 2 setting procedures are same as ALARM 1.

Wake to FM Radio

Make sure your radio station is set to the one you want to wake up to. The unit will play the last radio station you listened to when the wake time is reached. The VOLUME CONTROL need to set to the desired sound level.

The Radio will automatically turn on when the alarm time is reached. The corresponding AL1 or AL2 icon will blink.

The alarm will sound for 60 minutes and then turn off automatically.

To stop the radio sound immediately, tap the  BUTTON or corresponding (AL1 or AL2) BUTTON.

Wake to CD Music


Make sure your CD disc already put into CD compartment. The unit will play the first track of CD disc you listened to when the wake time is reached. The VOLUME CONTROL need to set to the desired sound level.

Wake to Beeping Alarm

The Beeping Alarm will automatically turn on when the alarm time is reached. The VOLUME CONTROL need to set to the desired sound level.

The corresponding AL1 or AL2 indicator will blink.

The beep alarm will sound for 60 minutes and then turn off automatically.

To stop the beep alarm sound immediately, tap the  BUTTON or corresponding (AL1 or AL2) BUTTON.

Turning the alarms ON or OFF

At standby mode, tap the ALARM 1/ALARM 2 BUTTONS once to enable the corresponding alarm. Tap the ALARM 1/ALARM 2 BUTTONS twice to disable the corresponding alarm. The corresponding AL1/AL2 icons will light when the alarm is enabled. The corresponding AL1/AL2 icons will turn off when the alarm is disabled.

Review the Alarm setting


At standby mode, tap the ALARM 1/ALARM 2 BUTTONS once. The corresponding alarm icon and alarm time will show on the LCD display. It will return back to display time after 3 seconds.

Notes:

- For setting a one-day alarm, just set the desired alarm time one day before.
- The alarm will sound at the time set the day prior. After having switched off the alarm sound, tap the corresponding alarm button twice to disable the alarm (the alarm icon will off).
- To set another one-day alarm, just repeat the above steps.



 

SLEEP OPERATION

The sleep timer turns off the unit automatically after a designated time has elapsed.

1. Tap the SLEEP/DIMMER BUTTON to enter sleep mode when the unit working..
2. Repeatedly tap the SLEEP/DIMMER BUTTON to select the sleep timer 15 – 30 – 45 - 60 – OFF (in minutes). The unit will play for the selected length of time then turn off automatically.
3. To cancel the sleep timer, repeatedly tap the SLEEP/DIMMER BUTTON until the timer shows OFF.
4. To turn the unit “Off” before the selected length of time, press the  BUTTON at any time.



Note: Tap the SLEEP/DIMMER BUTTON once to check the remaining sleep time

RADIO OPERATION

1. Tap the SOURCE BUTTON to RADIO, FM band frequency will show on the LCD display.
2. Tap the TUN-  /TUN+  dial to tune the radio manually,
Press and hold the TUN-  /TUN+  dial to search to previous/next available station.
3. Tap the VOLUME - / VOLUME + BUTTOM to obtain the desired sound level.

Setting the Radio Station Presets

The unit allows you to store up to 20 FM stations for easy recall at any time.

1. Tap the SOURCE BUTTOM unit to FM RADIO position.
2. The FM band frequency will show on the LCD display
3. Tune to the radio station you want to store in memory.
4. Press and hold MEM/PROG BUTTON. The preset channel number “P01” will be flashing on the LCD DISPLAY.
5. Tap the TUN-  /TUN+  BUTTON to select the preset location (P01 – P20).
6. Tap the MEM/PROG BUTTON to confirm.
7. To store up to 20 FM station presets, repeat steps 3-6 above.

RECALL PRESET STATION





In FM mode, tap the M-/M+ BUTTON to select the preset channel.

TIPS FOR BEST RADIO RECEPTION


 

To obtain the best FM reception, relocation the FM ANTENNA. Avoid close to the speakers or other electrical appliance.

BLUETOOTH OPERATION

Pairing a Bluetooth enabled device with the JBS-215.

1. Tap the  BUTTON to turn on the unit.
2. Tap the SOURCE BUTTON repeatedly to select Bluetooth mode.
3. The Bluetooth icon  will turn on and flash on the LCD display.
4. Turn on the Bluetooth function of your device and enable the search or scan function to find the JBS-215.
5. Select JBS-215 from the device list when it appears on your device screen. If required, enter the pass code “0000” to pair (link) JBS-215 with your device.
6. If you are pairing (linking) your computer to the speaker using Bluetooth, you may need to set the JBS-215 as your computer’s default sound device.
7. After pairing JBS-215 with your Bluetooth device successfully, The Bluetooth icon  will light steadily.
8. If you want JBS-215 change to pair with another Bluetooth device, press and hold the PAIR/SCAN BUTTON, the Bluetooth icon  will flash. The unit will go into Pairing/Discoverable mode. Repeat steps 4 & 5.

Now you can play music from your Bluetooth device wirelessly to JBS-215.

1. Selecting your favorite song, press Play/Pause Button on your Bluetooth device or Play/Pause  Button on JBS-215 to play or pause the Bluetooth device playback.
2. Tap the  BUTTON or  BUTTON to select the Previous or Next track.
3. Slowly adjust both the volume controls of your JBS-215 and your Bluetooth device until you reach a comfortable listening level.

Notes:

1. Refer to the manual of your cell phone, tablet PC, computer or other Bluetooth enabled devices for Bluetooth operation since it may vary from model to model.
2. If your Bluetooth enabled device does not support A2DP profile, it will not play the music through the speaker, even if paired (linked).
3. Remember to turn off the JBS-215 when you have finished listening.
4. Don't forget to switch off the power of your external audio device as well.

CD OPERATION

PLEASE READ THIS IMPORTANT INFORMATION:

CD mechanisms used in devices like this are designed to fully read all commercial CDs. They will also read self-compiled CD-R/CD-RW discs but it may take up to 10 seconds for playback to start. If playback does not start, it is likely due to the quality of the CD-R/RW disc and/or the compatibility of the CD compilation software. Manufacturer is not responsible for the playback quality of CD-R/RW discs.

Do not attach a label or seal to either side of the CD-R/RW disc. It may cause a malfunction.

1. Tap the SOURCE BUTTON to CD position.
2. Press OPEN/CLOSE BUTTON to open the CD door and carefully place an audio CD/MP3 CD with its label side upward in the CD compartment and press OPEN/CLOSE BUTTON to close the CD door.
3. The player will start reading TOC of the disc.
4. The total number of tracks on the CD will appear on the LCD DISPLAY after a few seconds. MP3 CD will take some more time.
5. Tap the PLAY/PAUSE ►|| BUTTON to start to play.
6. Adjust the VOLUME - / VOLUME+ to obtain the desired sound.
7. To suspend playing, tap the PLAY/PAUSE ►|| BUTTON again. To resume playing, tap the PLAY/PAUSE ►|| BUTTON again.
8. You can choose to play your favorite track directly by tap the ◀◀ / ▶▶ BUTTON. The LCD Display will indicate the correct track number selected.
9. To locate a particular section within a track, press and hold the ◀◀ / ▶▶ BUTTON until the section is found.
10. To repeat a particular track, tap the PLAY MODE BUTTON repeatedly until the **REP 1** indicator lights on the LCD DISPLAY.
11. To repeat the entire CD, tap the PLAY MODE BUTTON repeatedly until the **REP ALL** indicator lights on the LCD DISPLAY.
12. To repeat the random track, tap the PLAY MODE BUTTON repeatedly until the **RAND** indicator lights on the LCD DISPLAY.
13. To stop playing, tap the STOP ■ BUTTON.
14. Press ⏻ / SOURCE BUTTON to OFF position to turn off the unit.

PROGRAM OPERATION

This function allows the tracks to be played in a programmed sequence. Programs can be set in STOP mode.

1. Tap the MEM/PROG BUTTON once. The PROG Indicator will light and program Channel Number "P01" will show on the LCD DISPLAY.
2. Tap the ◀◀ / ▶▶ dial to select the track to be programmed. The track number 01 will blink on the LCD DISPLAY to prompt for input.
3. Tap the MEM/PROG BUTTON again to store selection. The Program Channel No. will change to P02.

4. You may repeat steps 2 - 3 to program as many as 20 tracks.
5. Tap the PLAY/PAUSE ►|| BUTTON to start the programmed play.
6. You may tap the PLAY MODE BUTTON repeatedly to select REP 1 or REP ALL programmed tracks.
7. Tap STOP ■ BUTTON once to stop playback.
8. Tap the PLAY/PAUSE ►|| BUTTON to resume programmed play.
9. To cancel programmed play and, press the STOP ■ BUTTON twice.

AUX IN OPERATION

You can play other music sources (iPod, MP3 or other digital audio players) through the speakers of the JBS-215 by connecting the AUX IN JACK to your external player's audio out jack or headphone jack.

1. Plug one end of an audio cable (not included) into the AUX IN JACK and the other end of the cable to the headphone jack of your digital audio player.
2. Tap SOURCE BUTTON to the AUX position.
3. AUX will show on the LCD DISPLAY.
4. Turn on and start playing the external device you plugged into the AUX IN JACK.
5. Slowly adjust both the volume controls of your JBS-215 and the external device until you reach a comfortable listening level.

Notes:

- If you connect the JBS-215 to the Line-Out Jack of your external device, you only need to adjust the VOLUME CONTROL of your JBS-215. If you connect to the Headphone Jack of your external device, you may need to adjust both the volume controls of your external device and the JBS-215 to obtain the desirable listening level.
- Remember to turn off the JBS-215 when you have finished listening. Don't forget to switch off the power of your external audio device as well.

EARPHONES CONNECTION

Connect the plug of the stereo earphone (not included) into the EARPHONES JACK.

CAUTION

- Avoid excessive volume levels for long period of time when using the earphones. Prolonged use at high levels may impair your hearing.
- Do not use earphones while operating a motorized vehicle, as it may create a traffic hazard and is illegal in many areas

EQ

Tap EQ button to change EQ stage – Flat, Rock, Classic, Jazz and Pop

Note: EQ Flat stage is no indication.

DIMMER OPERATION

In standby mode, press and hold the SLEEP/DIMMER BUTTON repeatedly to select Low, Medium or High brightness settings of the display.

USB CHARGING

CONNECTING A USB CORD (NOT INCLUDED) FOR CHARGING YOUR CELL PHONE (DC 5V \equiv 1 A)

1. Plug the standard end of the USB cable (not included) into the USB CHARGING PORT located on the back of the unit. Plug the other end of the cable into the device you wish to charge.
2. Observe the battery charge indicator on your device to make sure the charging process starts normally.
3. Unplug the cable when your device is fully charged.

WARNING!

 
- The USB port located on the back of the unit is designed for a smart phone or portable device battery charging only and does not support data transfer or connection to a computer.
- Don't connect the USB port of the unit to another USB charger. It may damage both units and void the warranty.

RESETTING THE UNIT

In case of malfunction due to electrostatic discharge, reset the unit by unplug the DC Jack on the back of the unit. Wait for 2-3 minutes before plug the DC Jack on the back of the unit.

CARE AND MAINTENANCE

1. Clean your unit with a damp (never wet) cloth. Solvent or detergent should never be used.
2. Avoid leaving your unit in direct sunlight or in hot, humid or dusty places.
3. Keep your unit away from heating appliances and sources of electrical noise such as fluorescent lamps or motors.
4. If drop-outs or interruptions occur in the music during CD play, or if the CD fails to play at all, its bottom surface may require cleaning. Before playing, wipe the disc from the center outwards with a good soft cleaning cloth.

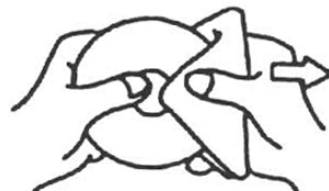


TROUBLE SHOOTING GUIDE

If you experience difficulties in the use of this CD radio, please check the following or call 1-800-777-5331 for Customer Service and support

Symptom	Possible Cause	Solution
Noise or sound distorted on FM broadcast	Station not tuned properly. Wire antenna is not fully extended.	Fine tune FM broadcast station. Fully extend the wire antenna and reposition the wire until the best reception is obtained.
FM radio no sound	Unit not in FM mode. Volume at minimum	Tap SOURCE BUTTON to select FM mode. Increase Volume level.
CD player will not play	Unit not in CD function mode. CD is installed incorrectly. If the CD is self-compiled, the media used may not be compatible with the player.	Tap SOURCE BUTTON to CD mode. Insert CD with label side up. Use better quality blank media and retest.
CD skips while playing	Disc is dirty or scratched.	Wipe CD with clean cloth or use another disc.
Intermittent sound from CD Player	Dirty or defective disc. Dirty pick up lens. Player is subject to excessive shock or vibration	Clean or replace the defective disc. Use a CD-lens cleaning disc to clean the lens. Relocate the player away from shock or vibration

 SPECIFICATION

Radio Frequency Range	: 87.5 – 108 MHz
Audio Output Power	: 2 x 5W (RMS)
Bluetooth	: V5.1 +EDR
Power Source:	
AC Adapter	: Input AC120V ~ 60Hz Output DC 5V \equiv 3A 
USB Port for Charging	: 5V 1A