 


Portable Media Boombox with TV Tuner

 
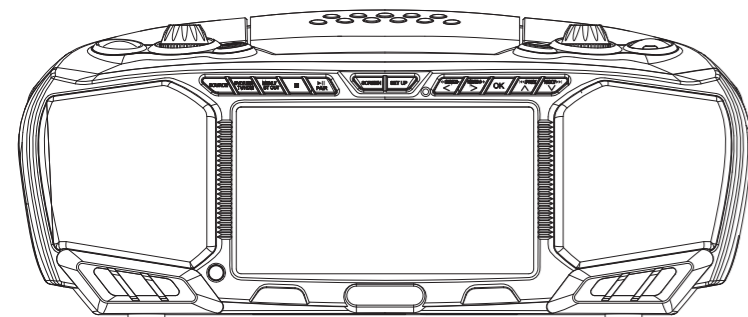 


Item: AI7011 Quick Start Guide

WHAT'S INCLUDED

- AI7011 Portable Media Boombox
- AC Adapter (DC 5V \equiv 3A \oplus \ominus)
- RCA Audio Video Cable
- Remote Control
- Quick Start Guide

YOUR REMOTE

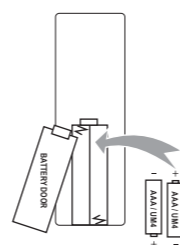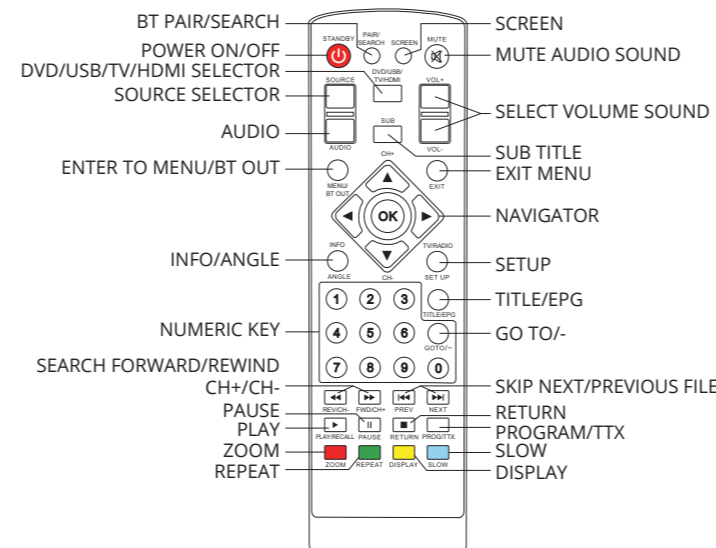


Inserting Batteries

1. Your remote control takes 2 AAA batteries.
2. Open the battery compartment on the rear of your remote.
3. Insert batteries with the correct polarity (+,-).
4. Close the battery compartment.

Warning

- Do not mix old and new batteries.
- Only use alkaline batteries.
- Do not expose batteries to excessive heat.
- Remove batteries if not in use for extended periods of time.

 
YOUR DEVICE

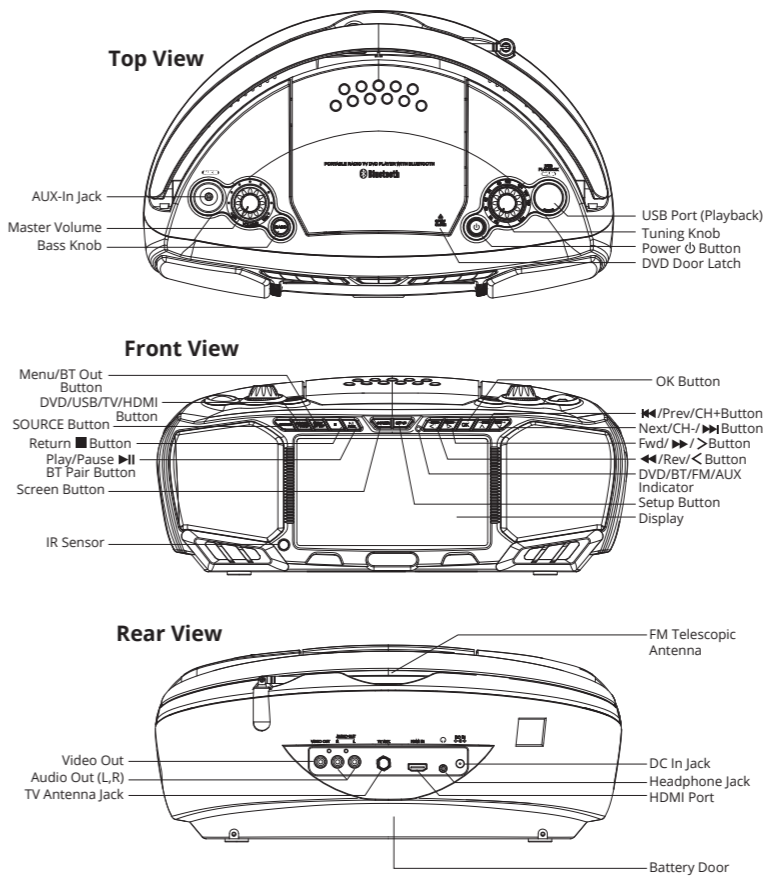

POWERING

Your boombox can be powered with the included AC adapter or by inserting eight "D" size batteries (not included).

 Powering with the Included AC Adapter

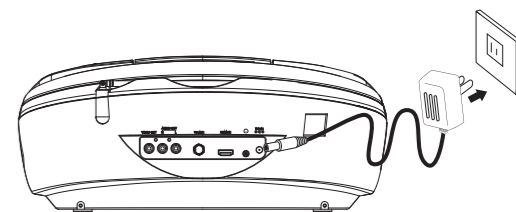

1. Insert the DC plug adapter into the DC In Jack on the back of your boombox.
2. Plug the AC adapter plug into a standard 120V AC outlet in your home.
3. Press the Power button on the top panel to turn on the unit.

NOTE: Unplug when not in use for extended periods.

Powering with Batteries

1. Your boombox control takes 8 "D" size batteries.
2. Open the battery compartment on the bottom of your boombox.
3. Insert batteries with the correct polarity (+,-).
4. Close the battery compartment.

Warning

- Do not mix old and new batteries.
- Only use alkaline batteries.
- Do not expose batteries to excessive heat.
- Remove batteries if not in use for extended periods of time.

CONNECTING TO A TV/EXTERNAL DEVICE

Your boombox can be connected to a television in order to watch DVDs. You can also connect it to external speakers for an enhanced audio experience.

Composite Video Output

1. Plug the included RCA audio/video cable into the VIDEO OUT port on the rear of the boom box and a composite video input on a television.
2. Adjust the television to the correct input setting.
3. When playing CDG discs, the boombox will output written lyrics to the connected television, acting as a karaoke machine.

RCA Audio Output

1. Plug the included RCA audio/video cable into the AUDIO OUT port on the rear of your boombox and an RCA audio input jack on a television or stereo system.
2. Adjust the television or stereo system to the correct input setting.
3. When playing a disc, the boombox will output audio to the connected television or stereo system. Use the external device to control the output sound level.

DVD FUNCTION

IMPORTANT NOTE

DVD players used in devices like this are designed to fully read all commercial DVDs. They will also read self-compiled DVD-R/DVDRW discs but it may take up to 10 seconds for playback to start. If playback does not start, it is likely due to the quality of the DVD-R/RW disc and/or the compatibility of the CD compilation software. The manufacturer of this product is not responsible for the playback quality of CD-R/RW discs.

Do not attach a label or seal to either side of the DVD-R/RW disc. It may cause a malfunction.

USING THE BOOMBOX TO PLAY DVDs

1. Press the POWER button to power on the unit. A power indicator will illuminate.
2. If the unit is not in DVD mode, press the SOURCE button repeatedly until DVD mode is selected.
3. In DVD mode, the unit will start to read the inserted DVD disc. If no DVD has been loaded in the DVD compartment, "NO DISC" will display with the DVD logo.
4. Press the "OPEN/CLOSE" mark on the DVD Door and pull gently to open it.
5. Carefully load a DVD disc with its label side upward into the DVD compartment then gently close the DVD door.
6. The player will start reading the disc and playing.
7. Adjust the MASTER VOLUME knob to obtain the desired sound.
8. To temporarily stop playing, press the PLAY/PAUSE Button. To resume playing, press the PLAY/PAUSE Button again.
9. Press the Fast Forward button repeatedly to get the playback at speeds of 2x, 4x, 8x, 20x, or normal. Press the fast reverse button repeatedly to get playback at speeds of 2x, 4x, 8x, 20x, or normal but in reverse.
10. To stop playing, press the STOP button
11. Press the POWER button to turn off the unit after watching.

USB FUNCTION

The unit is designed to play AUDIO, JPEG and VIDEO files stored on a USB flash drive. If the files on the USB device do not conform to common standards, they may not be played.

1. In DVD mode, press the DVD/USB/TV/HDMI button once to access USB mode (display shows no USB).
2. Slide open the USB Port cover on the top of the unit, and insert your USB flash drive into the USB port. The unit starts to read the USB flash drive.

Notes:

- a) USB Function supports flash drives with capacity up to 32 GB maximum.
- b) Due to the various sizes of USB flash drives available, please always fold down the carrying handle before inserting a USB flash drive into the USB port.
- c) When carrying this unit, be sure your USB flash drive is not taller than the space under the carrying handle to avoid damaging.

3. After reading the USB flash drive, the unit will display a menu to select AUDIO, JPEG or VIDEO. Using < & > buttons to select, press OK button to enter. Follow the on screen display to operate.

4. Press the MENU button to return to the menu.

TV (ATSC) OPERATION

The unit is designed to receive TV (ATSC) signal for watching. Plug the TV antenna at the back of the unit when using the TV function.

Scan For Channels

1. In DVD mode, press the DVD/USB/TV/HDMI button repeatedly to select ATSC TV mode.
2. The Installation Guide will then show up on the screen. Use the Up / Down / Right / Left arrow buttons to select "OSD Language and Country".
3. Check and set all the setting you desire, then select "Channel Search" and press OK button to start scanning TV stations.
4. Unit will start to scan and show the scanning process status on the screen.
5. After completed the scanning process, the available TV stations will be saved automatically and 1st available station will be played.
6. Press the "Ch+" button or "Ch-" button to change and select your desired TV station for watching

INITIAL SYSTEM SETUP FOR TV (ATSC)

To enter the TV INITIAL SYSTEM SETUP page, press the "MENU" button while at the ATSC TV mode.

【Program】 (Edit and customize the Program channel)

1. Use the Up / Down / Right / Left arrow buttons to select Program menu.

2. Move through, select and edit the Program Edit, EPG and Sort settings.

3. To edit the "Program Edit" settings, it may require to input password. Please enter the initial password "000000" or the password that was last changed.

【Picture】

1. Use the Up / Down / Right / Left arrow buttons to select Picture menu.

2. Move through, select and edit the Aspect Ratio setting.

TV (ATSC) OPERATION

【Channel Search】

1. Use the Up / Down / Right / Left arrow buttons to select Channel Search menu.

2. Move through, select and edit the Auto Search, Manual Search, Country, Signal Type settings.

【Time】

1. Use the Up / Down / Right / Left arrow buttons to select Time menu.

2. Move through, select and edit the Time Offset and Country Region settings.

【Option】

1. Use the Up / Down / Right / Left arrow buttons to select Option menu.

2. Move through, select and edit the OSD Language, Close Caption and Audio Language settings.

【System】

1. Use the Up / Down / Right / Left arrow buttons to select System menu.

2. Move through, select and edit the Parental Guidance, Set Password, Restore Factory Default, Information and Software Update settings.

Parental Guidance, Set Password and Restore Factory Default settings: These set ups may require to input password. Please enter the initial password "000000" or the password that was last changed.

Parental Guidance: In order to edit the Rating Region, MPAA and TV settings, please select and edit the System Lock setting to On. Use the Up / Down / Right / Left arrow buttons to select your desire MPAA settings (OFF, G, PG, PG-13, R, NC-17 and X rating).

HDMI FUNCTION

1. Plug an external device into the HDMI port located on the back of the boombox.
2. Power on your boombox, and when in DVD mode, press the DVD/USB/TV/HDMI button twice to enter HDMI mode (display shows HDMI mode).
3. Turn on and start playing the external device that you have plugged into the HDMI port located.
4. Turn off both the external device and your boombox after use. Unplug the HDMI cable from HDMI port at the back of the unit.

Use with Streaming Sticks/Adapters or Other Sources.

The AIWA AI7011 features HDMI In functionality for use with external sources such as satellite receivers or streaming sticks/adapters.

Use with a Chromecast™/Roku™/Amazon Fire TV Stick™ etc. allows streaming of a wide range of services to your AI7011.

These devices usually also allow 'screen mirroring' so that you can play content from your phone/tablet directly to your AI7011.

Simply plug your adapter into the rear HDMI Input and power it from the power supply supplied with that adapter.

Alternatively the USB socket on the top of the AIWA AI7011 supports up to 1.5A power for powering such devices.

Note that these devices require Wi-Fi so your AIWA AI7011 with stick attached will need to be in range of your Wi-Fi network.

Note:If using TV Sticks, please insert the TV Stick before turning on the power, then enter HDMI mode.

BLUETOOTH FUNCTION

The Bluetooth feature enables you to stream and play digital music from your Bluetooth enabled device to your boombox.

1. With your boombox powered on, press the SOURCE button repeatedly to select Bluetooth mode (a "Bluetooth" sound is typically heard). The indicator light will flash.
2. The unit will start in auto connection mode and search for a previously paired device that is active and in range (30 feet/10 meters). If found, a brief welcome melody will be heard and the indicator light will stop flashing and remain solid. If no active device is found, the unit will switch to pairing mode and the Bluetooth indicator keeps flashing.
3. Go to the Bluetooth settings menu of your Bluetooth enabled device, and make sure Bluetooth is turned on. Then select the " AIWA TV Stream " from the list of available devices.
4. Once a connection is made, you should hear a melodic tone and the indicator light will stop flashing and remain solid.
5. If you want to connect the Boombox to another new external Bluetooth enabled device while paired with another device, press and hold the PAIR button for few seconds to disconnect the existing connection. The unit will emit two short beeps and Bluetooth indicator will change to flash. Repeat steps 3 to 4 above to make a new link.

BLUETOOTH OUT (TRANSMITTER)

1. Press the SOURCE button to desired function mode except the Bluetooth receiver and FM radio modes.
 2. Press and hold the BT OUT button, unit is in Bluetooth transmit pairing mode and Bluetooth indicator flashes
 3. Set your Bluetooth receiver such as headphone or speaker to ON and begin searching for devices.
- NOTE:
a.) If you have several Bluetooth receivers, switch off those receivers that are not in use and place the one to be linked near the unit to avoid Boombox linked to other unwanted Bluetooth enabled devices.
b.) The effective distance between your external device and this apparatus is within 10 meters (30 feet).
 4. Boombox will auto scan and pair with your Bluetooth receiver nearby, Pair indicator will change to light Green steadily to indicate a connection has been established.
 5. Play music on Boombox in DVD, USB, HDMI, TV or AUX mode, unit speaker sound will be off, you can listen to music by using your Bluetooth receiver such as a headphone or speaker wirelessly.
 6. If you want change to pair with another Bluetooth Enabled Device, switch off the Bluetooth function of your Bluetooth receiver which was paired previously. Press the BT OUT button to turn off the function and press the BT OUT button again to pairing mode (repeat step 2 to 5).
 7. Press the BT OUT button when you finish listening in Bluetooth transmitter mode, Blue LED will be off and unit speaker will sound again.

Notes:
1.) When Bluetooth Receive/In or FM Radio modes are in use, the Bluetooth transmit/Out function is disabled.
2.) There will be a brief sound delay when enabling the Bluetooth Transmit/Out function
3.) Bluetooth Out (Transmitter) can only pair with Bluetooth receiver such as headphone or speaker for music streaming wirelessly. Use your Bluetooth device volume control if necessary.

AUX IN FUNCTION

You can play other music sources (iPods, MP3 players or other digital audio players) through the speakers of the boombox by connecting the AUX IN jack to your external player's audio out jack or headphone jack.

1. Plug one end of a 3.5mm audio cable (not included) into the AUX IN jack located on the top of the boombox and the other end of the cable to the headphone jack of your digital audio player.
2. Press the "SOURCE" button repeatedly unit AUX IN mode is accessed (an "Auxiliary" sound is typically heard).
3. Turn on and start playing the external device you plugged into the AUX IN jack.
4. Slowly adjust both the volume controls of your unit and the external device until you reach a comfortable listening level.
5. Turn off both the external audio player and this unit after use. Unplug the audio cable from AUX IN jack.

Notes:
--If you connect the unit to the Line-Out Jack of your external device, you only need to adjust the VOLUME CONTROL of your unit. If you connect to the Headphone Jack of your external device, you may need to adjust both the volume controls of your external device and the unit to obtain the desirable listening level.
--Remember to turn off the unit when you have finished listening. Don't forget to switch off the power of your external audio device as well.


FM RADIO FUNCTION

1. Press the POWER button to power on your boombox.
2. Press the "SOURCE" button repeatedly until FM mode is accessed (an "FM RADIO" sound is typically heard).
3. Tune to your desired station with the TUNING knob.
4. Adjust the MASTER VOLUME knob to obtain the desired sound level.


TIPS FOR BEST RADIO RECEPTION


When listening to FM radio stations, always keep the FM TELESCOPIC ANTENNA fully extended for best performance. If FM reception is weak, try repositioning the unit near an open window until you get better reception.


INITIAL SYSTEM SETUP FOR LANGUAGE, AUDIO, VIDEO AND CUSTOMER PAGE

Using Set up Menu 1
Press SET UP button to enter unit menu, the unit will show the SYSTEM menu:
 Use RIGHT ARROW (>) button, UP ARROW (▲), or DOWN ARROW (▼) button to move through and select desired TV system, Screen Saver, Power resume, TV Type, Rating and Default Setting.

Parental Rating: If the unit parental rating level (level 1 for KID, level 8 for ADULT) was set to below the DVD disc classified rating level, unit will request input password for playing. To unlock the unit and continue to play, please enter the password "0000".

Using Set up Menu 2
In System menu, press DOWN ARROW (▼) button once to enter Language menu:
 Use RIGHT ARROW (>) button, UP ARROW (▲), or DOWN ARROW (▼) button to move through and select desired setting: OSD (On Screen Display) Language, Audio Language, Subtitle Language and Menu Language.

Using Set up Menu 3
In System menu, press DOWN ARROW (▼) button, twice, to enter Audio menu:
 Use RIGHT ARROW (>) button, UP ARROW (▲), or DOWN ARROW (▼) button to move through and select desired setting: Key and Dual Mono setting.

Using Set up Menu 4
In System menu, press DOWN ARROW (▼) button, three times to enter Video menu:
 Use RIGHT ARROW (>) button, UP ARROW (▲), or DOWN ARROW (▼) button to move through and select desired setting: Brightness, Contrast, Hue, Saturation and Sharpness.

CARE AND MAINTENANCE

1. Do not subject the unit to excessive force, shock, dust or extreme temperatures.
2. Do not tamper with the internal components of the unit.
3. Clean your unit with a dry cloth. Solvents or detergents should never be used.
4. Avoid leaving your unit in direct sunlight or in hot, humid or dusty places.
5. Keep your unit away from heating appliances and sources of electrical noise such as fluorescent lamps or motors.
6. If drop-outs or interruptions occur in the music during DVD play, or if the DVD fails to play at all, the disc's bottom surface may require cleaning. Before playing, wipe the disc from the center outwards with a good soft cleaning cloth.



CLEANING THE UNIT
--To prevent fire or shock hazard, disconnect your unit from the AC power source when cleaning.
--The finish on the unit may be cleaned with a dust cloth. Use caution when cleaning and wiping the plastic parts.
--If the cabinet becomes dusty wipe it with a soft dry dust cloth. Do not use any wax or polish sprays on the cabinet.
--If the front panel becomes dirty or smudged with fingerprints it may be cleaned with a soft cloth slightly dampened with a mild soap and water solution. Never use abrasive cloths or polishes as these will damage the finish of your unit.

CAUTION: Never allow any water or other liquids to get inside the unit while cleaning.

FCC STATEMENT

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.
- The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

WARRANTY

This warranty covers the original consumer purchaser only and is not transferable.

This warranty covers products that fail to function properly UNDER NORMAL USAGE, due to defects in material or workmanship. Your product will be repaired or replaced at no charge for parts or labor for a period of one year.

What Is Not Covered By Warranty
Damages or malfunctions not resulting from defects in material or workmanship and damages or malfunctions from other than normal use, including but limited to, repair by unauthorized parties, tampering, modification or accident.

To Obtain Warranty Service and Troubleshooting Information:
Call (877) 397-8200 or visit our website at www.aiwa.co.

To receive Warranty service along with the name and address of an authorized product service center, the original consumer purchaser must contact us for problem determination and service procedures. Proof of purchase in the form of a bill of sale or receipted invoice, evidencing that the product is within the applicable Warranty period(s), MUST be presented in order to obtain the requested service. It is your responsibility to properly package and send any defective products along with a dated copy of proof of purchase, a written explanation of the problem, and a valid return address of the authorized service center at your expense. Do not include any other items or accessories with the defective product. Any products received by the authorized service center that are not covered by warranty will be returned unrepai red.

