





PRODUCT INTRODUCTION (1)Except for the operation methods specifically marked in the manual please do not try to

disassemble or replace any parts in the earbuds-(2)Don't put the earbuds in the water or any others liquid. The earbuds are not waterproof. (3) If any liquid enters the product by accidentally, please disconnect and remove the connection

(4)Please make sure that there is no water on your hands when Installing or uninstalling the product to avoid electric shock . (5)Do not put the product near by the heat source or expose it to the fire source directly.

(6)Do not put the product in the environment with strong electromagnetic force, otherwise it will cause product malfunction.



Product specification

Bluetooth range ≥ 10M Earbuds battery capacity: 35mAh Duration: about 5.5 hours (headset) Charging time: about 1.5 hour (headset) Rated input: 5V == 30mA

Battery capacity: 250mAh

Charging box specifications

Charging time: about 2.5 hours Rated input: 5V == 200mA

(All technical information is subject to actual performance)

Charge the charging box

Connect the charging box to the 5V power adapter with the Type-C charging cable

(Reminder: Open or close the charging box, if the red light breathing effect appears, please timely Charge the charging box.)





LED Indicator Status

Mode 1: Put the earphone back into the charging box and close the box cover



arging box	Use the supplied charging cable Connect power to charge	Charging of charging box: the white light is always on during charging of charging box When the box is fully charged: the green light is always on
arging box	Normal power Low battery	When the cover is opened or closed, the green indicator will light up for 5 seconds When the cover is opened or closed, the red indicator will flash for 5 seconds

1 Boot

Method 1: Open the cover of the charging box and start the headset automatically;

2 to turn it off

automatically after 5 minutes Method 1: Open the Bluetooth list of smart devices, search for "Moi P1" and Connection

(support for single ear use).



Mode 2: When the device is not connected to the smart device, the earphone will shutdown





■ The operation of the touch button Music Play Mode

Pause / play: double click the headset Last song: three hits on the left headphone Next song: three clicks on the right headset

L R Left/right headset operation

Right ear operation in binaural mode



Answer an incoming call: double click any headset End the call: double click any headset Rejected call: press either earphone for about 2 second

Left/right headset operation

Call mode

Voice assistant Left headset operation

In addition to the call status, touch the left headset for 3 seconds to activate the voice assistant function (you need to support the connected smart device)



WARRANTY STATEMENT

The mentioned products specifications and information are for reference only and the content will also be updated on the web at any time without additional separate notice

The product attached to this document is guaranteed as follows: If the product is twelve (12) months from the date of purchase("Warranty Period"),under normal conditions of use due to quality defects damaged,can be repaired. Free repair; free replacement if the manufacturer confirms that it cannot be repaired; repaired or replaced product. Continue to enjoy the warranty during the remaining warranty period (the shortest not less than 30 days). Purchased by sale the ticket date shall prevail; if the purchase date cannot be determined, the warranty period shall be 13 (13) Monthly calculation.

If you apply for a warranty, please call the product service hotline first and execute it in the manner instructed by us. When applying for warranty, you need to provide an accurate, complete and clearly filled out valid sales invoice. The above guarantee does not apply to the following situations: 1.Exceeding the validity period of the three packs;

2.Altering the warranty card and product code does not match the product body; 3.Causes caused by misuse, abuse or improper transportation, use, maintenance or storage

obstacles or damage; 4. Failure or damage caused by force majeure (such as earthquake,war,disaster,etc.) or

accident bad; 5. The zipper and tower buckle are damaged due to excessive force;

6.Disconnection or tearing caused by excessive load;

7.Any damage caused by sharp objects; 8.Products with signs of burning of flooding:

9.Damage caused by unauthorized disassembly:

10. Aging, discoloration, abrasion, rupture and other losses that occur during the normal use of

11. If the original identification label of the product is changed or damaged, this guarantee will become invalid. The completeness and appearance of the product and accompanying materials are not within

the scope of the guarantee. You should check on the spot and raise objections to any discrepancies.

The above guarantees are all guarantees we make regarding the products, and are only applicable in mainland China. Nothing in this document affects consumer rights that cannot be excluded or restricted under the law profit.

FCC Warning

WARRANTY CARD

Username

Address

Date of purchase

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device. pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the

- following measures: Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver. Connect the equipment into an outlet on a circuit different from that to which the receiver is
- connected. Consult the dealer or an experienced radio/TV technician for help.
- The device has been evaluated to meet general RF exposure requirement. The device can be

used in portable exposure condition without restriction.







